
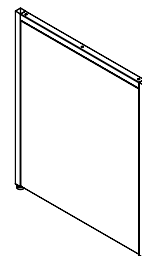
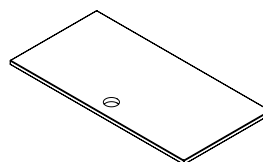
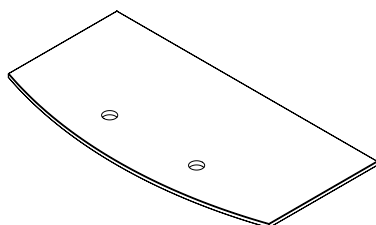


CARBON COLLECTION 105"x72" U-DESK ASSEMBLY INSTRUCTIONS


Congratulations on the purchase of your new *Signature Series* product!

COMPONENTS


A. 72"x24" Table Top*1pc B. 72"x36" Table Top*1pc C. 48"x24" Table Top*1pc D. 24" End Panel*1pc

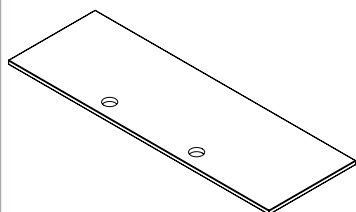


E. 30" End Panel*1pc

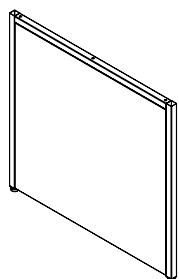


F. 30" Pedestal*1pc

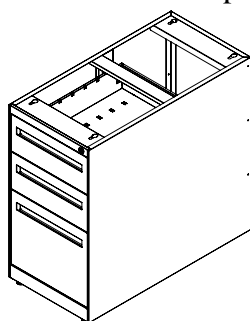


G. 24" Pedestal*1pc

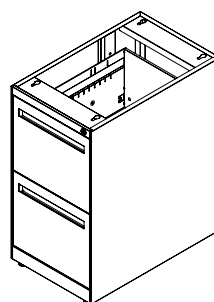


H. Modesty Panel*1pc

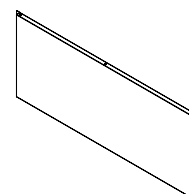

I. Modesty Panel*2pcs

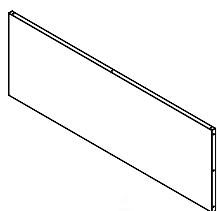

J. Connecting Plate*2pcs




HARDWARE

(1).Self-tapping
Screw 4*10mm-18pcs



(2).Self-tapping
Screw #10*3/4"-25pcs



(3).Screw
M6*40mm-6pcs



(4).M6 Washer-6pcs




(5).Shoulder Rivet-8pcs




(6).Flat Head Screw
#10*1" -8pcs



U Desk Left Return follow page 2

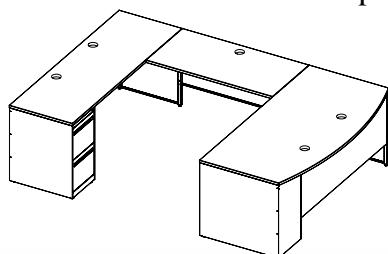


U Desk Right Return follow page 5

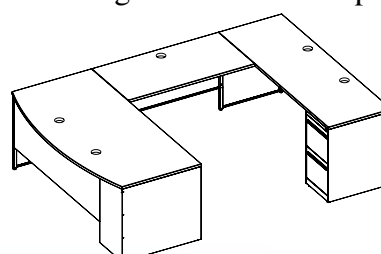

INSTRUCTIONS FOR 105"x72" 13912 U DESK
LEFT RETURN


Congratulations on the purchase of your new *Signature Series* product!

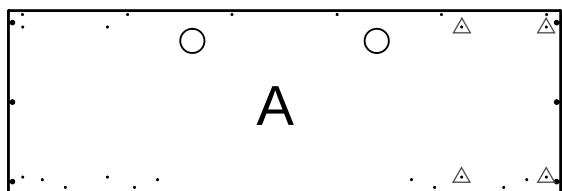


Front

△ Shoulder Rivet holes


STEP 3

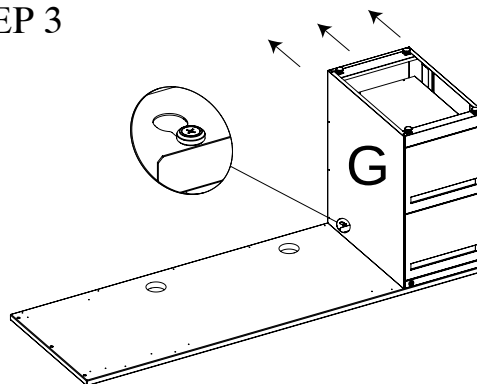


STEP 5

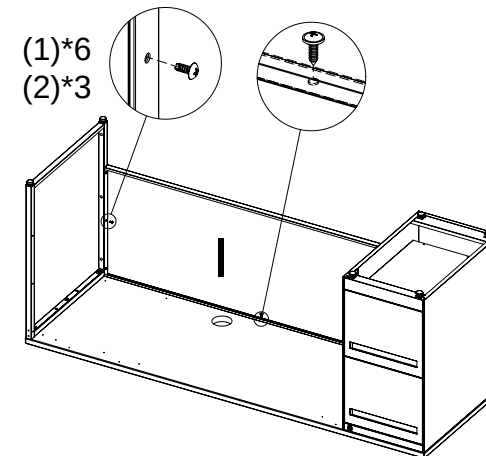

STEP 4

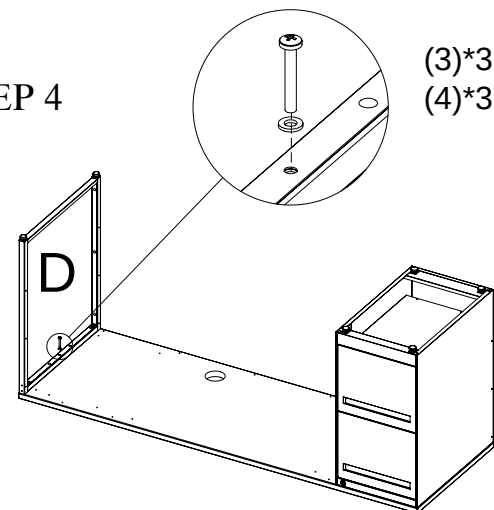


STEP 6

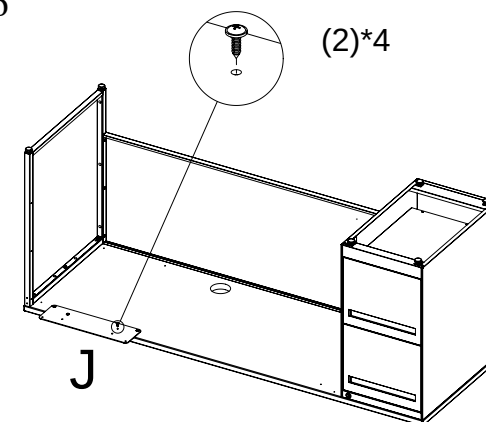

INSTRUCTIONS FOR 105"x72" 13912 U DESK
LEFT RETURN


Congratulations on the purchase of your new *Signature Series* product!

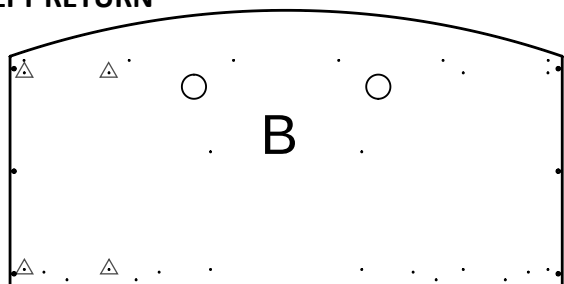


Front

△ Shoulder Rivet holes

STEP 9

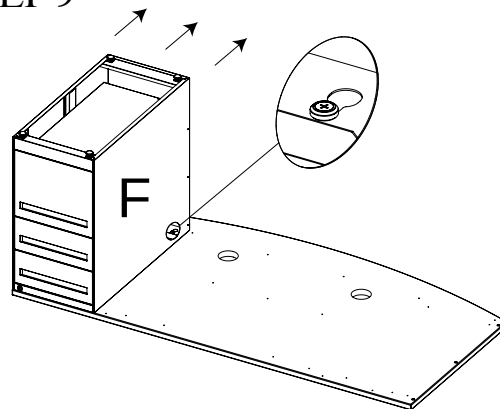


STEP 11

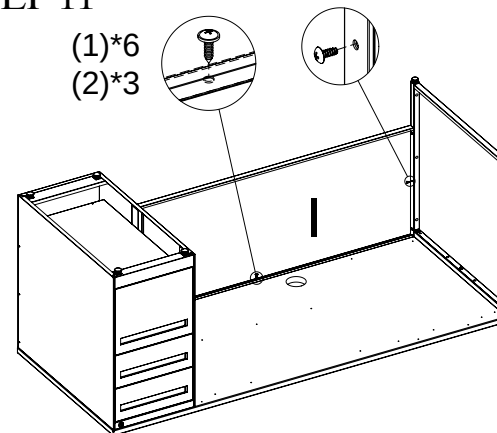


(1)*6
(2)*3

STEP 7

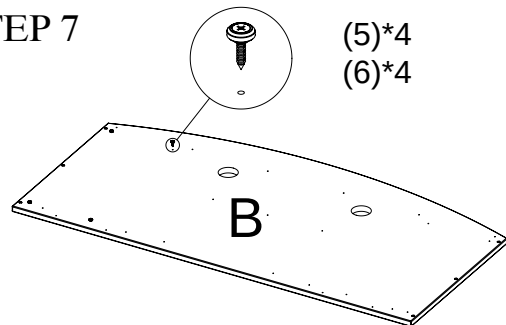


(5)*4
(6)*4

STEP 10

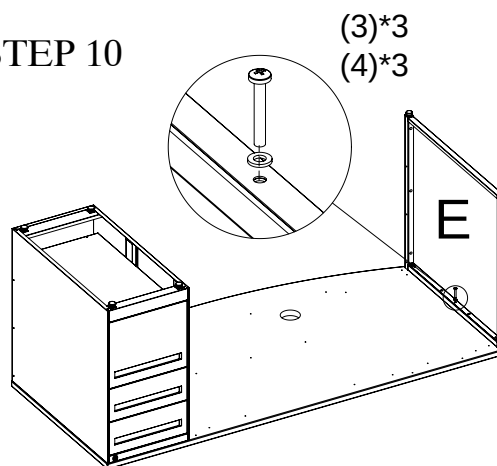

(3)*3
(4)*3

STEP 12

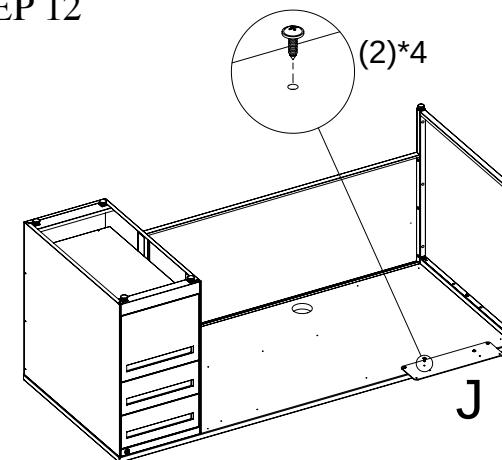


(2)*4


INSTRUCTIONS FOR 105"x72" 13912 U DESK
LEFT RETURN

Congratulations on the purchase of your new *Signature Series* product!


STEP 13

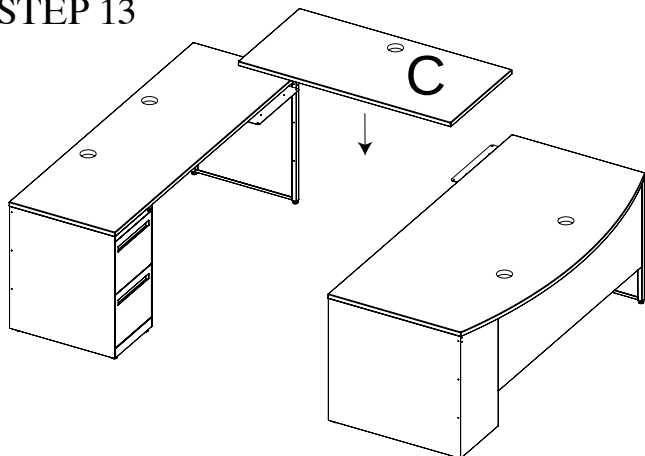


STEP 15

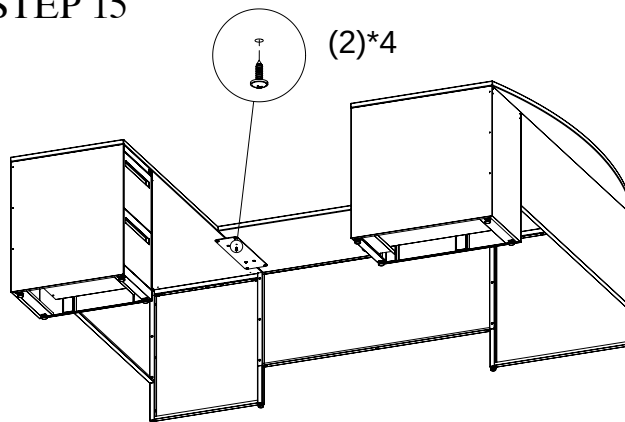


FINISH

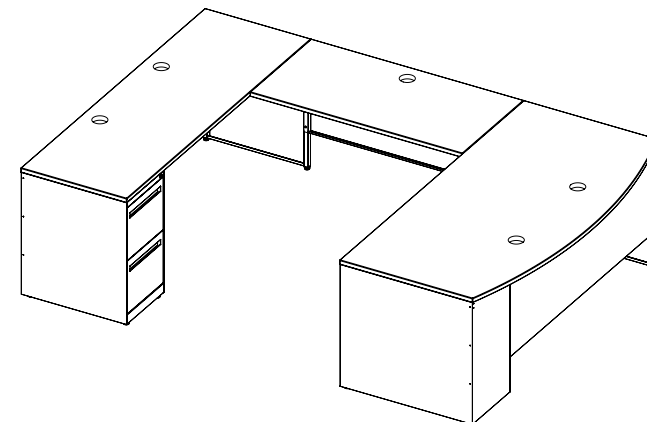

STEP 14

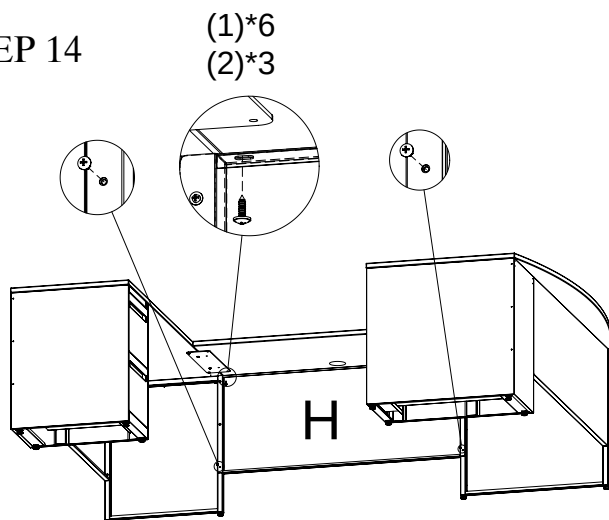


STEP 16

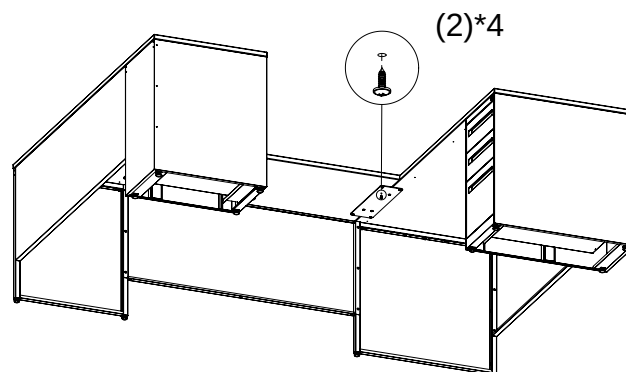

INSTRUCTIONS FOR 105"x72" 13912 U DESK
RIGHT RETURN


Congratulations on the purchase of your new *Signature Series* product!

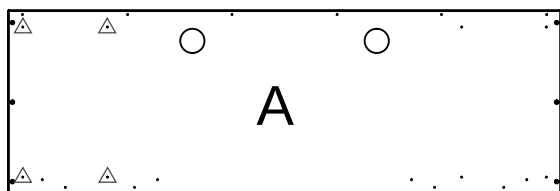


Front

△ Shoulder Rivet holes


STEP 3

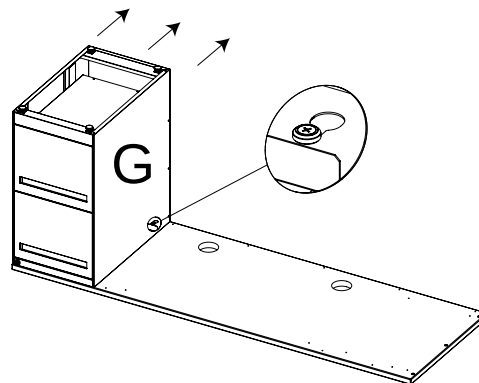


STEP 5

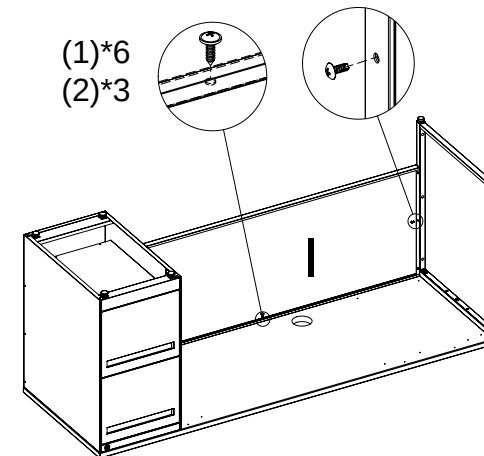


STEP 4

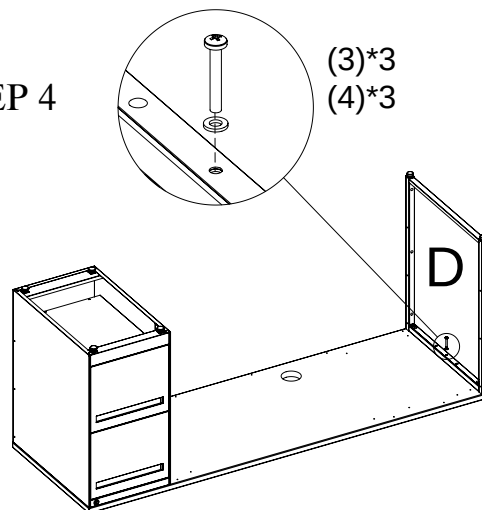


STEP 6

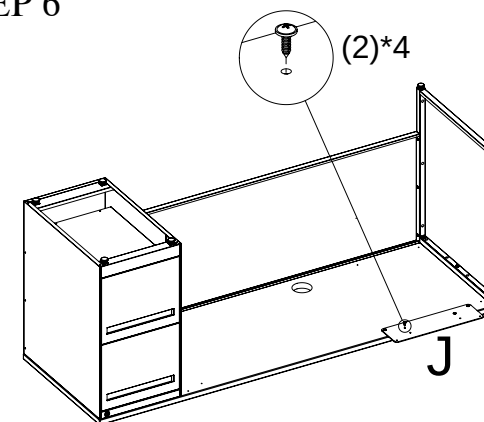

STEP 1

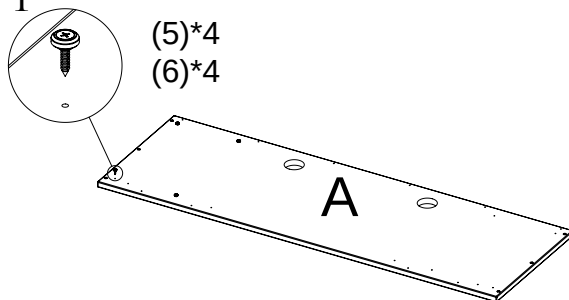


STEP 2

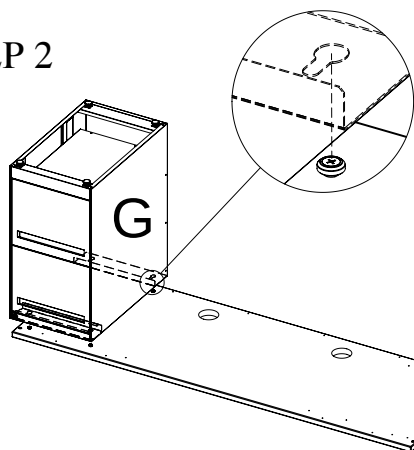

INSTRUCTIONS FOR 105"x72" 13912 U DESK
RIGHT RETURN


Congratulations on the purchase of your new *Signature Series* product!

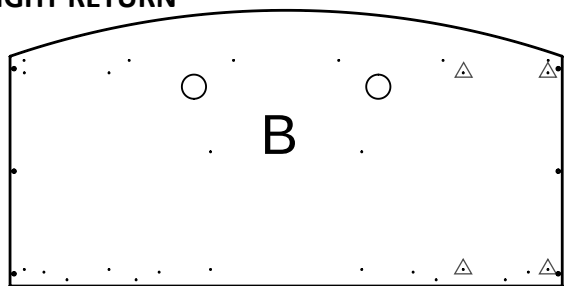


Front

△ Shoulder Rivet holes


STEP 9

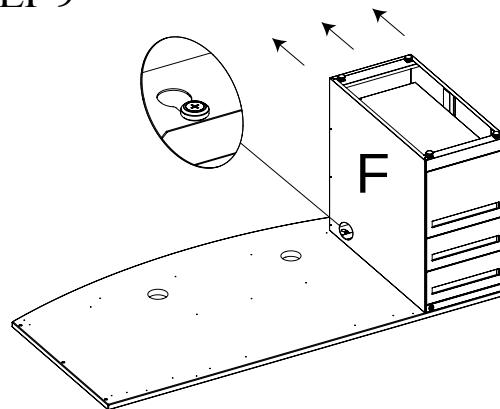


STEP 11

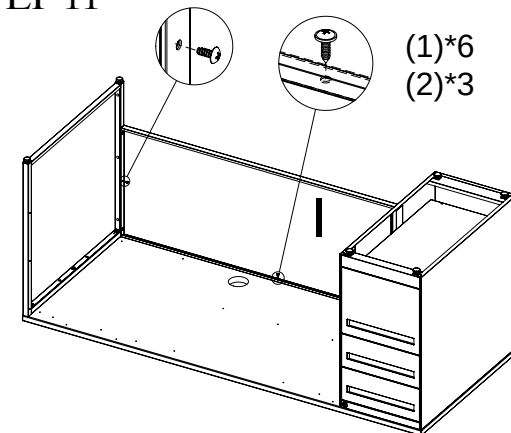


STEP 7

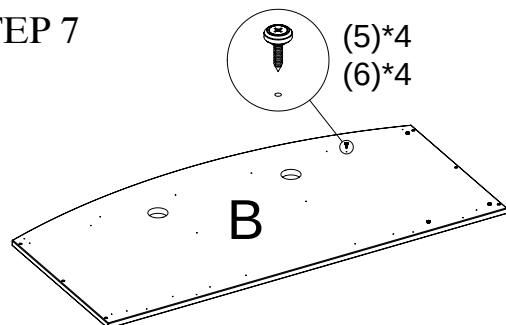

STEP 10

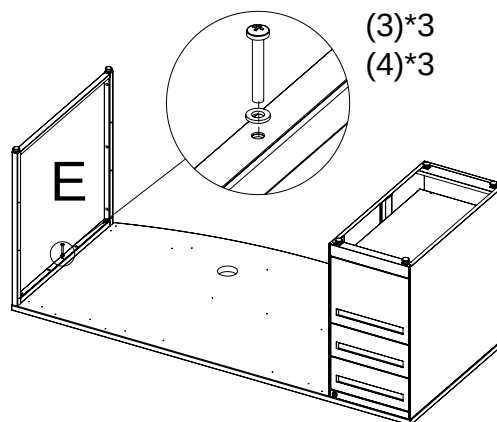


STEP 12

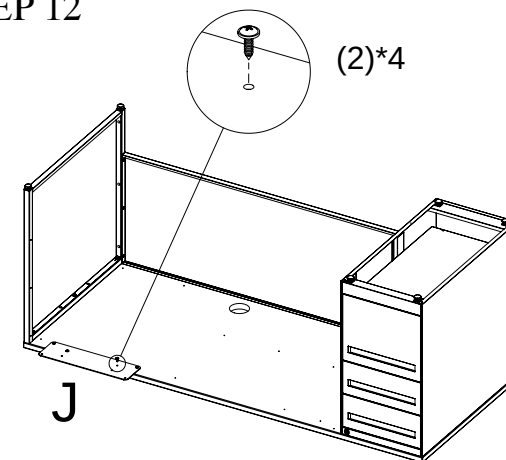


INSTRUCTIONS FOR 105"x72" 13912 U DESK RIGHT RETURN
Congratulations on the purchase of your new *Signature Series* product!


STEP 13

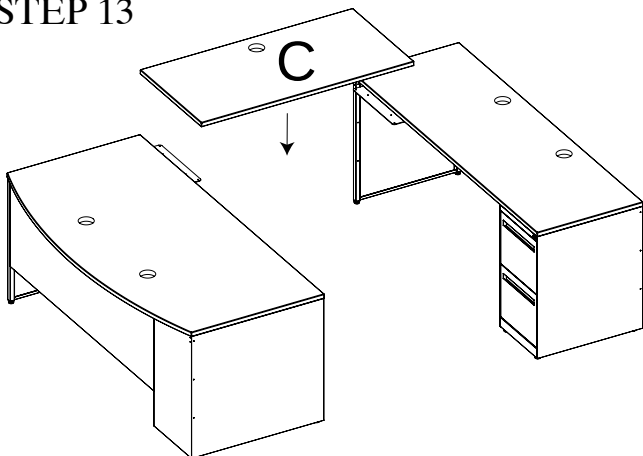


STEP 15

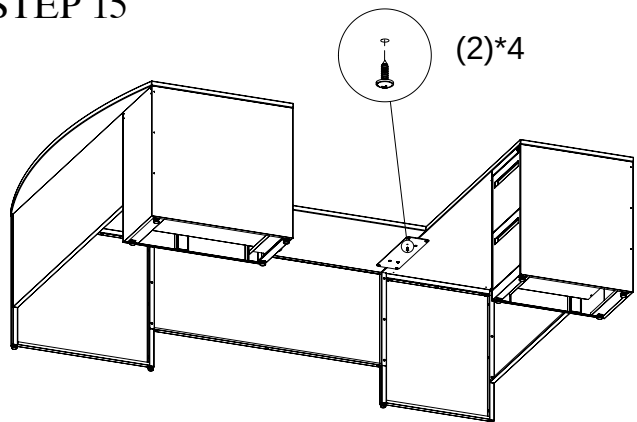

FINISH

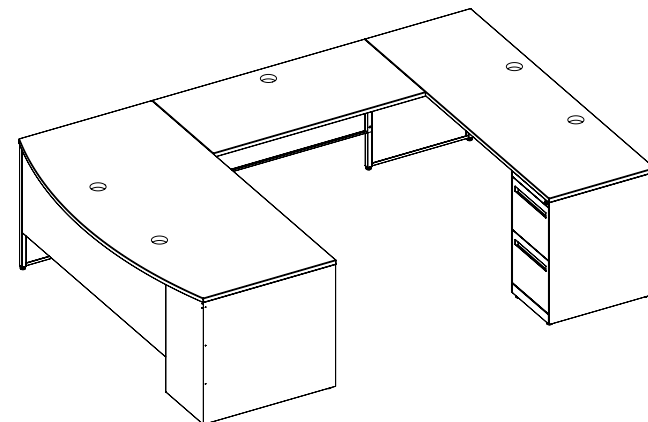

STEP 14

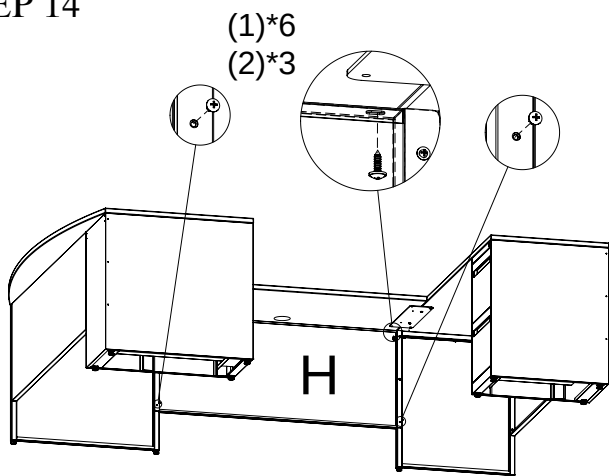

STEP 16

