
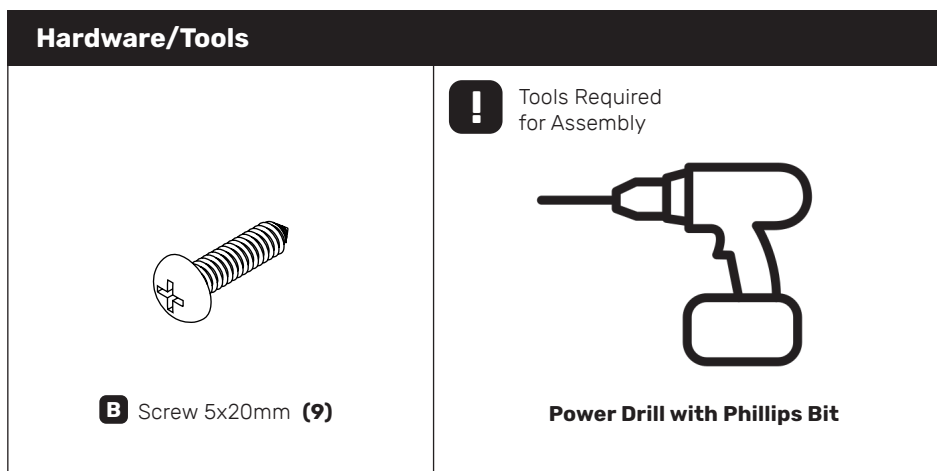


Assembly Instructions

3 Pin Desk Base

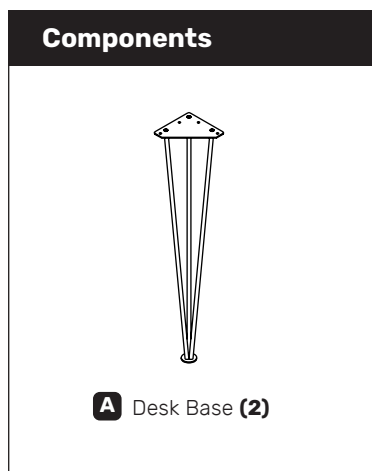

- Using two pilot holes in the top locate Leg (A). Using drill and included Screws (B) secure leg to work surface. Pre-drilling is not required.

Repeat for each Leg (A).

