


Assembly Instructions
Saw Horse Base

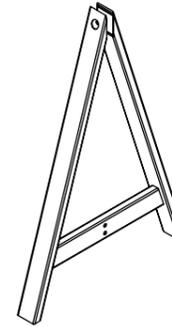


Components



A Base A (2)




B Cross Bar (1)

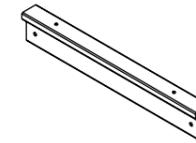


C Supporting Bar (1)


Hardware/Tools

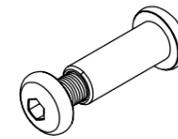

D Allen Screw
M8x21mm (3)

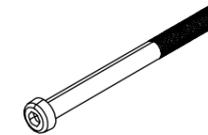

E Allen Screw
M6x105mm (2)



F Allen Screw
M6x30mm (5)




G Allen Wrench 4mm (1)



H Allen Wrench 5mm (2)

! Tools Required
for Assembly



Phillips Screwdriver

Do not use power tools to assemble

