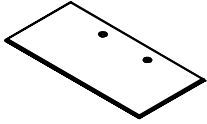


Hardware List (included in CK172FB1)

	6 PCS Machine Bolts(1-1/4")		2 PCS Metal Grommet
	2 PCS Keys For File Drawer Lock		2 PCS Long(1-1/4") Flat Head Wood Screws
	4 PCS Wood Dowels (ø8x25mm)		13 PCS Short (3/4") Flat Head Wood Screws
	CK→Handle		C→Handle




CK172FT Parts List

E	DESK TOP	1 PC
		

CK172FB2 Parts List

B	PEDESTAL	1 PC
		


CK172FB1 Parts List

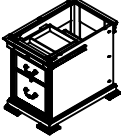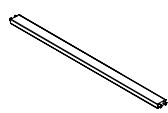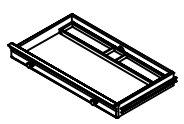A	PEDESTAL	1 PC	C	BACKPANEL	1 PC	D	CROSS BAR	1 PC	F	DROP FRONT CENTER DRAWER	1 PC
											


Notes: Need two people to assemble.

Instructions:



- ① Move the pedestals ① ② to the desired location , insert and tighten **machine bolts (1-1/4")**(6 PCS) to connect **backpanel ③** to the pedestals ① ② .
- ② Insert center **Cross Bar④** to the pedestals ① ② , tighten with **(1-1/4") flat head wood screws**(2 PCS).

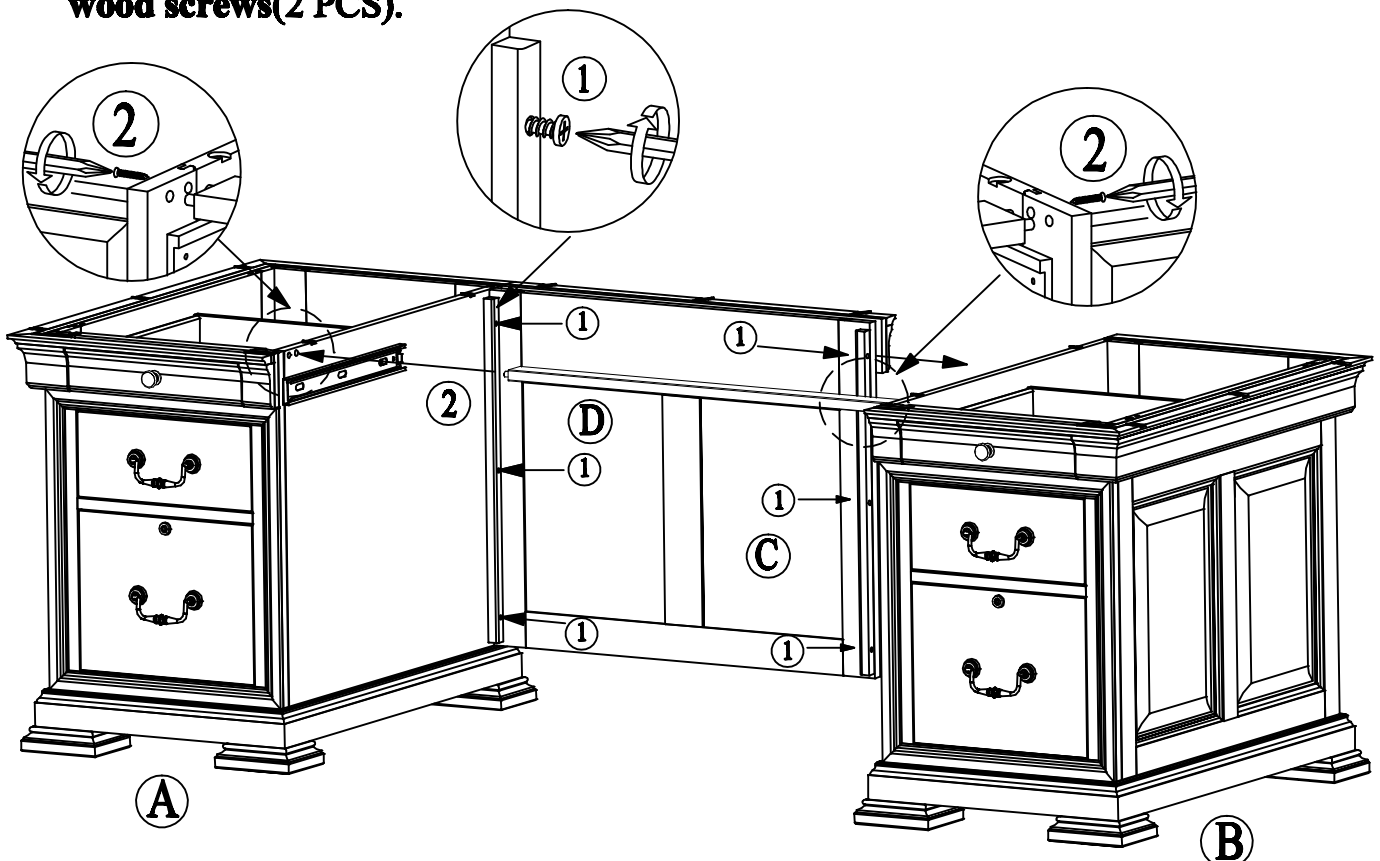



- ③ Insert two wood dowels(4 PCS) in each pedestal ①②.
- ④ Loosen the screw of metal figure 8 (4 PCS) to adjust its direction.
- ⑤ Loosen the screw of oval metal plate (9 PCS) to adjust its direction .

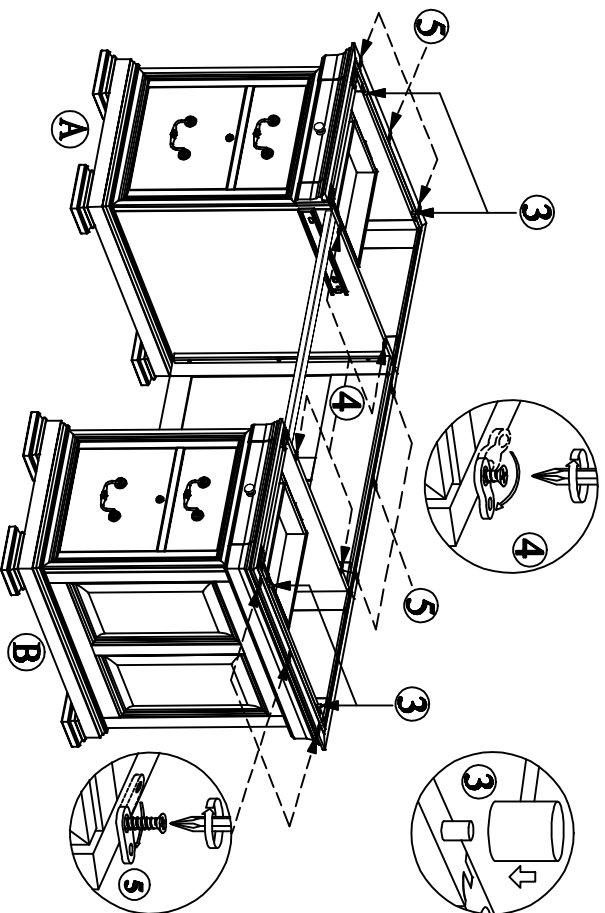

- ⑥ Insert short (3/4") flat head wood screws (13 PCS) through metal figure 8 and oval metal plate to connect desk top ⑦ and pedestals.

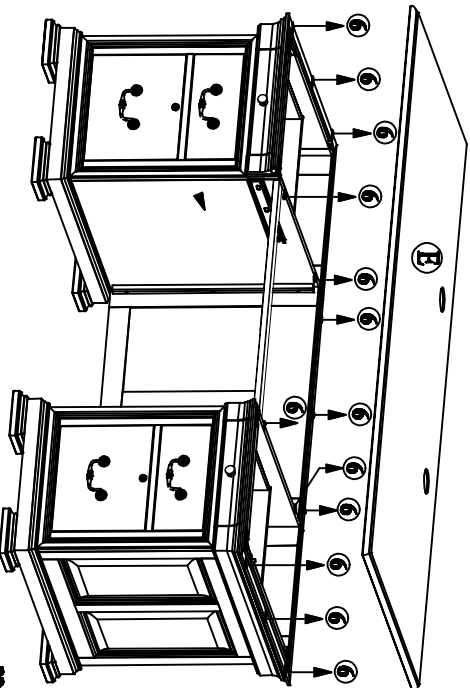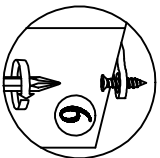

- ⑦ Install the Drop Front center Drawer ⑥ to place .
- Important:**
(Be sure to move the ball bearing retainer all the way to the front of the glide and carefully slide the rails into the glides and ball bearing retainer.)

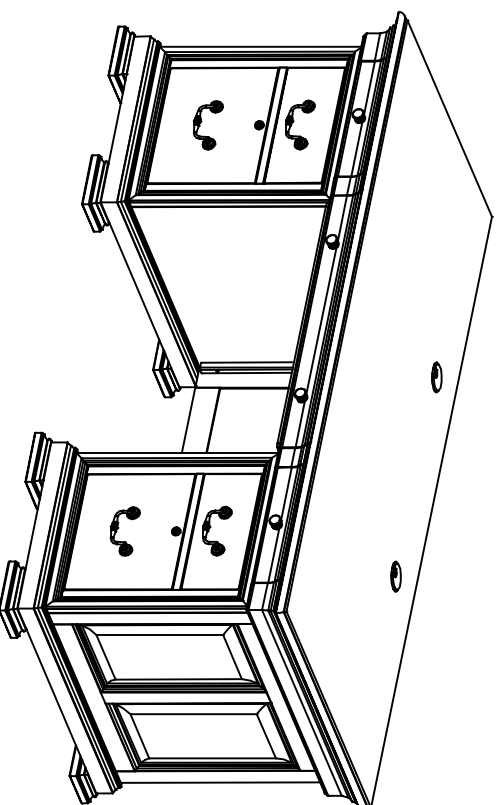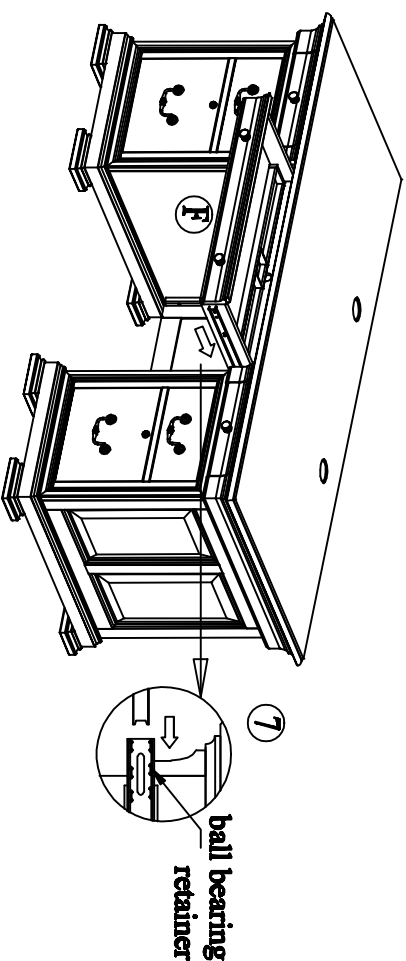

Assembly is now complete.