












Hardware List (included in GW148FB)

	6 PCS Machine Bolts(1-1/4")		3 PCS (1-1/4") Flat Head Wood Screws
	4 PCS Wood Dowels (ø8x25mm)		6 PCS (3/4") Flat Head Wood Screws
	2 PCS Keys For File Drawer Lock		

GW148FB Parts List


A	PEDESTAL	1 PC	B	SIDE PANEL	1 PC	C	BACKPANEL	1 PC
								
D	CROSS BAR	1 PC	F	DROP FRONT CENTER DRAWER	1 PC	G	STRETCHER	1 PC
								

Notes: Need two people to assemble.

IMPORTANT NOTE:


Please keep all hardware parts out of the reach of children.

GW148FT Parts List


E	DESK TOP	1 PC
		

Instructions:


1. Move the pedestal (A) and side panel (B) to the desired location.
2. Align the back panel (C) and stretcher (G) to pedestal (A) and side panel (B), insert and tighten (1-1/4") Machine Bolts (6PCS).
3. Using a mallet, carefully insert center cross bar (D) to the pedestal (A) and side panel (B), tighten (1-1/4") flat head wood screws(2 PCS).

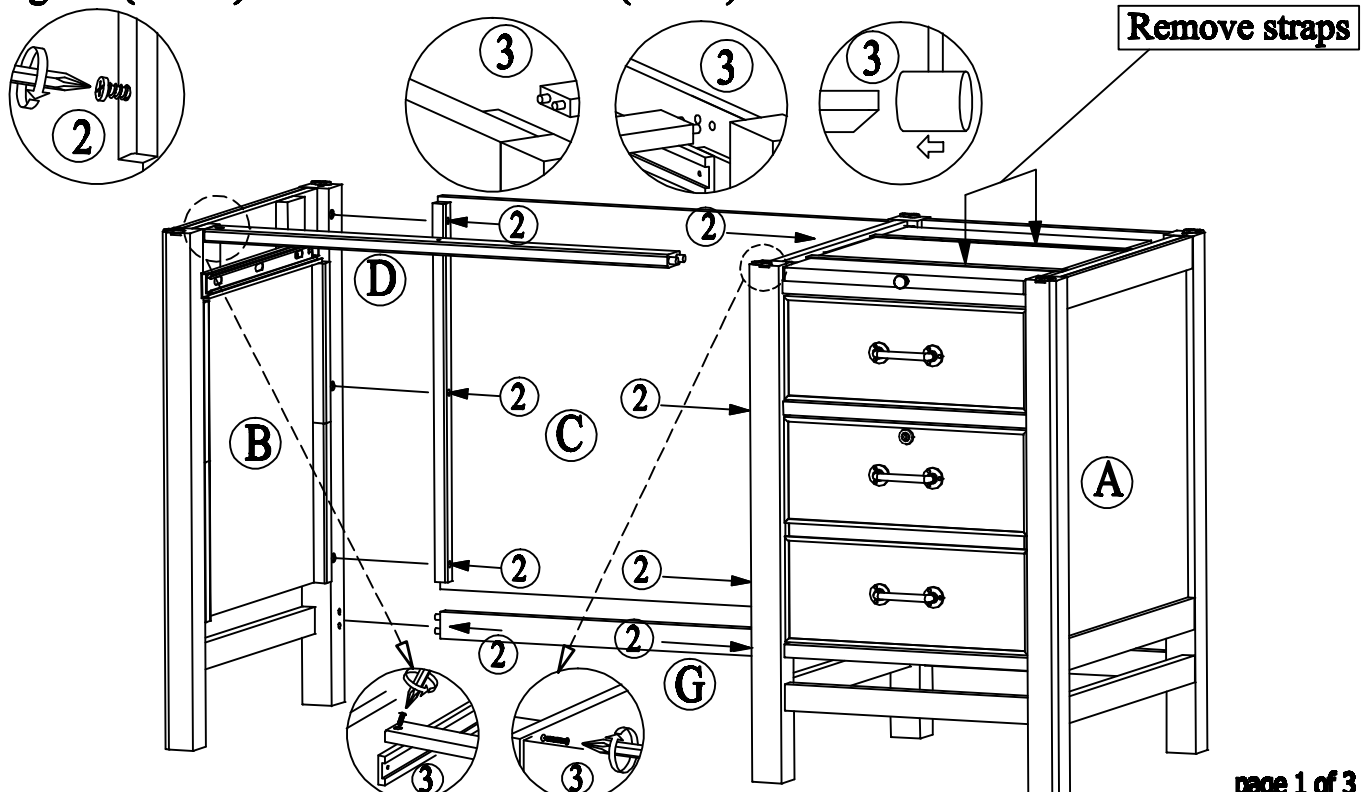

4. Insert **wood dowels** (4 PCS) two in pedestal (A) and two in side panel (B) .
 5. Loosen the screw to adjust **metal figure 8** (6 PCS) of its direction of the panel and re-screw.

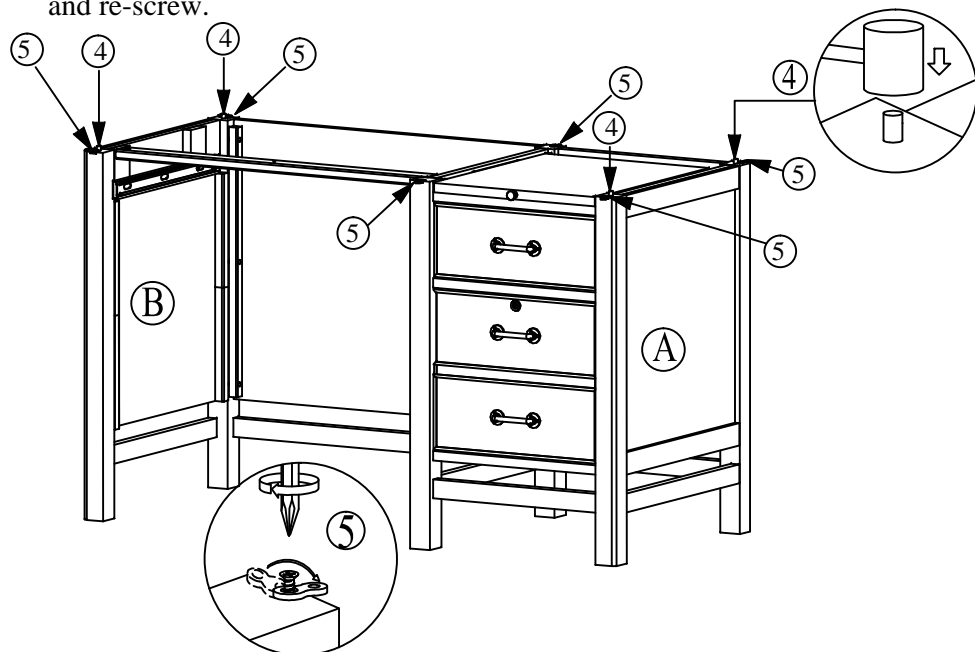



6. Insert (3/4") **flat head wood screws** (6 PCS) through **metal figure 8** to connect desk top (E) to pedestal (A) and side panel (B) .
 Use (1-1/4") **flat head wood screws** (1 PC) to connect cross bar (D) to desk top (E) .

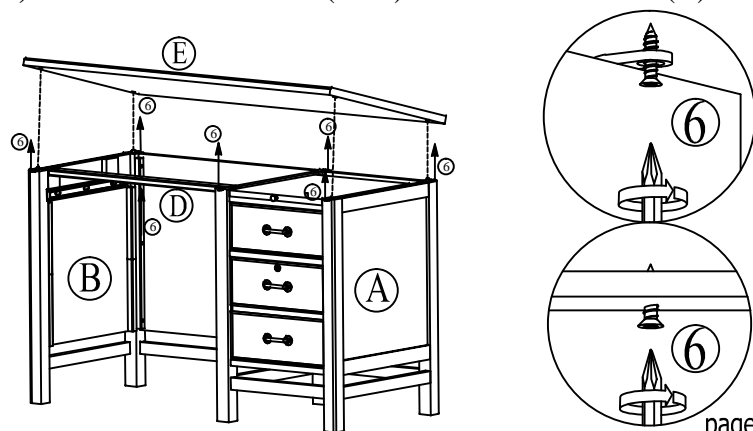

7. Install the Drop Front center Drawer (F) to place .

Important:

(Be sure to move the ball bearing retainer all the way to the front of the glide and carefully slide the rails into the glides and ball bearing retainer.)

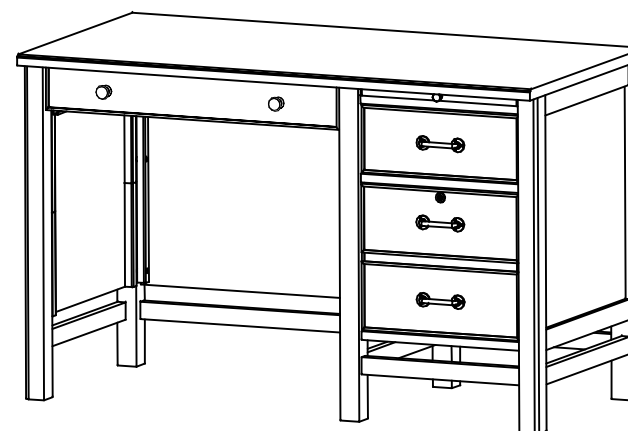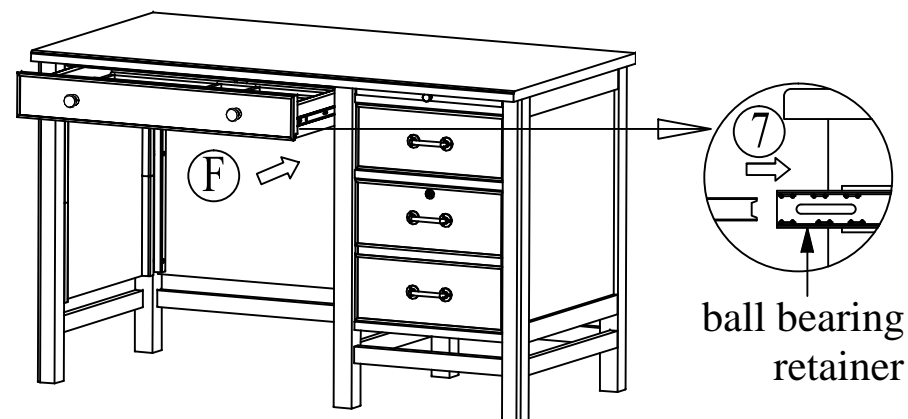

Assembly is now complete.