







PARTS LIST

	29PCS Machine Bolts (1-1/4")		2 PCS Metal Grommet
	8 PCS Long(1-1/4") Flat Head Wood Screws		2 PCS Keys For File Drawer Lock
	20 PCS Short (1") Flat Head Wood Screws		6 PCS Wood Dowels (ø8x25mm)


PARTS LIST

PACKAGE NO.	PART NO.	DESCRIPTION	QTY	PACKAGE NO.	PART NO.	DESCRIPTION	QTY
MAIN DESK	A	R1 DESK TOP	1 PC	RETURN DESK	K	R2 DESK TOP	1 PC
	B	R1B PEDESTAL	1 PC		L	R2B PEDESTAL	1 PC
	C	CENTER DRAWER	1 PC		M	KEYBOARD PULLOUT	1 PC
	D	PENCIL TRAY	1 PC		N	CROSS BAR	1 PC
	E	RHS GLIDE PANEL	1 PC		O	BACK PANEL	1 PC
	F	BACK PANEL	1 PC		P	L-SHAPED LHS SHELF	1 PC
	G	FALSE B BOX	1 PC				
	H	RSF SIDE PANEL	1 PC				
	I	CROSS BAR	1 PC				
	J	L-SHAPED RHS SHELF	1 PC				

Thank you for purchasing Winners Only Inc. product. This product has been designed for easy assembly and constructed for durability. Please take the time to read and follow the assembly instructions. If a part or hardware is missing or you have any difficulties in assembling this product, please contact us.

IMPORTANT NOTE :

Please keep all hardware parts out of the reach of children.

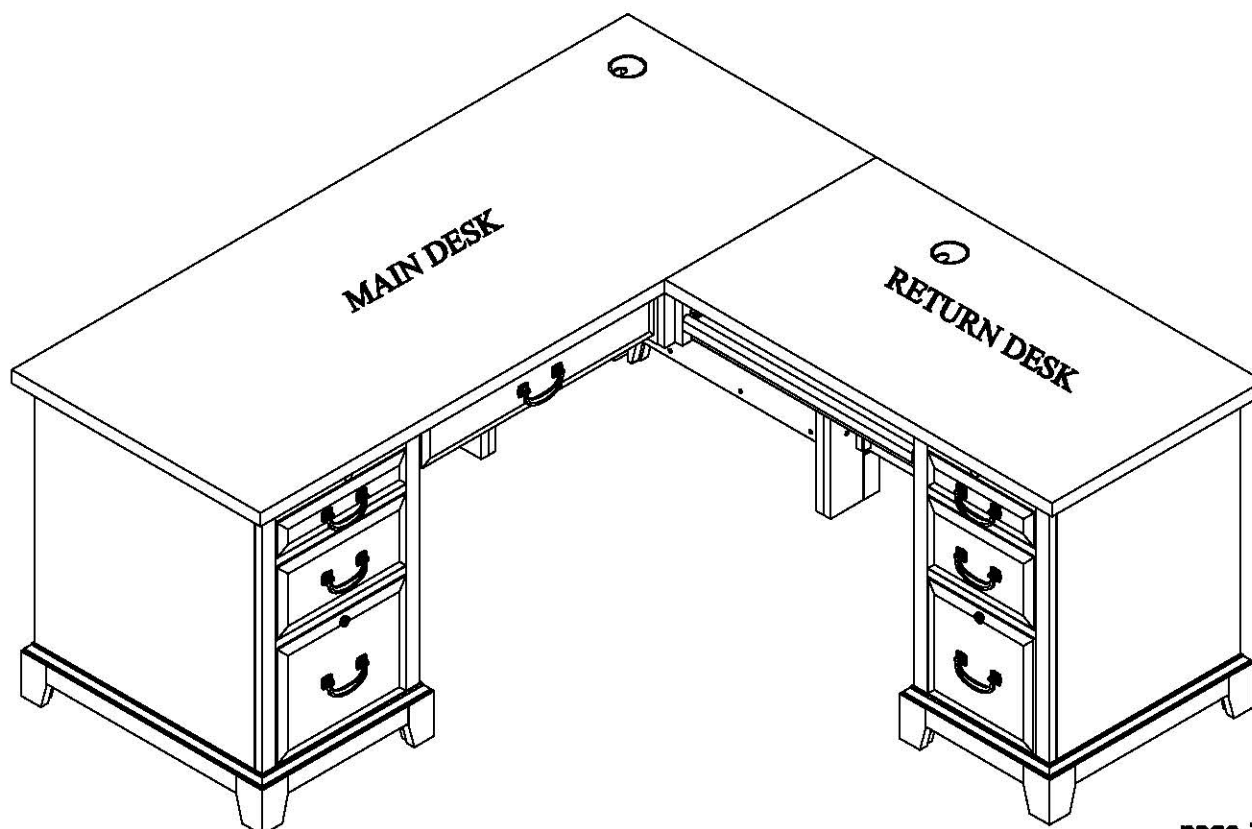

Notes: Need two people to assemble.

Instructions:

Chart 1

Step 1. Align the (B) & (G) to the (F), insert and tighten with 1-1/4" machine bolts (6PCS).

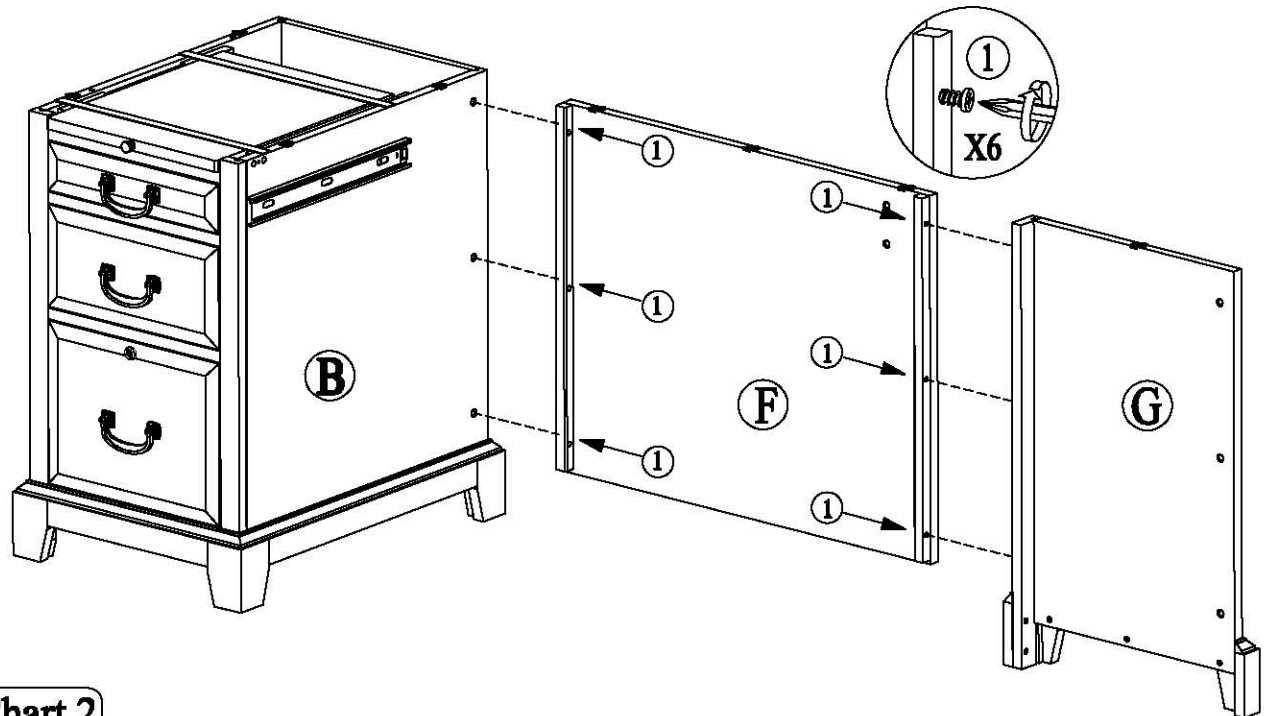


Chart 2

Step 2. Align the (H) to the (G) and the (J) to the (H), insert and tighten with 1-1/4" machine bolts (6PCS).

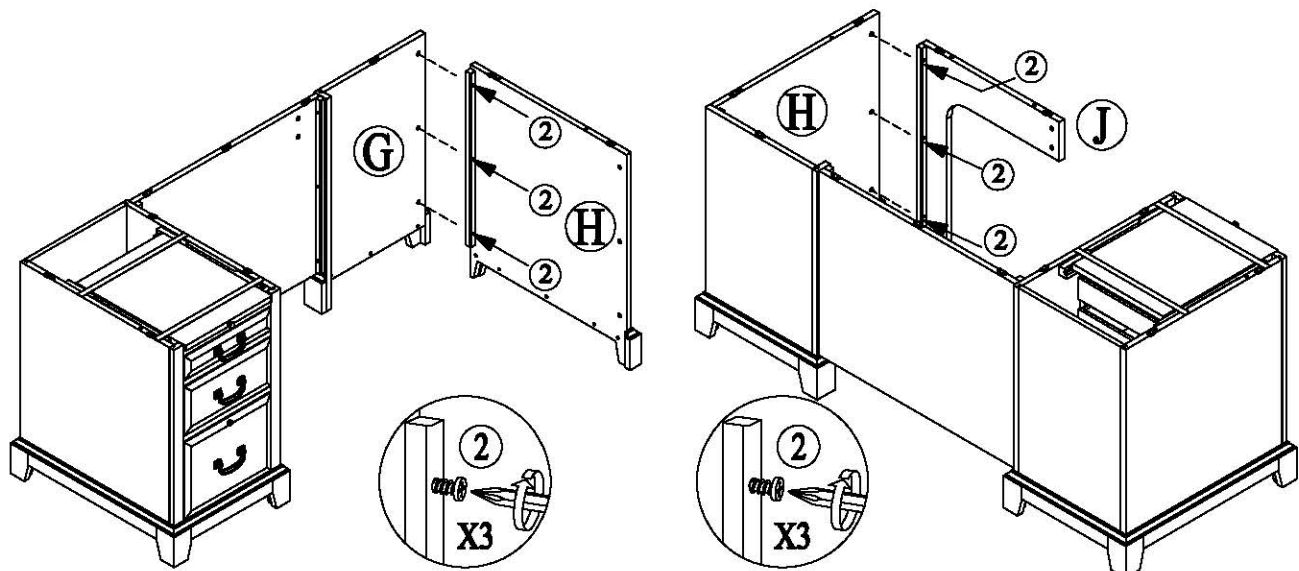



Chart 3

Step 3. Use 1-1/4" machine bolts (4PCS) to connect (E) to (J) and (F).

Step 4. Insert center Cross Bar (I) to the (B) and (E), tighten with 1-1/4" flat head wood screws (2 PCS) to (I) from (B) side and from (E) side.

Step 5. Hammer the wood dowels (4 PCS) on the (B) and (H) .

Step 6. Loosen the screw to adjust metal figure 8 (12 PCS) of its direction of the panel.

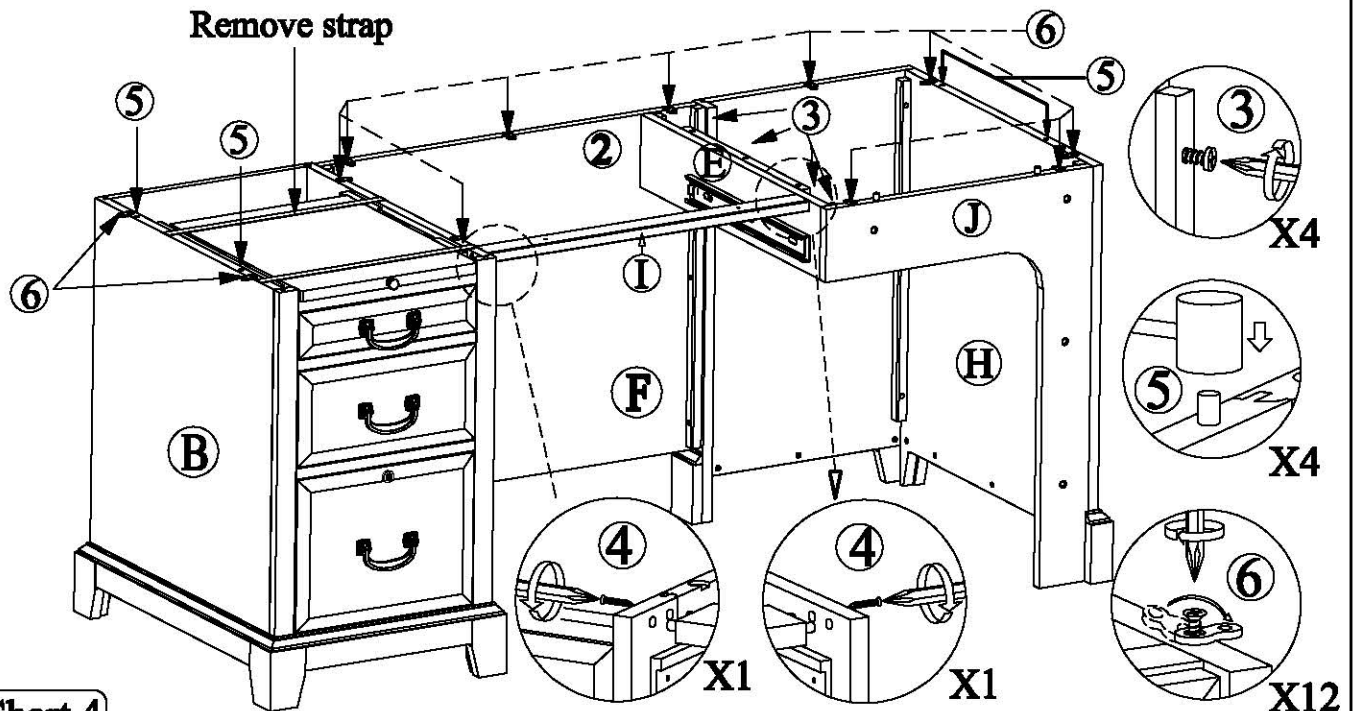
Chart 4

Step 7. Insert short (1") flat head wood screws (12 PCS) through metal figure 8 to connect desk top (A) and pedestals.

Step 8. Use 1-1/4" machine bolts (3 PCS) to connect the (E) and (A).

Step 9. Use long(1-1/4")flat head wood screws (4 PCS) to connect (I) to desk top (A).

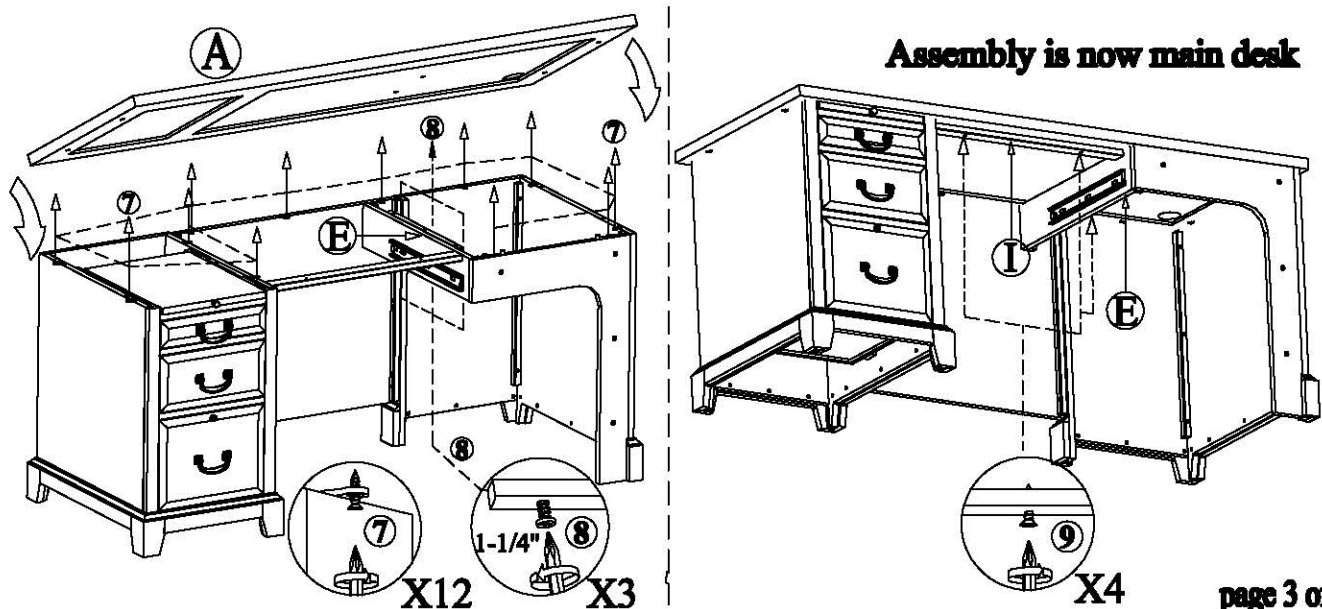
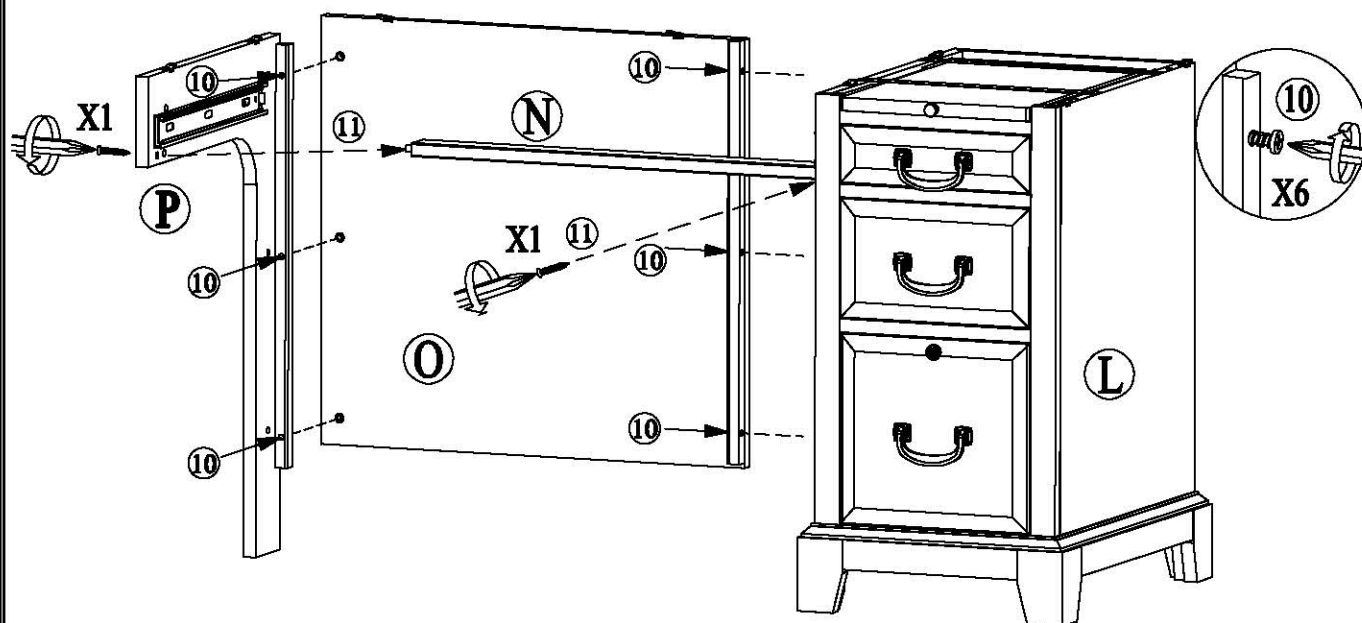


Chart 5

Step 10. Align the (L) & (P) to the (O), insert and tighten with 1-1/4" machine bolts (6PCS).

Step 11. Insert center Cross Bar (N) to the (P) and (L), tighten with 1-1/4" flat head wood screws (2 PCS).


Chart 6

Step 12. Assemble the Return Desk to the Main Desk by using four 1-1/4" machine bolts (4PCS) to attach connecting board.

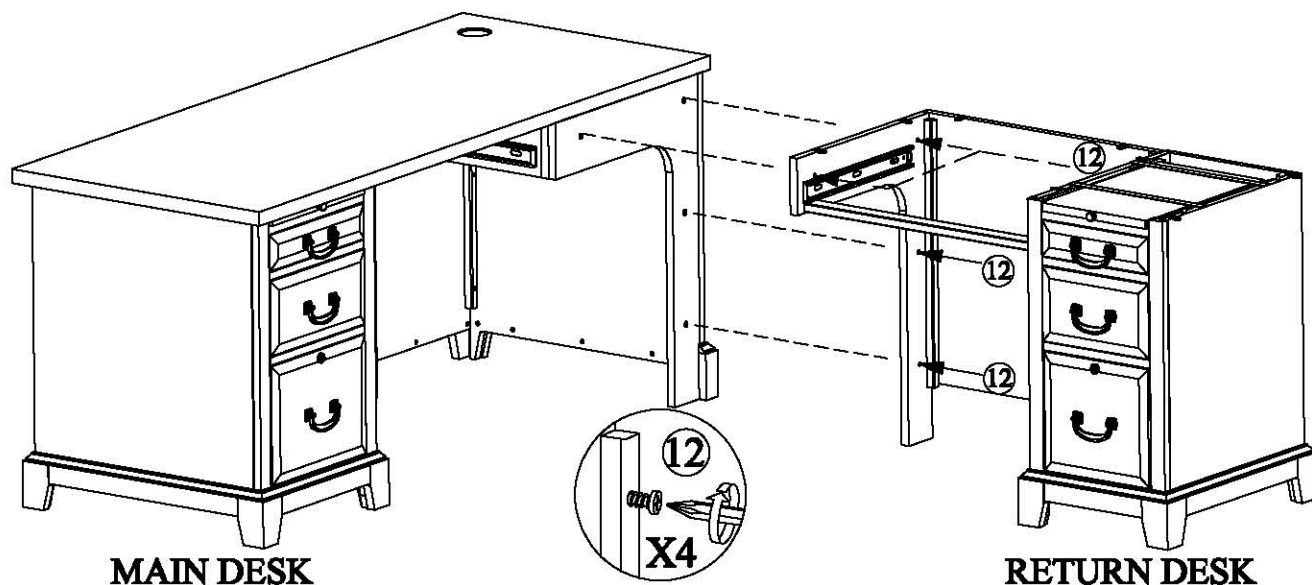
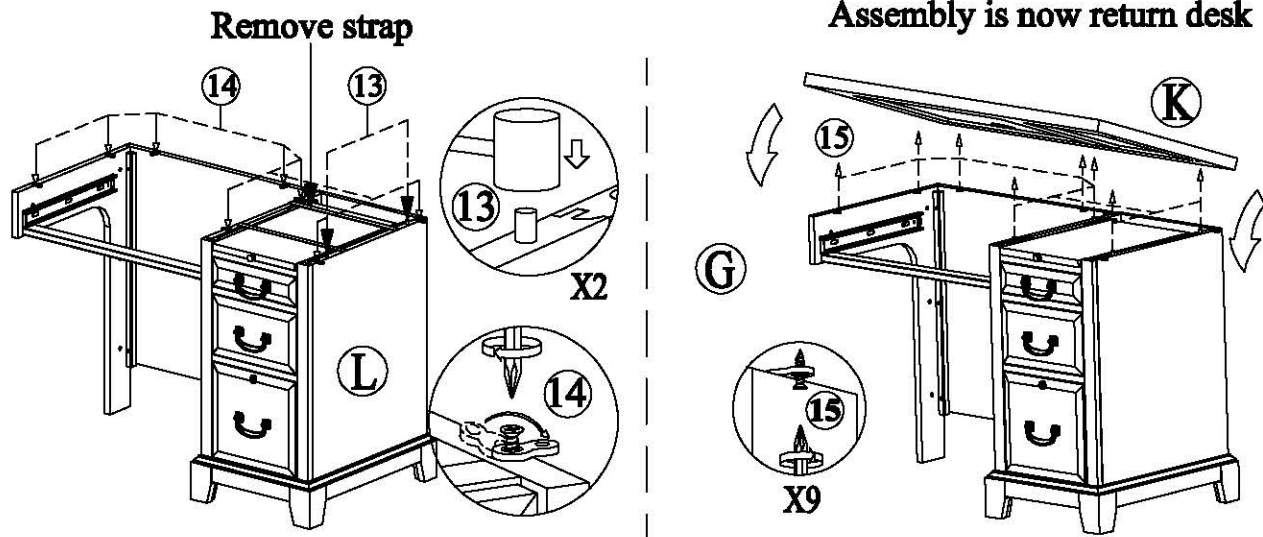


Chart 7
Hardware List:

Step 13. Hammer the **wood dowels** (2 PCS) on the (L) .

Step 14. Loosen the screw to adjust **metal figure 8** (8 PCS) of its direction of the panel.

Step 15. Insert **short (1") flat head wood screws** (8 PCS) through metal figure 8 to connect desk top (K) and pedestals.



Chart 8

Step 16. Insert the two Grommets on top of the Main Desk and Return Desk.

Step 17. Install the (C) and (M) to place .

Important:

(Be sure to move the ball bearing retainer all the way to the front of the glide and carefully slide the rails into the glides and ball bearing retainer.)

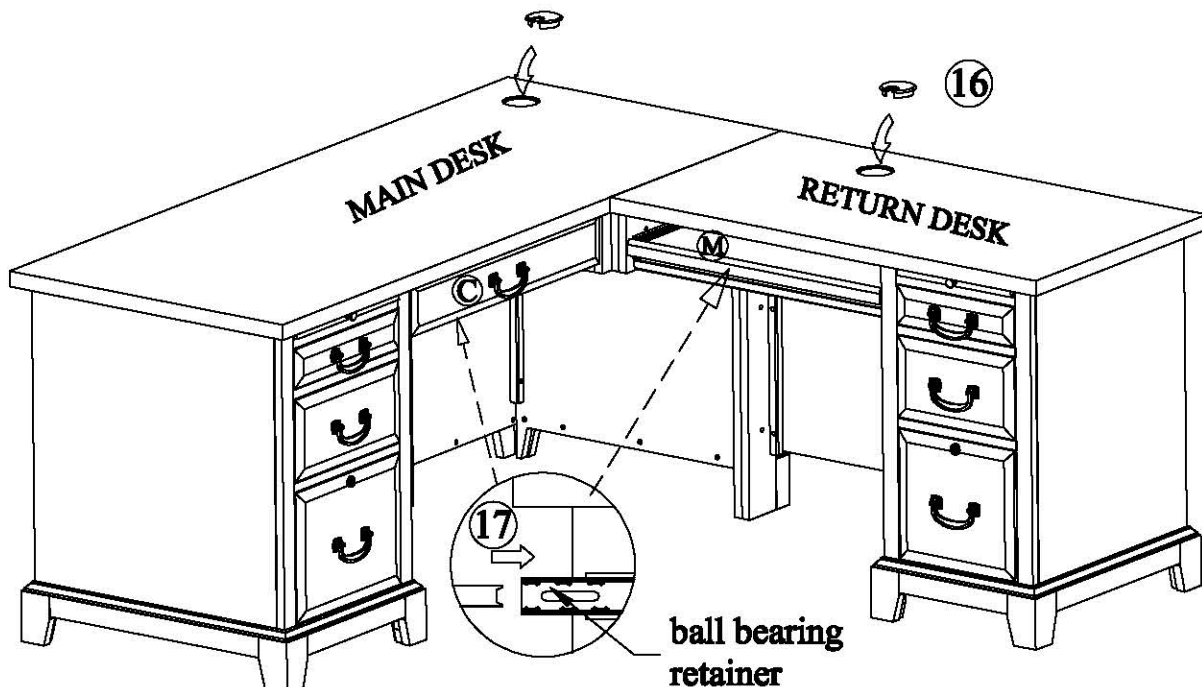

Assembly is now complete