













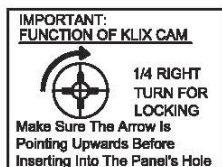
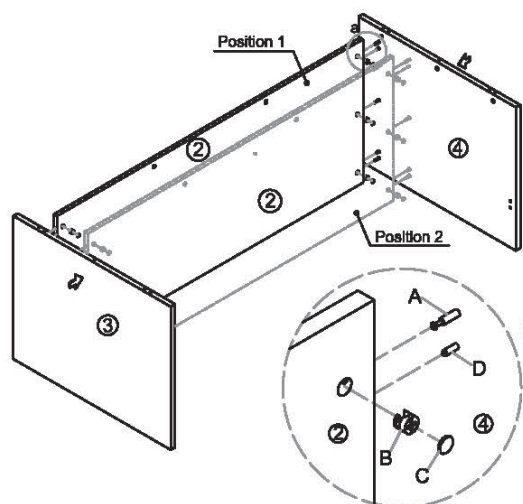



Congratulations on the purchase of your new *Efficient* desk!

TUN010CL	TUN011KC	C	TUN02B	TUN021AG	TUN013LB	TUN016SC	TUN016BG	I	J	K	L	TUN019IB	N	O
														
Cam lock 24Pcs+1Pcs(spare)	Klix Cam 24Pcs+1Pcs(spare)	Cam Cover 24Pcs+1Pcs(spare)	Dowel 17Pcs+1Pcs(spare)	Adjustable Glide 8Pcs	L-Bracket 8Pcs	Screw#4"x5/8" (134Pcs+1Pcs(spare)	60mm Black Grommet 3Pcs	Cover 14Pcs+1Pcs(spare)	Cover 8Pcs+1Pcs(spare)	Screw#10"x40 5Pcs	Screws 55Set	I-Bracket 75Set	L-Bracket 1Pcs	Screws 55Set


STEP 1








STEP 2

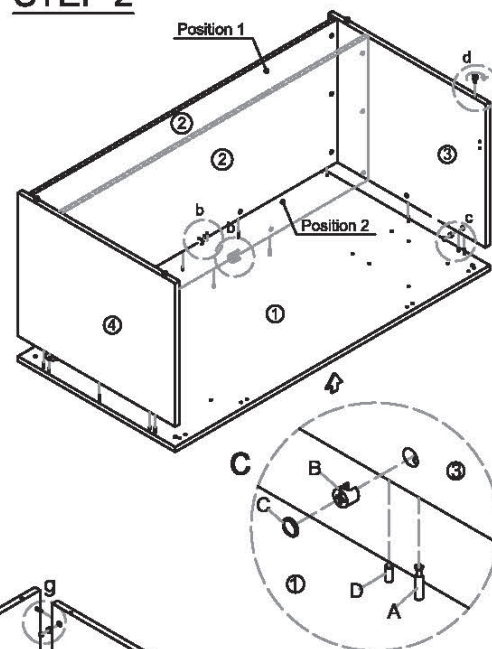

STEP 3

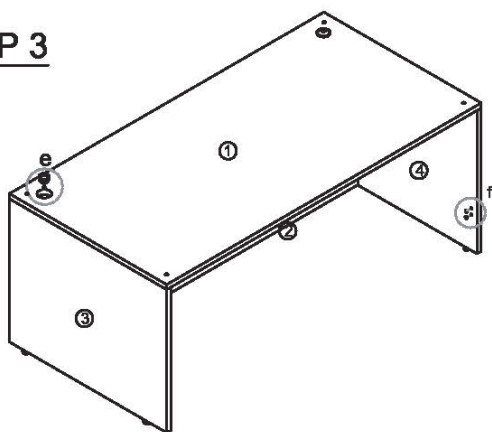



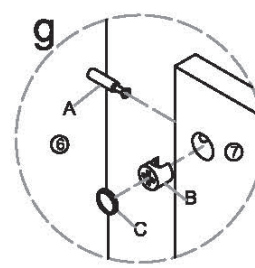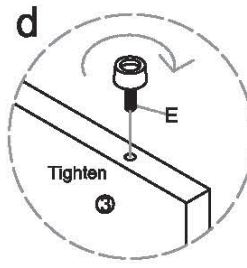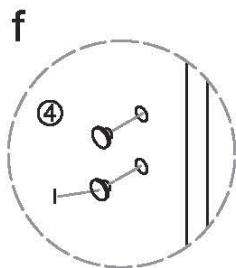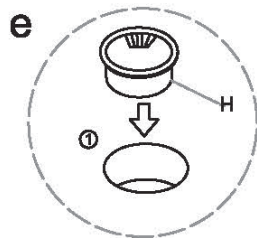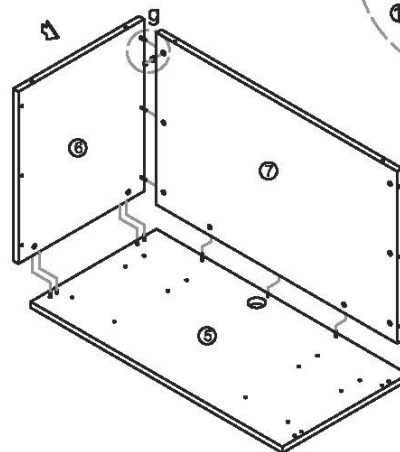












STEP 4




IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children


GLAZED RECEPTION DESK

TUN010CL	TUN011KC	C	TUN026	TUN021AG	TUN013LB	TUN018SC	TUN018BG	I	J	K	L	TUN019IB	N	O
														
Cam lock 24Pos+1Pos(spare)	Kix Cam 24Pos+1Pos(spare)	Cam Cover 24Pos+1Pos(spare)	Dowel 17Pos+1Pos(spare)	Adjustable Glide 8Pos	8Hole L-Bracket 8Pos	Screw #4x5/8 134Pos+1Pos(spare)	80mm Black Grommet 3Pos	Cover 14Pos+1Pos(spare)	Cover 8Pos+1Pos(spare)	Screw #10x40 5Pos	Screws 55Set	L-Bracket 75Set	L-Bracket 1Pos	Screws 55Set


STEP 5

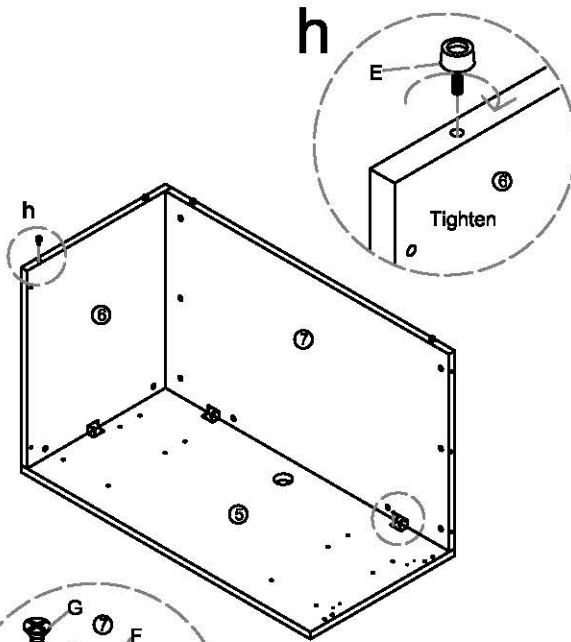


STEP 6

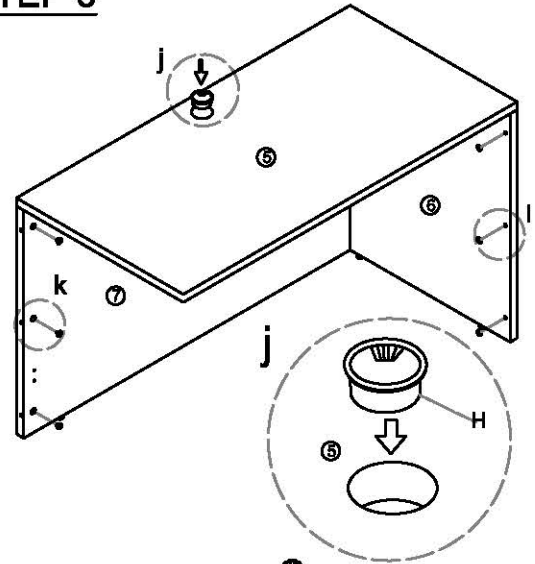

STEP 7

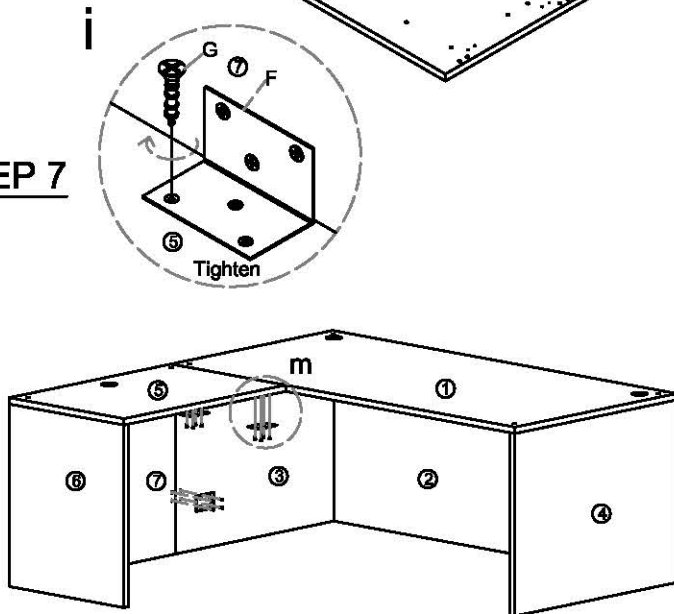



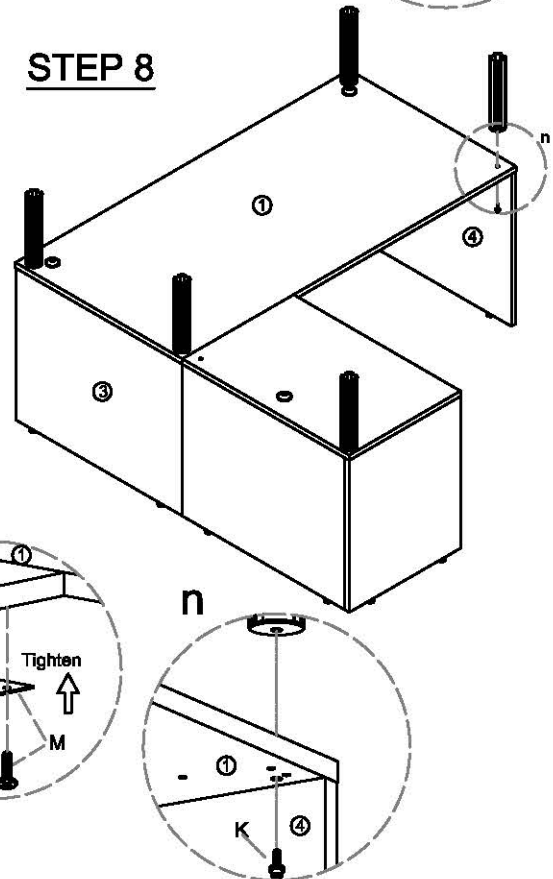











STEP 8




IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children

GLAZED RECEPTION DESK




TUN010CL	TUN011KC		TUN026	TUN021AG	TUN013LB	TUN018SC	TUN016BG					TUN019IB		
														
Cam lock 24Pcs+1Pc(spare)	Mix Cam 24Pcs+1Pc(spare)	Cam Cover 24Pcs+1Pc(spare)	Dowel 17Pcs+1Pc(spare)	Adjustable Glide 8Pcs	8-hole L-Bracket 8Pcs	Screw 1/8\"	80mm Black Grommet 3Pcs	Cover 14Pcs+1Pc(Spare)	Cover 8Pcs+1Pc(Spare)	Screw 10\"	5Set	5Set	75Set	1Pcs

STEP 9




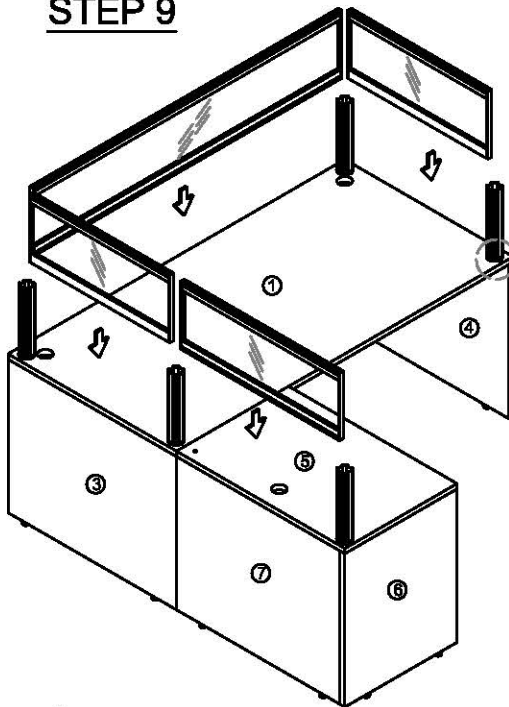


STEP 10


! Do not tighten the screws until top panels are inserted properly.

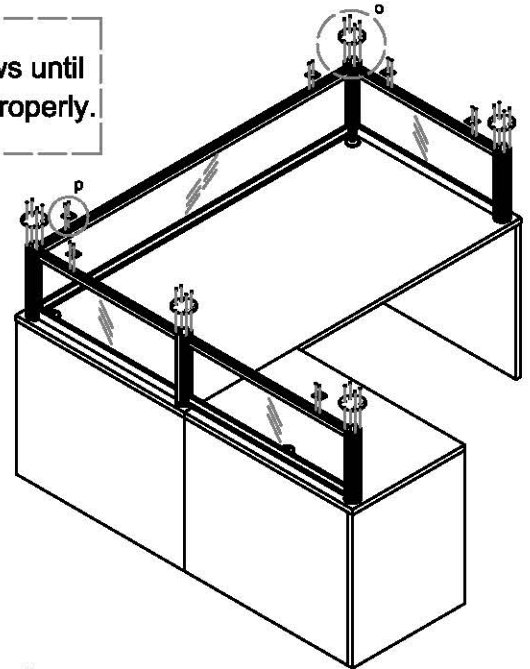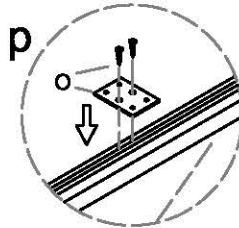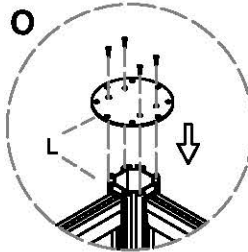

STEP 11

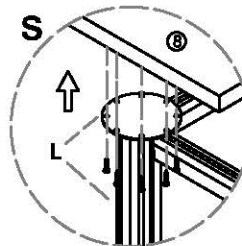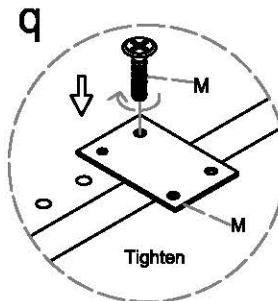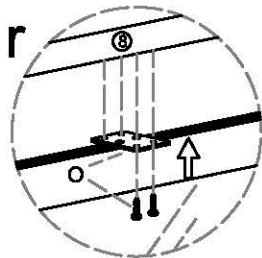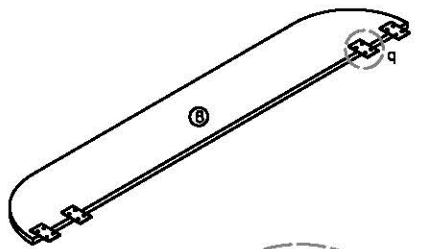



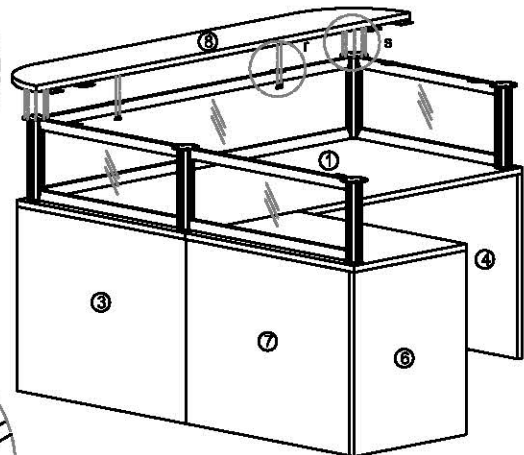











STEP 12




IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children


GLAZED RECEPTION DESK

TUN010CL A  Cam lock 24Pcs*1Pcs(spare)	TUN011KC B  Klix Cam 24Pcs*1Pcs(spare)	TUN028 C  Cam Cover 24Pcs*1Pcs(spare)	TUN028 D  Dowel 17Pcs*1Pcs(spare)	TUN021AG E  Adjustable Glide 8Pcs	TUN013LB F  8Hole L-Bracket 8Pcs	TUN018SC G  Screw#4*5/8" 134Pcs*1Pcs(spare)	TUN015BG H  60mm Black Grommet 3Pcs	I  Cover 14Pcs*1Pcs(spare)	J  Cover 8Pcs*1Pcs(spare)	K  Screw#10*40 8Pcs	L  Screws 6Set	TUN019IB M  I-Bracket 7Set	N  L-Bracket 1Pcs	O Screws 5Set
--	---	--	--	---	--	--	---	---	---	--	---	--	--	---

STEP 13

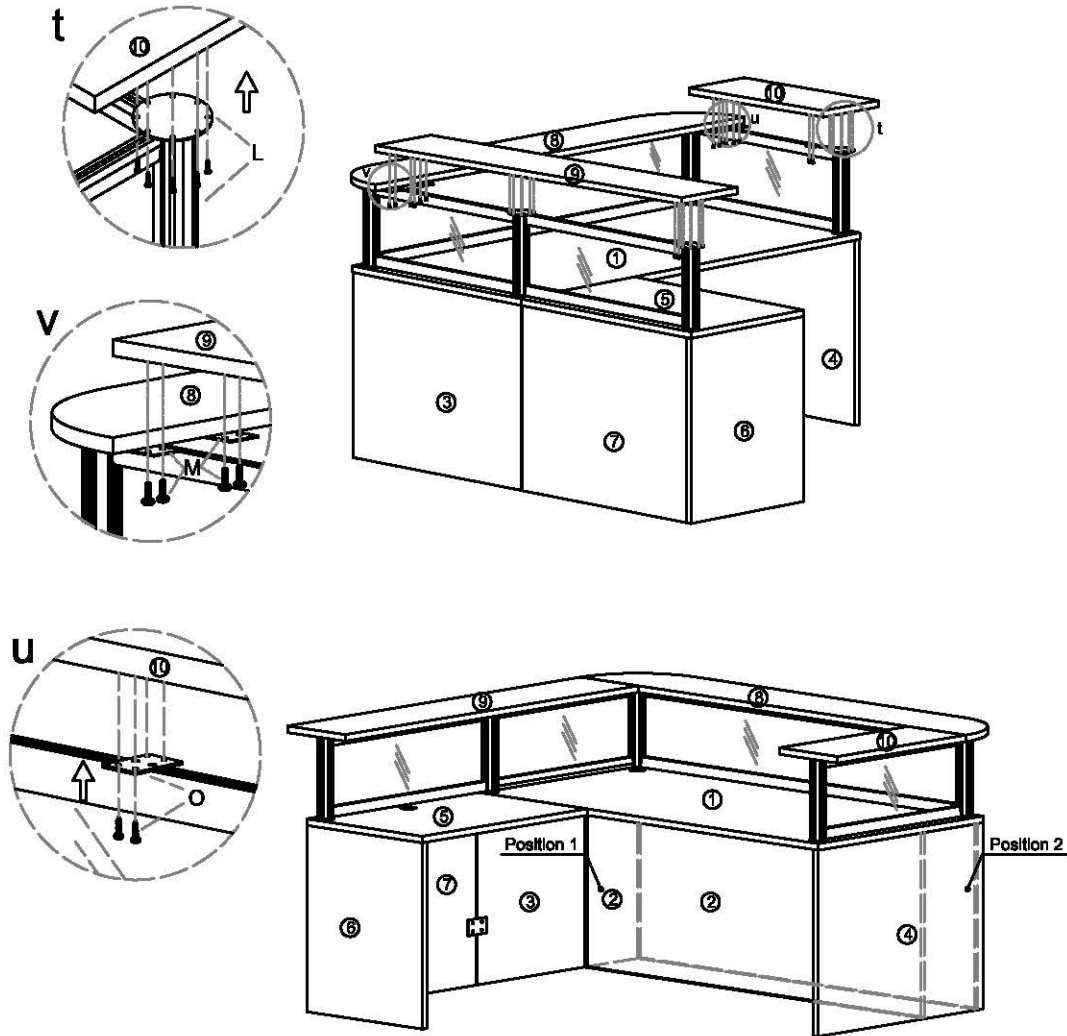

COMPLETED ASSEMBLY

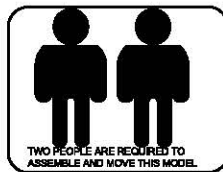

TWO PEOPLE ARE REQUIRED TO ASSEMBLE AND MOVE THIS MODEL

IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children