

ASSEMBLY INSTRUCTIONS


ah

aspenhome®

Distributed by Furniture Values International, LLC

ITEM NO:I49 Modular Home Office Wall

- Use the U bracket to secure the hutches together. Line up the front moldings before you tighten the screws.
- Remove the sliding cord management cover on the side panel of the base unit if any cord management needs to pass through to the next base.

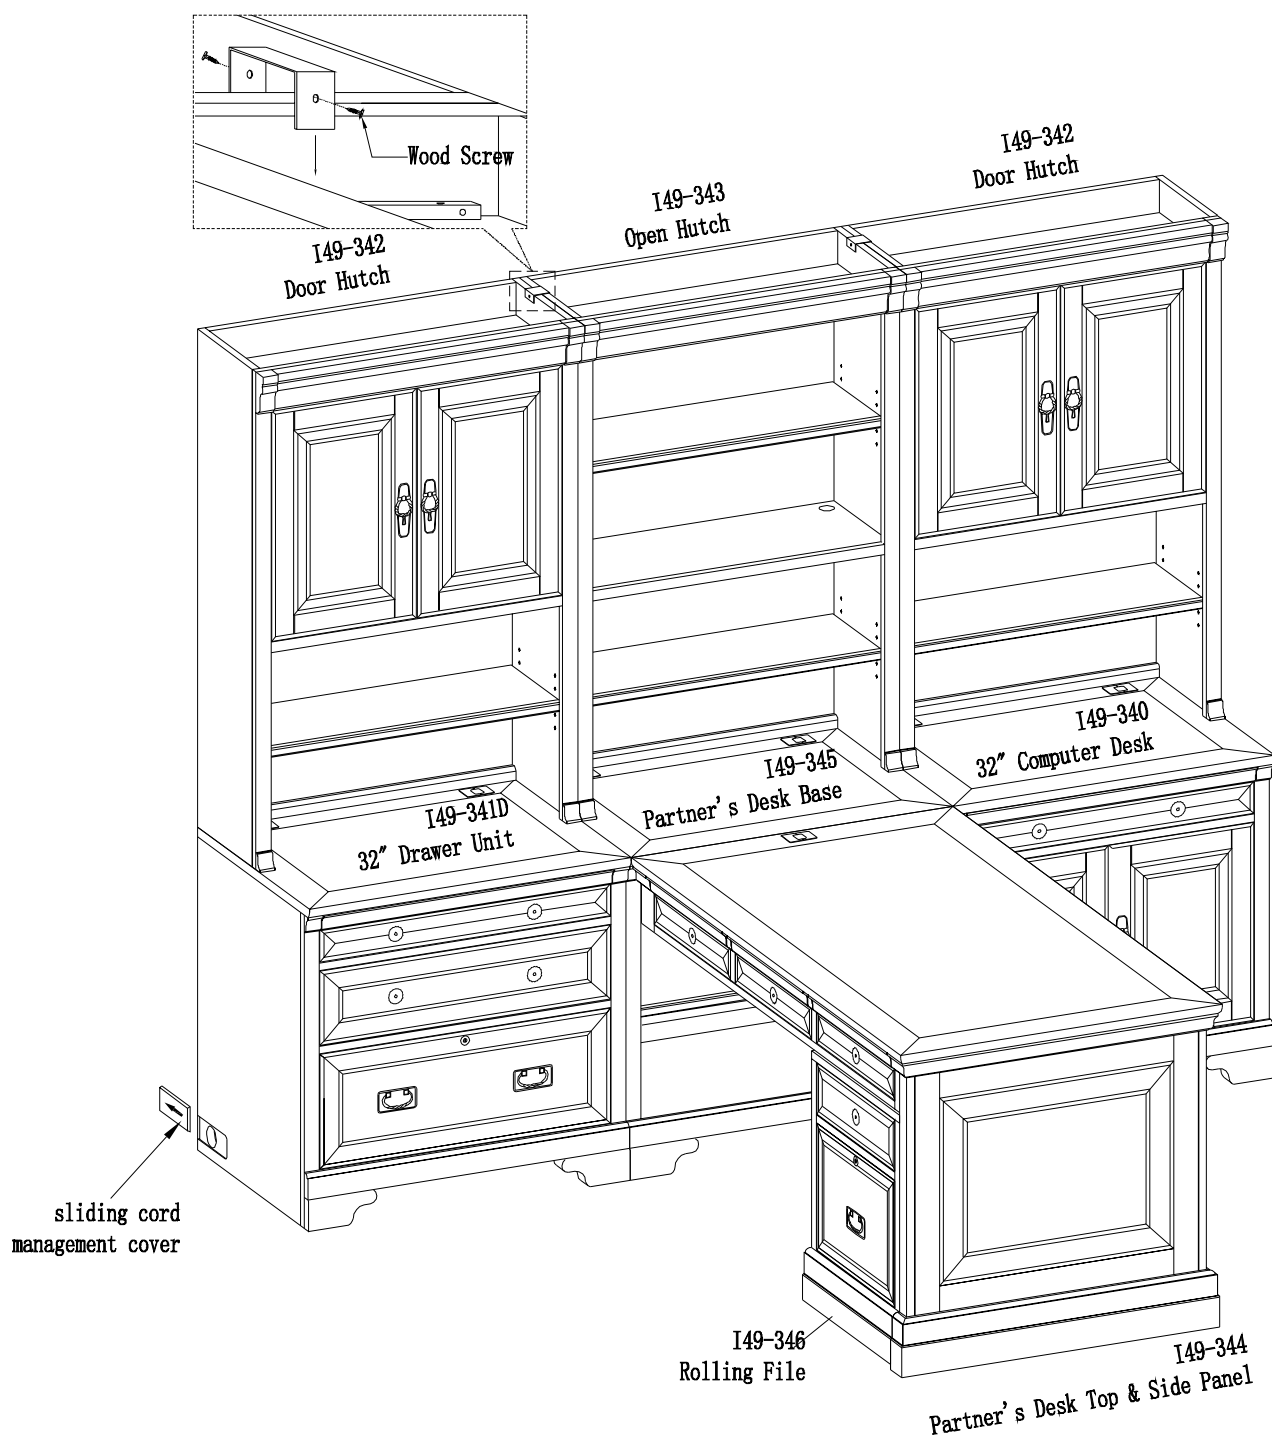

MADE IN VIETNAM

2012-06-14