



COMPONENTS


(A) Top Panel-1pc

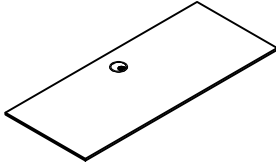

(B) Base Leg-1pc



(C) Modesty Panel-1pc

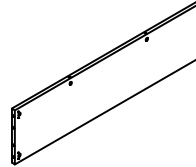

HARDWARE & TOOLS

(D) Mntg Bracket
150*90*3mm-2pcs



(E) Philips Screw
M6X15mm-22pcs



(F) Screw
Ø4X16mm-9pcs



(G) Cam Post-7pcs



Tools Required for Assembly



Philips Screw Driver for

(E) Screw Ø6X15mm

(F) Screw Ø4X16mm

(G) Cam Post

(I) Cam Lock

(H) Wood Dowel
Ø8*30mm-3pcs



(I) Cam Lock-9pcs



(J) T Support
60*22*50mm -4pcs



(K) Cam Sticker-13pcs




(L) Mntg Plate 64*50*8mm-2pcs




INSTRUCTIONS - Do not use power tools to assemble

STEP 1



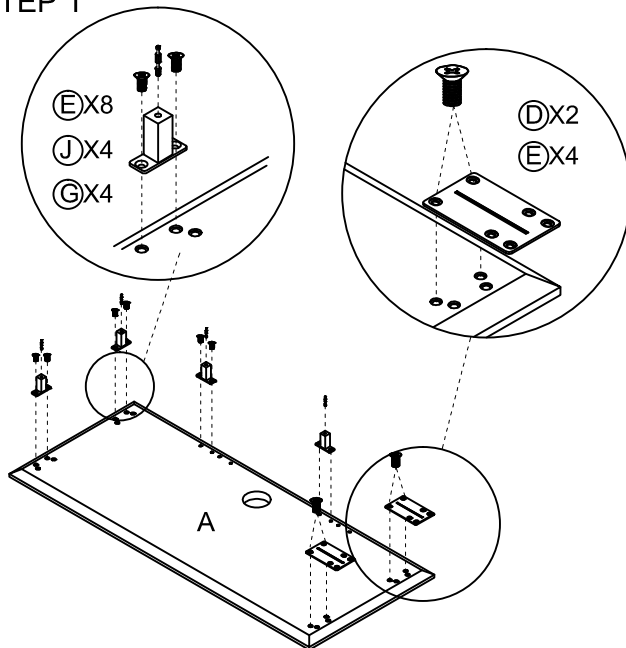


STEP 2- Install Panel C on either side to create a left or right return desk

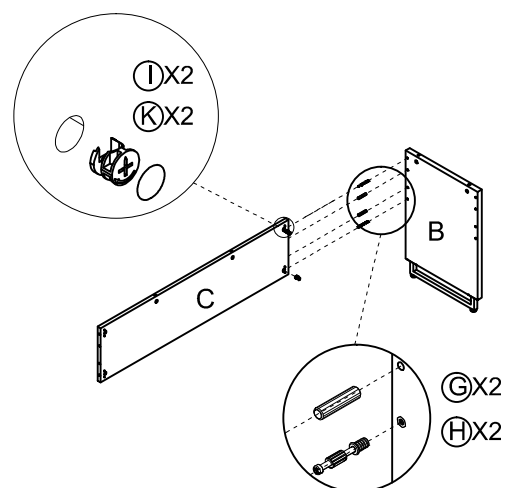


INSTRUCTIONS




STEP 3

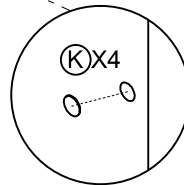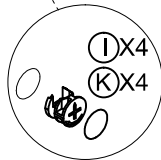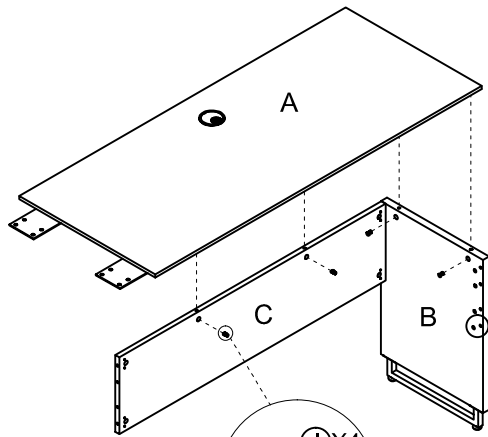

STEP 4

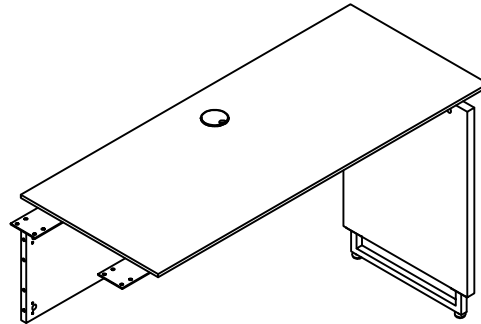

STEP 5-Install Right or Left Side

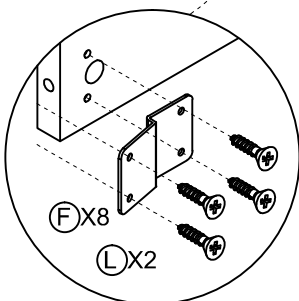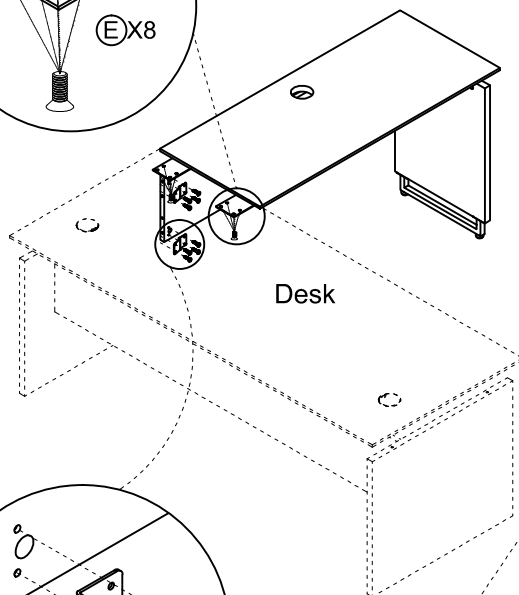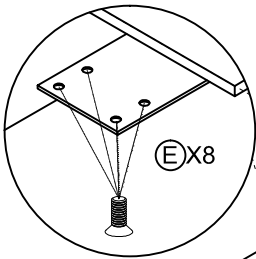

OR

