

**HZ108100TX**

**Colorblock Anywhere Storage  
Cabinet Console – Linen**

**ASSEMBLY INSTRUCTIONS**



**Southern**  
ENTERPRISES

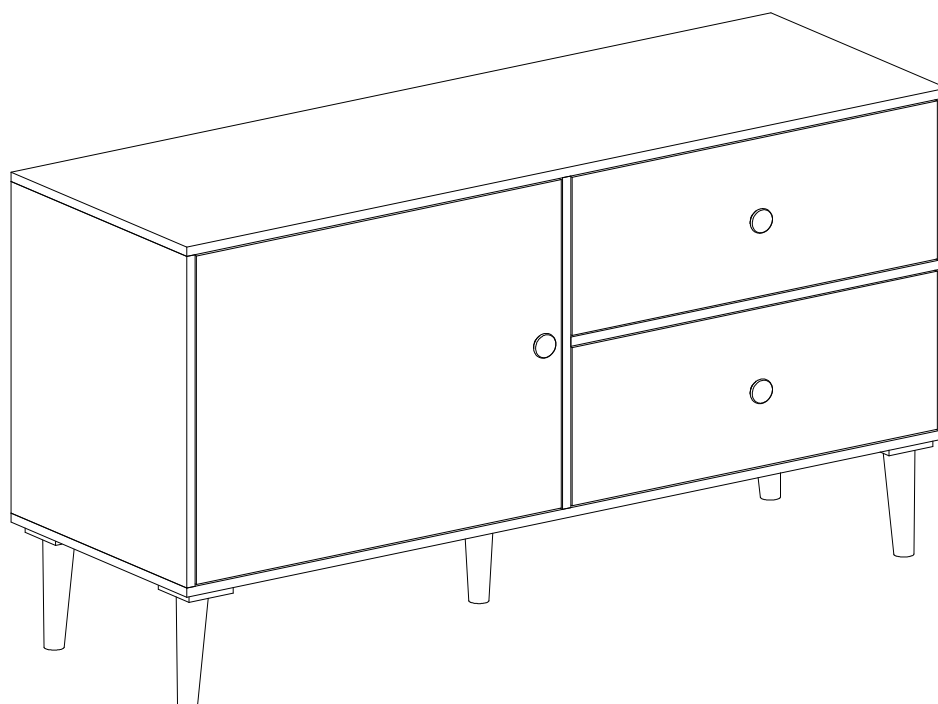
**For assistance with assembly contact:**

**Southern Enterprises, Inc.**

**Customer Service 1-800-633-5096**

**[service@seidal.com](mailto:service@seidal.com)**


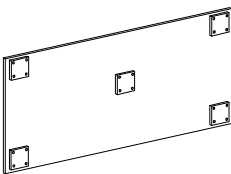
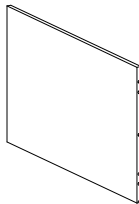
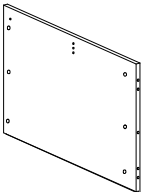

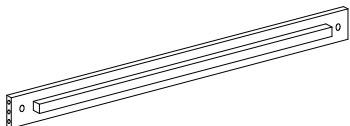

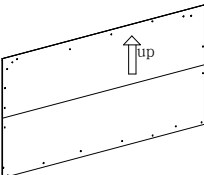
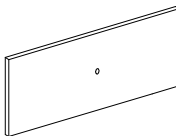
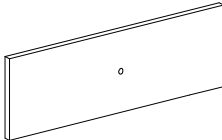
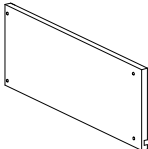
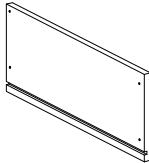
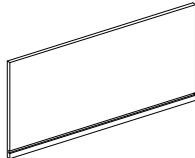
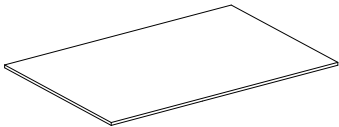
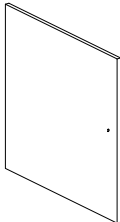
**[www.seidal.com](http://www.seidal.com)**

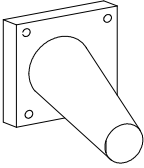
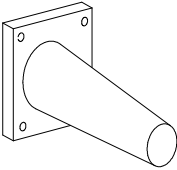
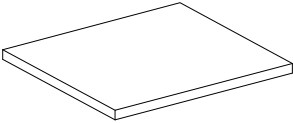
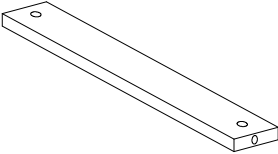
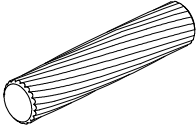


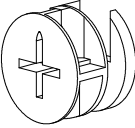


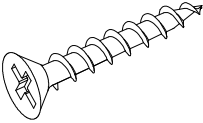
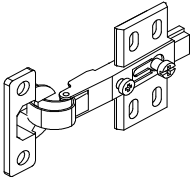
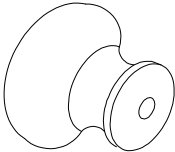

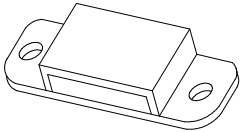



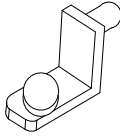


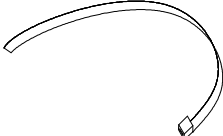
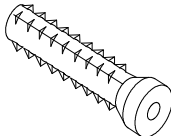
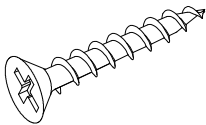

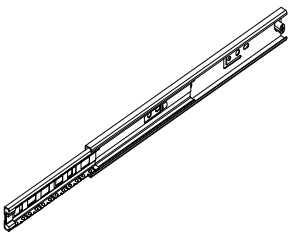
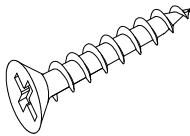


# Colorblock Anywhere Storage Cabinet Console – Linen

## Parts list

Please review all parts and hardware before disposing of any packaging.  
 Call customer service if you are missing hardware.  
 Using a screw that is too long will cause damage.  
 Before beginning assembly, separate each type of screw. Carefully study the diagrams below. You may receive extra hardware with your unit.

|  |                  |   |                  |  |                  |
|--|------------------|---|------------------|--|------------------|
| <b>A.</b><br><br><b>top panel</b>             | Quantity<br>of 1 | <b>B.</b><br><br><b>bottom panel</b>       | Quantity<br>of 1 | <b>C.</b><br><br><b>left side panel</b>     | Quantity<br>of 1 |
| <b>D.</b><br><br><b>right side panel</b>     | Quantity<br>of 1 | <b>E.</b><br><br><b>center panel</b>      | Quantity<br>of 1 | <b>F.</b><br><br><b>middle rail</b>        | Quantity<br>of 1 |
| <b>G.</b><br><br><b>top rail</b>            | Quantity<br>of 2 | <b>H.</b><br><br><b>back panel</b>       | Quantity<br>of 1 | <b>I.</b><br><br><b>top drawer front</b>  | Quantity<br>of 1 |
| <b>J.</b><br><br><b>bottom drawer front</b> | Quantity<br>of 1 | <b>K.</b><br><br><b>drawer side left</b> | Quantity<br>of 2 | <b>L.</b><br><br><b>drawer side right</b> | Quantity<br>of 2 |
| <b>M.</b><br><br><b>drawer back</b>         | Quantity<br>of 2 | <b>N.</b><br><br><b>drawer bottom</b>    | Quantity<br>of 2 | <b>O.</b><br><br><b>door panel</b>        | Quantity<br>of 2 |


|  |  |  |
|--|--|--|
| <b>P</b>  <p>Quantity<br/>of 4</p> <p><b>leg</b></p>                          | <b>Q</b>  <p>Quantity<br/>of 1</p> <p><b>middle leg</b></p>                             | <b>R</b>  <p>Quantity<br/>of 1</p> <p><b>adjustable shelf</b></p>             |
| <b>S</b>  <p>Quantity<br/>of 2</p> <p><b>bottom drawer rail</b></p>           | <b>1</b>  <p>Quantity<br/>of 22</p> <p><b>wood dowel:<br/>Dia 5/16" x 1-3/16" L</b></p> | <b>2.</b>  <p>Quantity<br/>of 20</p> <p><b>bolt: Dia 5/16" x 1" L</b></p>     |
| <b>3</b>  <p>Quantity<br/>of 24</p> <p><b>cam bolt</b></p>                  | <b>4.</b>  <p>Quantity<br/>of 24</p> <p><b>cam lock</b></p>                           | <b>5.</b>  <p>Quantity<br/>of 36</p> <p><b>screw: Dia 1/8" x 1/2" L</b></p> |
| <b>6.</b>  <p>Quantity<br/>of 26</p> <p><b>screw: Dia 1/8" x 1/2" L</b></p> | <b>7.</b>  <p>Quantity<br/>of 16</p> <p><b>screw: Dia 1/8" x 1" L</b></p>             | <b>8.</b>  <p>Quantity<br/>of 2</p> <p><b>hinge</b></p>                     |
| <b>9.</b>  <p>Quantity<br/>of 3</p> <p><b>knob</b></p>                      | <b>10.</b>  <p>Quantity<br/>of 3</p> <p><b>small bolt</b></p>                         | <b>11.</b>  <p>Quantity<br/>of 2</p> <p><b>magnet</b></p>                   |

|   |  |   |
|---|--|---|
| <p><b>12.</b> Quantity of 1</p>  <p><b>large wood dowel</b></p>  | <p><b>13.</b> Quantity of 4</p>  <p><b>shelf pin</b></p>  | <p><b>14.</b> Quantity of 1</p>  <p><b>allen wrench</b></p>          |
| <p><b>15.</b> Quantity of 4</p>  <p><b>bracket</b></p>   | <p><b>16.</b> Quantity of 2</p>  <p><b>plastic strap</b></p>                                    | <p><b>17.</b> Quantity of 4</p>  <p><b>anchor</b></p>                |
| <p><b>18.</b> Quantity of 4</p>  <p><b>screw: Dia 1/8" x 1-3/8" L</b></p>  | <p><b>19.</b> Quantity of 4</p>  <p><b>screw: Dia 1/8" x 5/8" L</b></p> | <p><b>20.</b> Quantity of 2</p>  <p><b>ball bearing slide</b></p>   |
| <p><b>21.</b> Quantity of 8</p>  <p><b>screw: Dia 1/8" x 1-1/4" L</b></p>                                       | <p><b>22.</b> Quantity of 20</p>  <p><b>paper cover</b></p>                                   |   |
| <p><b>Care and Cleaning Instructions:</b><br/>Before using, wipe with a clean, dry cloth. Periodically apply furniture wax to renew the finish. Avoid rubbing or scratching the surface with rough or abrasive objects.</p> |  | <p>For replacement parts or questions, please call customer service at 1-800-633-5096 please call manufacturer for assistance, questions, or parts.</p> |
| <p><b>Assembly Tool Required No.2 Phillips Screwdriver (Not included)</b></p>   |  |   |

**Tool List: 3/16" drill bit, drill, tape measure, and pencil.**

# Colorblock Anywhere Storage Cabinet Console – Linen Assembly Instructions

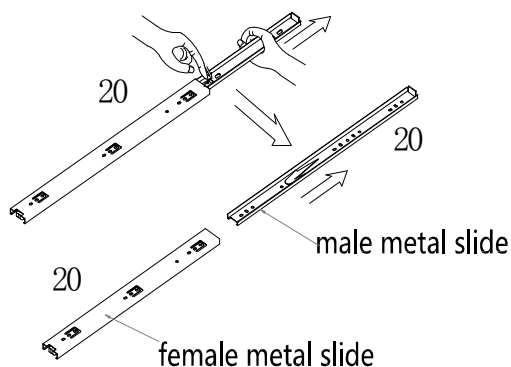**Figure 1**




## Assembly Instructions:

Wood may scratch easily, Be careful when assembling. Do not scratch.

First please separate metal slide (20) to male metal slide and female metal slide as shown.

To separate, press down on the lever as you pull the male and female slides apart. Press the lever down the opposite way if slides don't come apart.

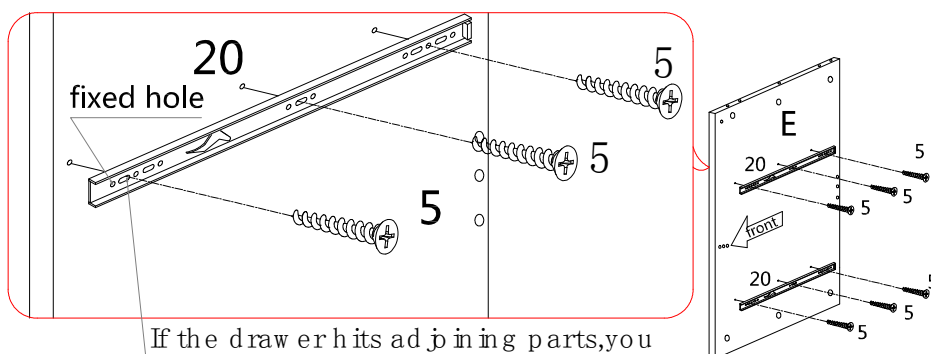**Figure 2**




If the drawer hits adjoining parts, you can loosen the screws on male slide and adjust the height of drawer

Begin by assembling the female ball bearing slide (20) on vertical panel (E) with screw (5), tighten with a screwdriver (not included).

Tip: Make sure the open end of the rails are facing the front of the unit and are pointed towards the finished edge of panel (E).

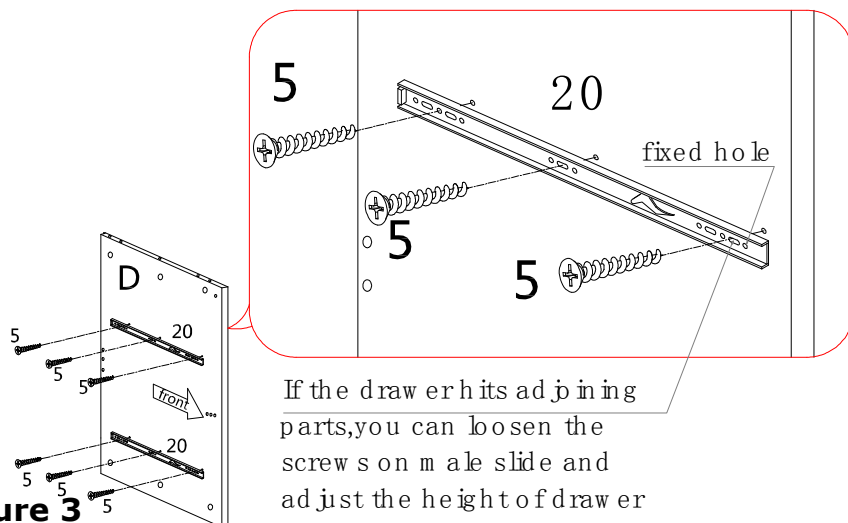
**Figure 3**



Then, attach another female ball bearing slide (20) on right side panel (D) with screws (5), tighten with screwdriver (not included).

Tip: Make sure the open end of the rails are facing the front of the unit and are pointed towards the finished edge of panel (D).

Page 5

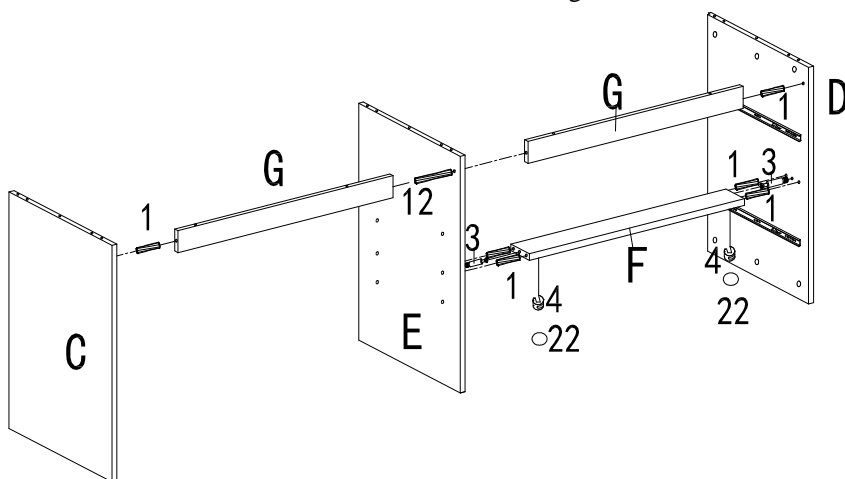

**Figure 4**

Insert cam locks (4) into predrilled holes on front middle rail (F)

On panel (E) screw cam bolts (3) into pre-drilled holes. Attach center panel (E) to top rails (G) and middle rail (F) with wood dowels (1) and large wood dowel (12)


Tighten by rotating cam lock (4) clockwise with phillips screwdriver (not included).

Cover cam lock holes with paper cover(22)

Attach panel (D) to top rail (G) and middle rail (F) with wood dowels (1) and large wood dowel (12).

Attach left side panel (C) to top rail (G) with wood dowels (1) and large wood dowel (12)

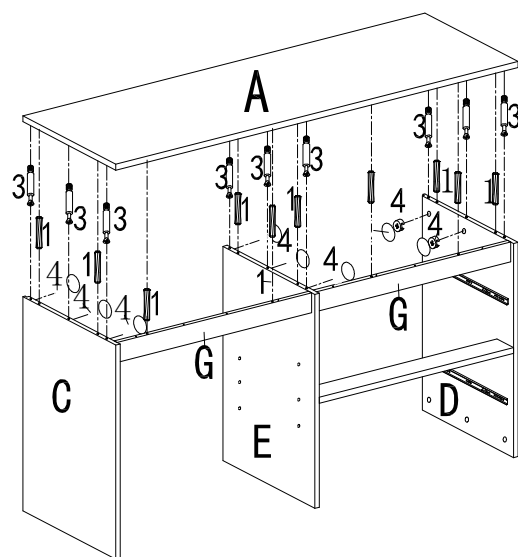
**Figure 5**



Insert cam lock (4) into predrilled holes on pre-assembled unit.

Place dowels (1) of left/right side panels (C, D) and center panel (E) in corresponding holes. Screw cam bolts (3) in corresponding pre-drilled holes on underside of top panel (A). Attach top panel (A) to panels (C, G, D). Tighten cam locks (4).

Cover cam lock holes with paper cover(22)

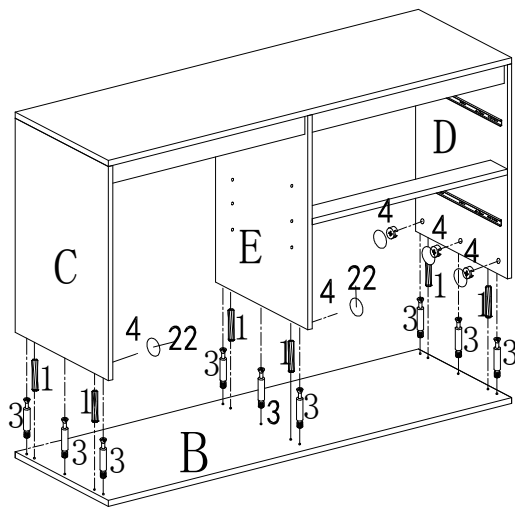


**Figure 6**

Insert cam locks (4) into predrilled holes on pre-assembled unit on figure 5

Place dowels (1) of left/right side panels (C, D) and center panel (E) in corresponding holes. Screw cam bolts (3) in corresponding pre-drilled holes on bottom panel (B). Attach bottom panel (B) to panels (C, G, D). Tighten cam locks (4). Cover cam lock holes with paper cover(22)

Tip: It may be easier to place the pre-assembled unit on its back to complete this step.

Page 6

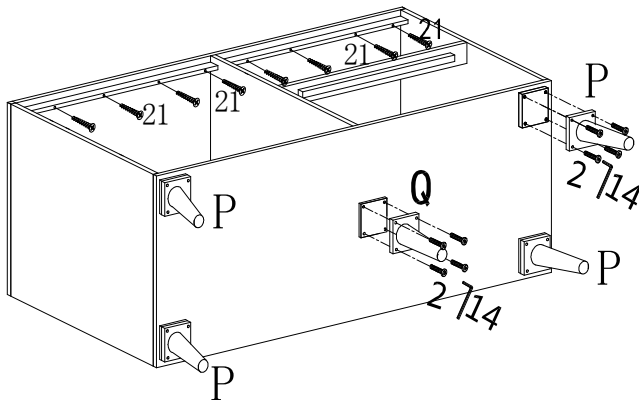


**Figure 7**

Attach leg (P) and middle leg (Q) to bottom panel (B) with bolt (2). Tighten bolt with allen wrench (14).


**Note:** Front legs should flare out towards the sides while rear legs should flare out towards the back.

Secure top rail (G) to top panel (A) with screws (21) using a phillips screwdriver.

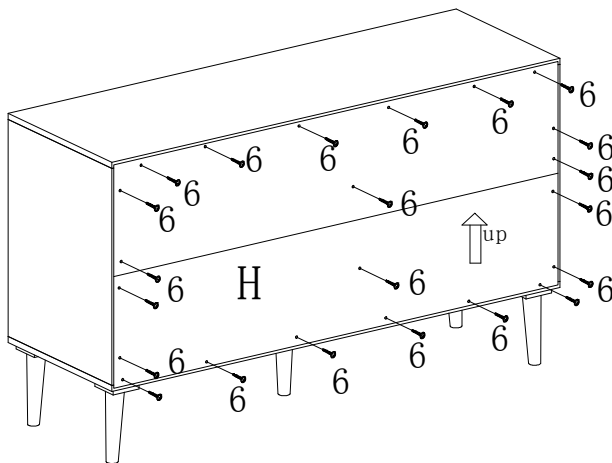

**Figure 8**

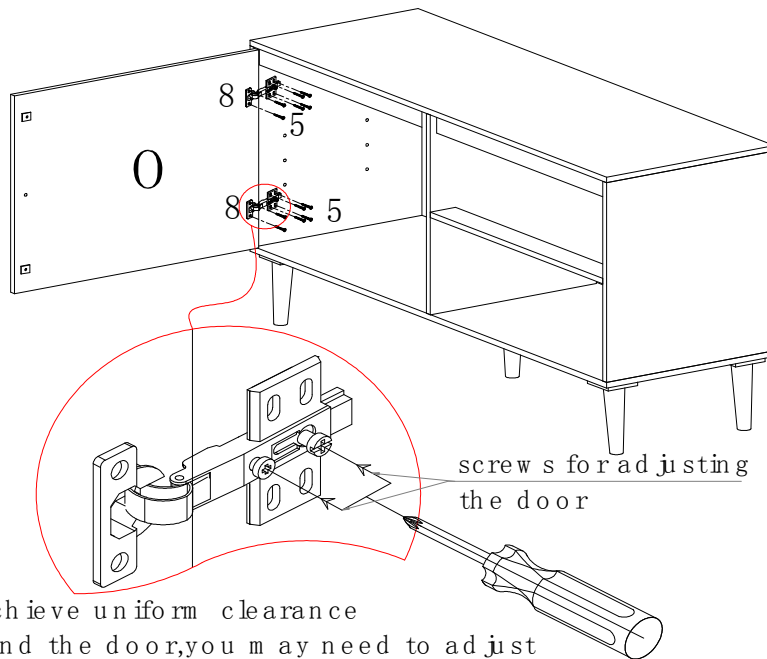
Attach back panel (H) with screws (6) using a phillips screwdriver.



to achieve uniform clearance around the door, you may need to adjust the door by tightening or loosening the two screws on the hinge itself

Attach hinges (8) to door panel (O) and left side panel (C) with screws (5) using a phillips screwdriver.

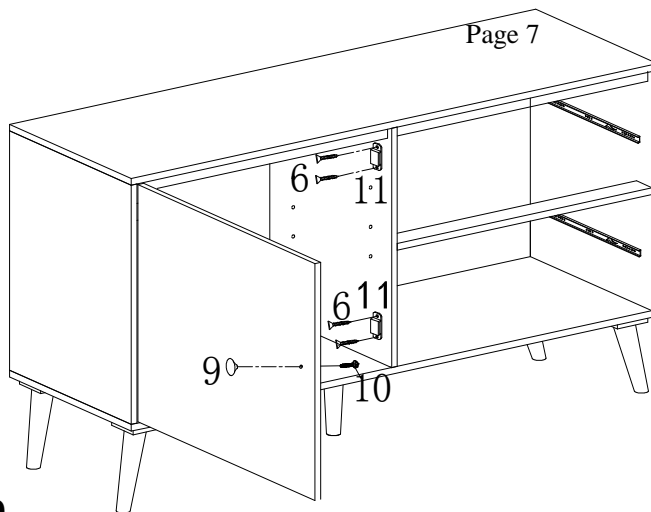**Figure 9**




Attach magnet (11) to center panel (E) with screws (6).

Attach knob (9) to door panel (O) with small bolt (10).

Tighten screws and bolts with phillips screwdriver.

**Figure 10**



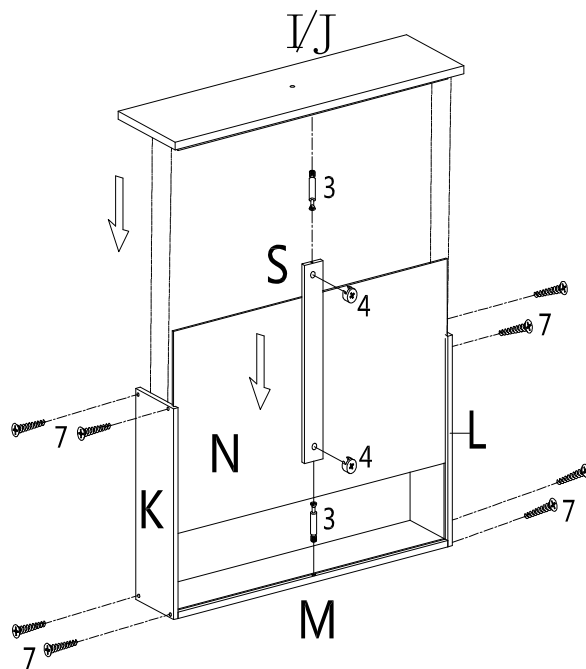

**Figure 11**

Insert cam lock (4) into holes on drawer bottom rail (S).  
Screw cam bolts (3) into holes on drawer back (M).

Attach drawer back (M) to drawer bottom rail (S) by inserting cam bolts (3) into corresponding holes until drawer back (M) and drawer bottom rail (S) meet.


Tighten by rotating cam locks (4) clockwise with phillips screwdriver.

Attach the drawer side left (K) and drawer side right (L) to drawer back (M), match the grooves and tighten them with screws (7).

Insert the drawer bottom (N) into the corresponding groove of drawer back (M), drawer side left (K) and drawer side right (L).  
Insert cam bolt (3) to drawer front (I).

Attach drawer front (I) to drawer bottom rail (S), drawer side left (K), and drawer side right (L). Rotate cam lock clockwise and insert screws (7) into corresponding holes in (K) and (L) to secure drawer front (I).

Repeat steps using drawer front (J) for the second drawer.

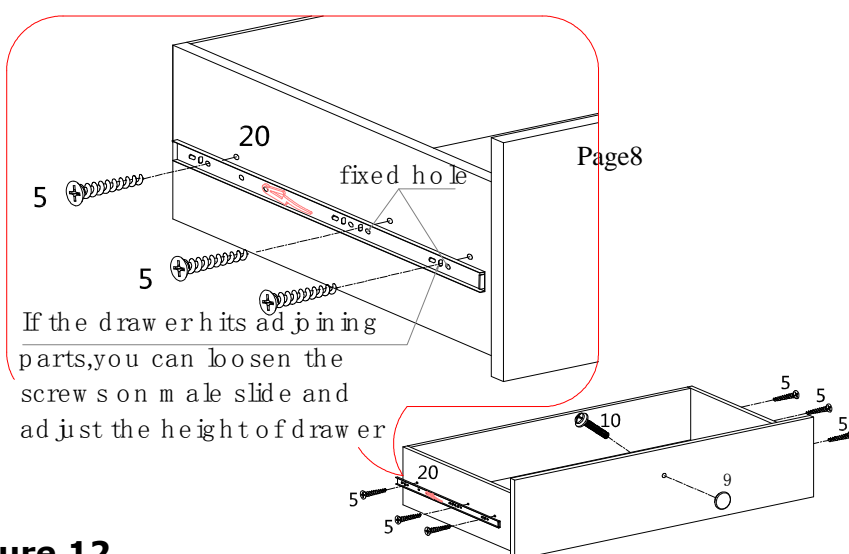


**Figure 12**

Attach male metal slide (20) to drawer with screws (5).  
Tighten screws with phillips screwdriver.


Attach knob (9) to drawer front with small bolt (10). Tighten bolt with phillips screwdriver.

Make sure the open edge of the rail is facing towards the back of the drawer.

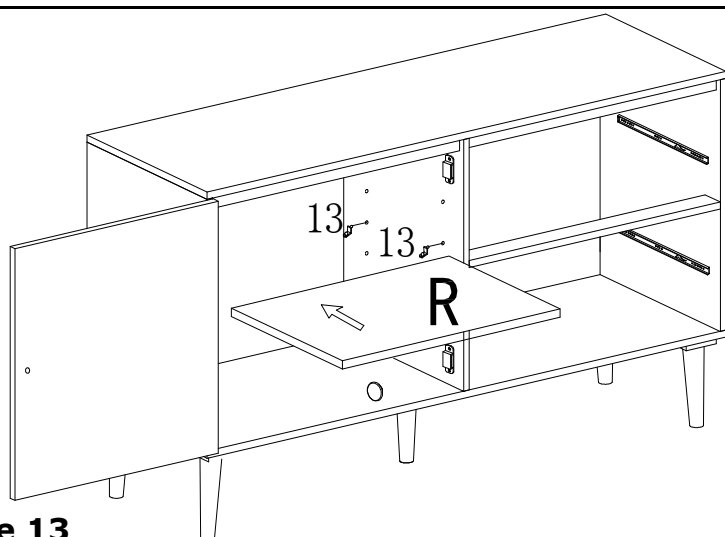

**Figure 13**

Insert shelf pins (13) into holes on left side panel (C) and center panel (E). Slide shelf in.

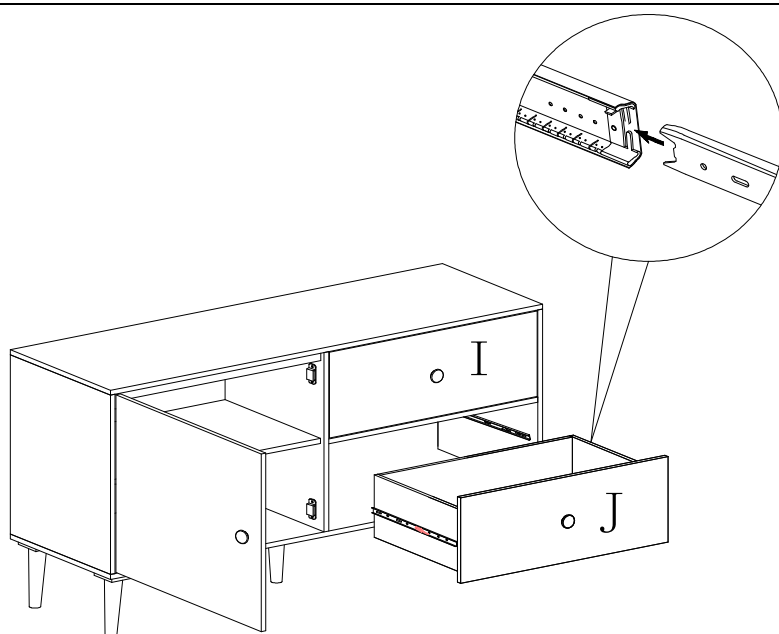


**Figure 14**

Insert drawers by lining up male and female components of rails.

Make sure drawer's male ball bearings slide into side panels female ball bearing slides.

Please try and make sure ball bearings slide smoothly.


If the drawer hits adjoining parts, you can loosen the screws on male slide and adjust the height of drawer.

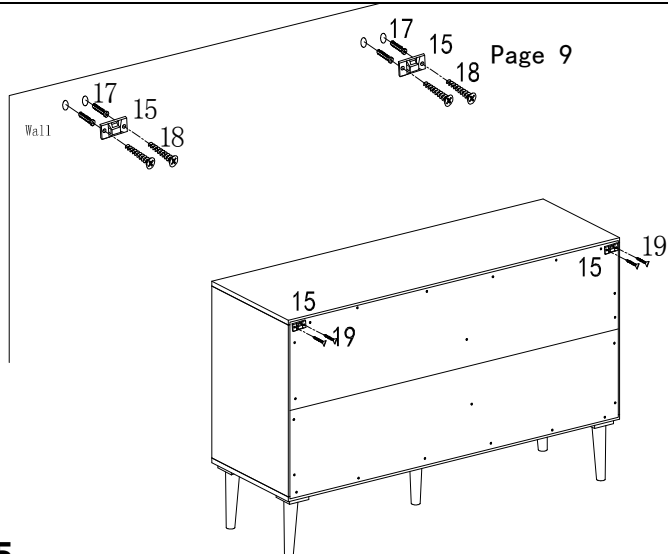

**Figure 15**

Attach brackets (15) to back panel using screws (19). Tighten screws (19) using a phillips screwdriver.


Mark two desired locations on wall. Drill two 3/16" holes on wall. Insert plastic anchors (17) into the 2 holes on wall as shown. (When doing this, you will need a hammer help you). Then attach the bracket (15) to wall using screw (18). Tighten screws (18) using a phillips screwdriver.

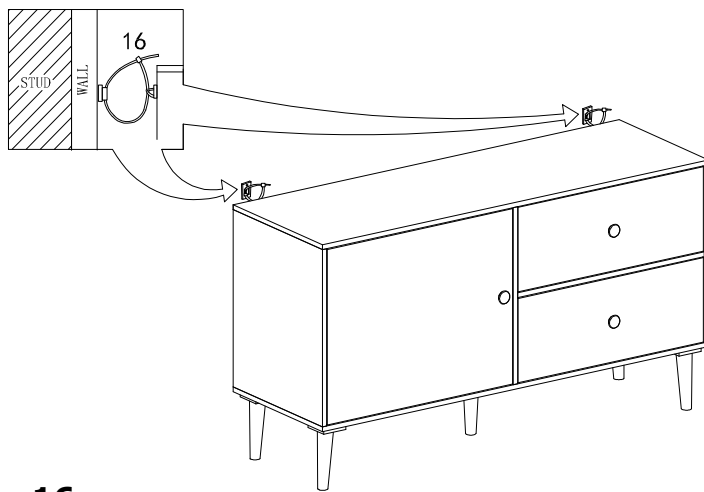

**Figure 16**

Move this item close to the wall brackets (15) and tie in both brackets (15) with plastic strap (16) as shown in diagram.

**Anti-tipping hardware must be used for this product to avoid tipping and injury.**

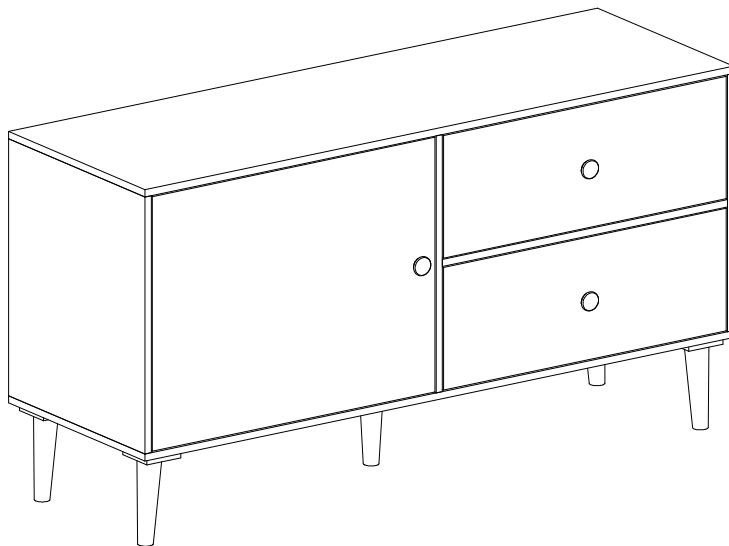

**Figure 17**

Your Colorblock Anywhere Storage CabinetConsole - Linen is ready for use

## Parts Replacement Form

### Customer Information

Name

---

Address

---

City/State/Zip Code

---

Phone Number

---

Please indicate where you purchased this item: Store/Website/Catalog

---

Please indicate color/size/style number:

---

| Style No | Parts Letter | Parts Description | Quantity Needed |
|----------|--------------|-------------------|-----------------|
|----------|--------------|-------------------|-----------------|

---

---

---

Please immediately examine this product carefully. Any request for missing parts or damage replacement must be received within 90 days of your receipt of the product. Replacement, if available, will be honored within this time frame. Parts will not be available for items arriving fully assembled. We do not recommend modifying product(s) and we are not responsible for any damages due to product modification(s). If damages or missing parts are not reported within 90 days of your receipt, we are under no obligation to provide parts or replacement merchandise.

Please contact Southern Enterprises at 800-633-5096 or in Dallas 972-869-0111/ 9am – 4pm Mon-Fri Central time if you have product issues or email us at [service@seidal.com](mailto:service@seidal.com). Please ask for customer service representative for issues involving damages or replacement parts. Please ask for technical assistance representative for any issues with product and assembly/construction.

Please contact the retailer that you purchased from for returns.



**Southern**  
ENTERPRISES