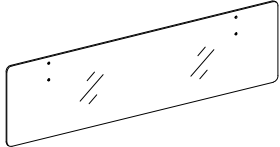





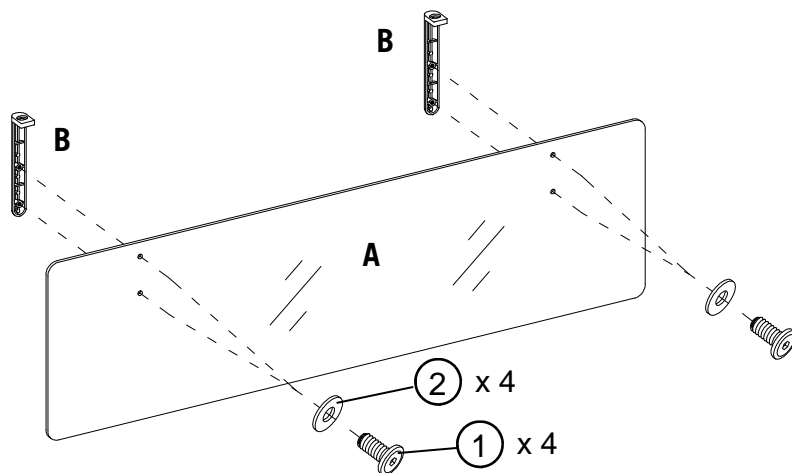


**Congratulations on the purchase of your new *Reveal* modesty panel!**

ITEM	DESCRIPTION	QTY.
<b>A</b> 	Modesty panel	1
<b>B</b> 	Bracket	2
<b>①</b> 	M6 x 12 mm Screw	4
<b>②</b> 	Flat washer	6
<b>③</b> 	M6 x 25 mm Screw	2
	4 mm Hex wrench	1

**STEP 1** Remove protective sheets from the modesty panel (A) and fasten 2 brackets (B) to the modesty panel (A) with four 12 mm screws (1) and four flat washers (2).



**STEP 2** Place the assembled desk frame upside down on a level and protective surface. Align and attach the modesty panel (A) with two brackets (B) to the desk top with two 25 mm screws (3) and two washers (2). Tighten the screws with the provided hex wrench.

**STEP 3** Now, ask for assistance to stand the unit upright and position at the desired location, then place the glass panel onto the desk top.

