



PROSERIES LUXURY VINYL FLOORING

INSTALLATION & CARE GUIDE

RUBBER WALL & SCULPTURED BASE

Daltile | Dal-Tile, LLC
7834 C.F. Hawn Freeway
Dallas, TX 75217

TECHNICAL SERVICES
1.800.933.TILE



PROSERIES LUXURY VINYL FLOORING

INSTALLATION & CARE GUIDE

RUBBER WALL & SCULPTURED BASE



NOTICE TO INSTALLER

This brochure contains important installation, maintenance and warranty information as well as cautions and warnings. Our warranty will become effective only if these instructions are followed in every respect. 5 Year Limited Commercial Warranty.

Please note: In all cases, installations should comply with procedures outlined in ASTM Standards for installation, at a minimum. For procedures specific to DalTile products, please refer to the instructions below.

READ THE COMPLETE INSTRUCTIONS BEFORE BEGINNING THE INSTALLATION.

GENERAL

The wall surface must be thoroughly dry, smooth, and free from dirt, wallpaper, vinyl wall covering, grease, old adhesives, and other extraneous material. DO NOT apply directly over outside walls in contact with earth (such as unfurred basement walls) or over ceramic tile, metals, or other impervious surfaces because poor adhesion may result.

Maintain the wall base, adhesive, and room air at a uniform temperature of at least 70°F for 24 hours prior to, during, and 48 hours after the installation. Rolled wall base should be unrolled and allowed to lie flat for 24 hours prior to the installation to regain its normal shape.

Use recommended wall base adhesive carefully following the directions on the container label. THE USE OF ANY OTHER ADHESIVE WILL VOID WARRANTY.

INSTALLATION OF BASE

Spread the adhesive either on the back of the base or on the wall using a triangular notched trowel or cartridge gun. Trowel notches should be 3/32" deep by 3/32" wide with 3/32" flats. If applying adhesive with a cartridge gun, use a 2-hole nozzle for 2 1/2" base, a 3-hole nozzle for 4" base, and a 5-hole nozzle for 6" base.

Apply the adhesive at least 1/4" from top of base if using a trowel and 1" from top of base if using a cartridge so that adhesive does not seep out as the wall base is rolled.

Bond the wall base within 20 minutes of the adhesive application. Roll thoroughly with a hand roller immediately after applying the wall base to the wall (Figure 1). If roller is unavailable, wipe the wall base with a soft cloth, firmly pressing the base against the wall. Base applied to curved or irregular surfaces may require bracing until the adhesive sets.



(Figure 1)

If the wall or floor surface is uneven, it may be necessary to trim the edges before installing adjoining pieces of base. Use a razor-type utility knife, cutting the wall base from face to back.

Immediately remove excess adhesive from the base or the wall with water. Excess adhesive may leave a stain if not removed promptly.

Avoid exposure of base to excessive heat, such as from direct sunlight, until the adhesive has completely set.


CORNERS

Preformed outside corners are available – 2 1/2", 4" and 6" if desired. However, both outside and inside corners can be formed easily from standard 4-foot lengths or rolls.

Outside Corners (Suggested Method)


When you come to an outside corner, but the next section of base to the last installed section (or continue to the corner when using coils). Make sure the base is in the proper position on the wall as you would install it.

1. Using a pen or pencil, mark the base of the base using the wall as a guide. This will give you the correct contour of the wall.

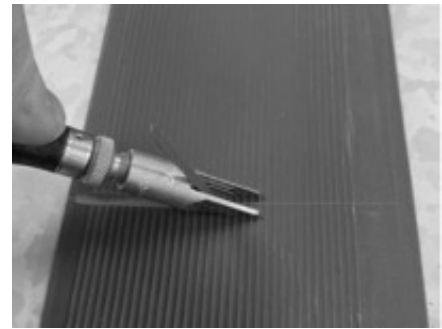

(Figure 2)

2. Turn the base face down (Figure 2) and make your cut using a topset gouge starting at the top and working down to the bottom removing the line and approximately 1/8" of base material on either side of it (Cut #1). Note: Always gouge on the side of the line in the direction the base will be going. *Important: The depth of this area at its deepest point should not exceed 20% of the base thickness.*

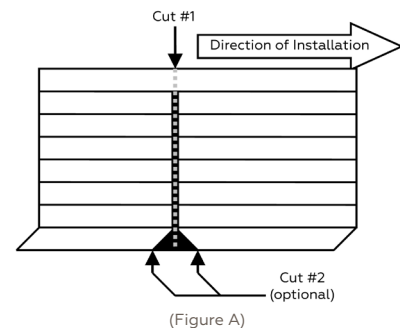

(Figure A)

3. To ensure that the toe sits flush against the floor, the initial cut (Cut #1 – Figure A) can be widened on either side of the line (Cut #2 – Figure A) near the bottom of the base, though this cut is optional. Make the cut (gouge) downward, widening the initial cut to approximately one-half inch at the bottom. This will ensure there is no pressure of the toe against the floor surface.

PROSERIES LUXURY VINYL FLOORING

INSTALLATION & CARE GUIDE

RUBBER WALL & SCULPTURED BASE



Note: The next two steps must be completed before continuing to Step 5.

- Use a hot air blower to heat the shaved area. Apply heat carefully because excessive heat will blister or deform the base.

- Fold base with face out where corner will occur and roll with hand roller (Figure 3).




(Figure 3)

4. Pull up on the toe and turn it inside out. Position the base after applying adhesive and set into place allowing the toe to drop down to form a perfect corner.
5. Roll thoroughly or firmly press corner against wall.
6. Cool by placing a wet cloth against corner. Wipe dry.
7. Remove excess adhesive.

Inside Corners (Suggested Method)

1. Draw a line on the back of base where corner will occur.
2. Using a straight edge as a guide, lightly cut along line from top to bottom of base to a depth of approximately 20% of the base thickness.
3. Cut a small 90° triangular wedge (45° off center) to remove toe of cove base at line (Figure 4).

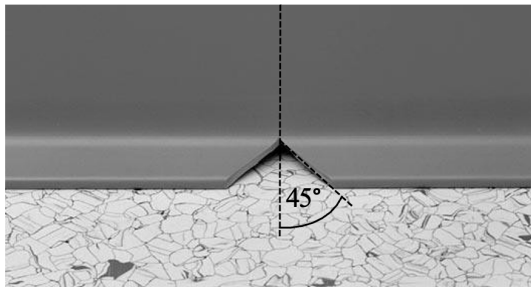

(Figure 4)

4. Use a hot air blower to heat the back of the base along the score line. Apply heat carefully because excessive heat will blister or deform the base.
5. Fold base at mark with face in. While base is still warm apply adhesive and press base into corner. Carefully push the toe of cove base against the wall to close the triangle (Figure 5).




(Figure 5)

6. Promptly roll base.
7. Cool by placing a wet cloth against corner. Wipe dry.
8. Remove excess adhesive.

Inside Corners (Optional Method)

1. When you come to an inside corner, use a scribe to mark the base using the corner as the pattern to get the exact curvature of the wall.
2. Cut the base to the exact length allowing a good, tight fit to the wall.
3. Apply the proper amount of adhesive and install this piece of base.
4. Using the same procedure as above, scribe and cut the second piece for the corner. (**DO NOT** install the second piece yet.)
5. After cutting the second piece of base, turn the piece front side down and make a back angle cut in the toe, starting at the top of the toe and cutting down to the bottom of the toe. (See Figure 6: Cut #1)

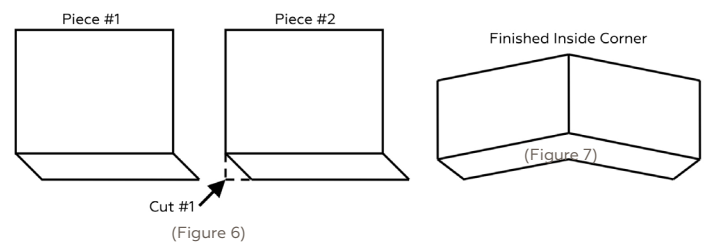

6. Check the fit with the previously installed piece.
7. Make any additional cuts to ensure a snug fit.
8. Apply adhesive and install (Figure 7).

PROSERIES LUXURY VINYL FLOORING

INSTALLATION & CARE GUIDE

RUBBER WALL & SCULPTURED BASE



DALTILE WALL BASE AND ACCESSORIES MAINTENANCE

Initial Maintenance

Wipe off any excess amounts of adhesive that may have come through the seams with a damp cloth. Allow the adhesive on the wall base to thoroughly dry before completing the following initial maintenance procedure.

1. Wall Base and Accessories are maintained by hand.
2. Wash with a wet cloth or wet mop using neutral cleaner per directions.
3. Rinse with clear water.
4. Clean wall base and accessories as conditions and soiling dictates.

Initial Maintenance

Wipe off any excess amounts of adhesive that may have come through the seams with a damp cloth. Allow the adhesive on the wall base to thoroughly dry before completing the following initial maintenance procedure.

1. Wall Base and Accessories are maintained by hand.
2. Wash with a wet cloth or wet mop using neutral cleaner per directions.
3. Rinse with clear water.
4. Clean wall base and accessories as conditions and soiling dictates.

For resolution of maintenance problems not covered in these instructions, contact: A DalTile Representative.

DalTile ProSeries	
9999502734	DAL ProSeries Cove Base Adh CRT 28.7 OZ
9999502735	DAL ProSeries Cove Base Adh 4 GAL
Mapei	
9999576120	MAP ULTRABOND ECO 575 11 OZ
9999625388	MAP ULTRABOND ECO 575 4 GAL
9999625389	MAP ULTRABOND ECO 575 28.7 OZ TUBE
9999625605	MAP ULTRABOND ECO 575 1 GAL
Custom	
9999581113	CBP WALL BASE ADHESIVE 30-OZ CARTRIDGE
9999581114	CBP WALL BASE ADHESIVE 4-GALLON
QEP / Roberts	
QEP7200HP11	QEP HP COVE BASE ADH 11OZ CART 7200-HP11
QEP7200HP1G	QEP HP COVE BASE ADHESIVE 1-GAL 7200-HP1
QEP7200HP30	QEP HP COVE BASE ADH 30OZ CART 7200-HP30
QEP7200HP4G	QEP HP COVE BASE ADHESIVE 4GAL 7200-HP4

ROBERTS® 7200HP HIGH-PERFORMANCE BASE BOND® is a superior-grade, solvent-free adhesive specifically designed for the interior installation of vinyl, rubber and carpet wall base. The tenacious wet-suction capabilities this formula offers make it ideal for use over porous wall surfaces such as gypsum drywall, brick, concrete block, wood, properly cured plaster and concrete.

MAPEI® Ultrabond Eco 575 - a premium cove-base adhesive that is specifically designed to provide superior bond and impact resistance for rubber, vinyl and carpet wall base. Ultrabond ECO 575 also has been reformulated to offer even greater grab and wet strength, keeping corners wrapped tight. Its light-colored, water-based, acrylic-polymer formulation won't stain even the whitest wall base.

DalTile ProSeries Cove Base Adhesive - a premium cove-base adhesive that is specifically designed to provide superior bond and impact resistance for DalTile cove base. PROSERIES Cove-Base Adhesive has been formulated to offer excellent grab and wet strength, keeping corners wrapped tight. Its light-colored, water-based, acrylic-polymer formulation will not stain light-colored base.

Custom Wall Base Adhesive- an impact-resistant, non-staining vinyl, rubber and carpet wall base adhesive with exceptional tack and early strength. Wet strength holds base in position on outside and inside corner applications. High flexible for impact resistance in commercial and institutional applications. Also used for installing vertical application of carpet and FRP (fiberglass reinforce plastic panels).