



©2025 Lennox Industries Inc.
Dallas, Texas, USA

INSTALLATION INSTRUCTIONS

Front Wind Baffle

Before you begin installation, read these instructions completely and carefully. Observe all governing codes and ordinances as they may apply. Leave these instructions with the owner.

▲ IMPORTANT SAFETY NOTICE


To avoid personal injury or property damage, this accessory is to be installed only by a licensed and trained industry professional. The manufacturer will not assume liability for unqualified installers or failure to follow these instructions.

▲ WARNING

For personal safety, disconnect system power before installing this accessory. During installation, if ground wires, screws, straps, clips, or other means of attaching grounding components are removed, they must be returned to their original positions and fastened securely.

Parts Included:


- Front wind baffle
- Self-tapping screws
- This instruction sheet

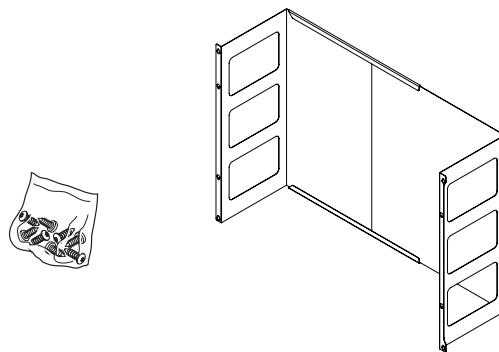

Install Front Wind Baffle

Step 1:

Remove the front wind baffle from the box. When taken out of the box, the 2 halves of the accessory are fully connected. To adjust, pull the 2 halves apart until they are approximately the width of the front of the unit, ensuring not to pull them too far apart to avoid disconnecting the pieces.

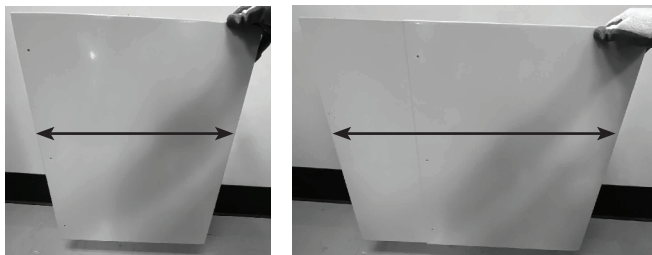

Step 2:

Remove front grille. Save the front grille screws for the next step.

Note: Some models will not require the front grille to be removed.





©2025 Lennox Industries Inc.
Dallas, Texas, USA

INSTALLATION INSTRUCTIONS

Front Wind Baffle

Step 3:

Align the slots of the wind baffle with the screw holes on the back of the front grille. Insert the front grille screws through the front grille, the wind baffle slots, and into the front panel. Tighten all 4 screws fully.



Step 4:

Mark the center of each of the 3 vertical holes on the front. Then, using 3 self-tapping screws with washers, drill through each marked hole to fasten the 2 metal pieces together.



Step 5:

Cover the exposed end of each screw with the provided rubber backing.

Step 6:

The completed assembly of the front wind baffle should resemble the image below.

