


# Quick Start Guide

## ALTAIR<sup>®</sup> Pump Probe



The quick start guide does not replace the operating manual. It is imperative that the operating manual be read and observed when using the device. In particular, the safety instructions, as well as the information for the use and operation of the device, must be carefully read and observed.

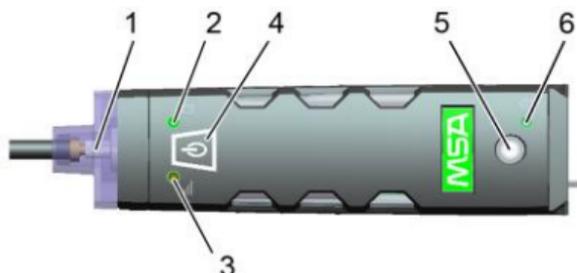

1 Filter

2 Battery LED


3 Flow LED

4 POWER ON/OFF button

5 Horn

6 Charge LED


### Setup for Wand

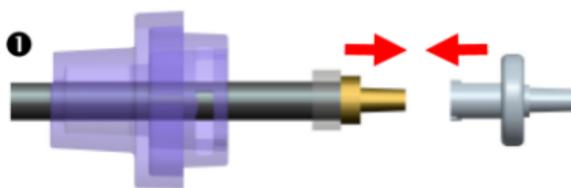


2



3

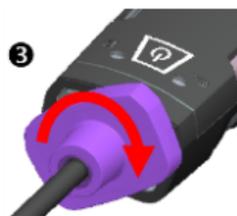

## Setup for Sample Line

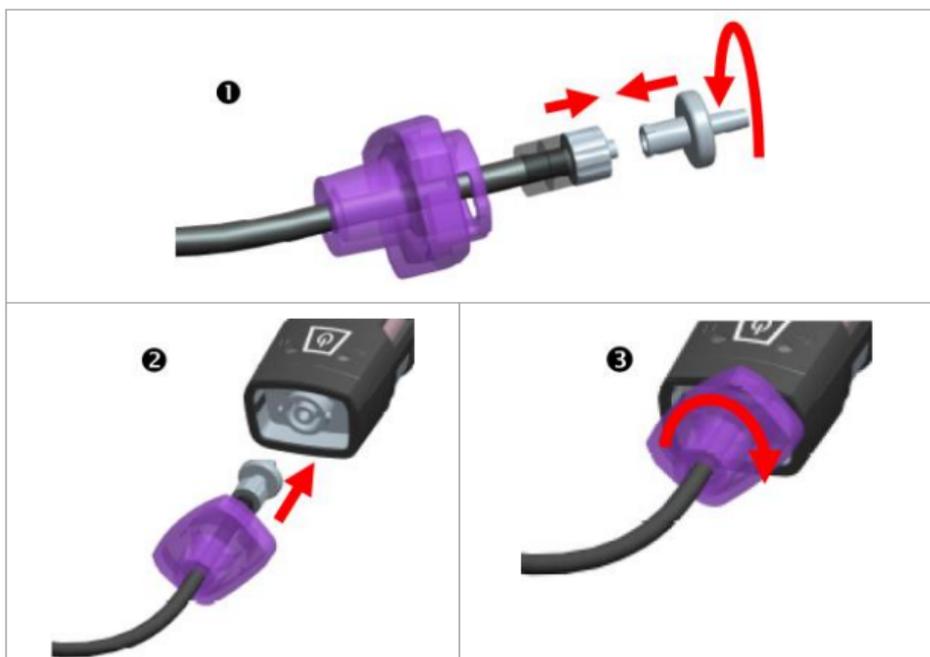

## Setup Coupling Hose



## Startup

- (1) Press the POWER ON/OFF button and turn the ALTAIR Pump Probe on.
- (2) Wait for Flow LED to flash GREEN
- (3) Perform a flow check by blocking the inlet. Flow LED should turn RED indicating flow fault.
- (4) Press the POWER ON/OFF button to reset and restart pump.
- (5) To turn of the ALTAIR Pump Probe Press and hold the POWER ON/OFF button for about three seconds.