
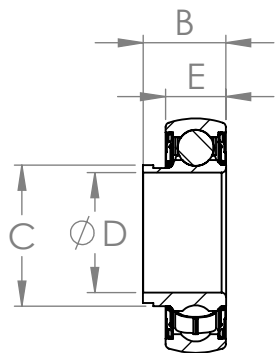
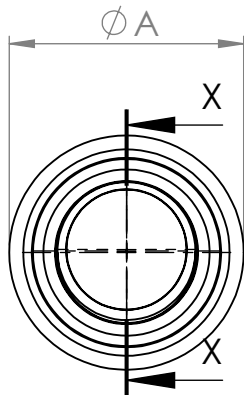


Adapter Bearings




PART NUMBER	A	B	C	D	E
PRA012RRB	47	21.3	24.3	19	14
PRA014RRB	52	21.3	33.75	22.2	15
PRA100RR	52	21.3	33.75	25.4	15
PRA100RRB	52	21.3	33.75	25.4	15
PRA102RRB	62	23.75	40.8	25.4	16
PRA103RR2	62	23.75	40.8	28.55	16
PRA103RRB	62	23.75	40.8	30.15	16
PRA103RRB2	62	23.75	40.8	31.75	16
PRA104RRB	72	23.4	46.75	31.75	17
PRA106RRB	72	23.4	46.75	31.75	17
PRA108RRB	80	30	52.9	38	18

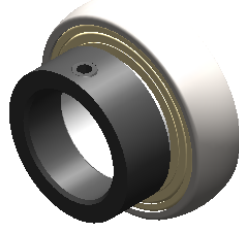

SECTION X-X

Adapter Bearings (Greaseable)



PART NUMBER	A	B	C	D	E	F
PGRA100RRB	52	21.4	33.75	25.4	15	2.25
PGRA103RRB2	62	23.75	40.8	31.75	16	2.4
PGRA104RRB	72	25.35	46.75	31.75	17	2

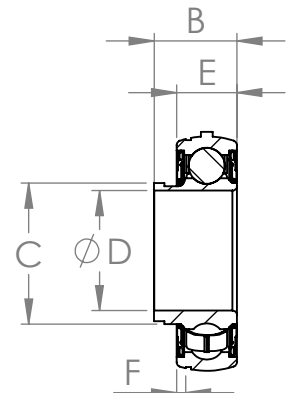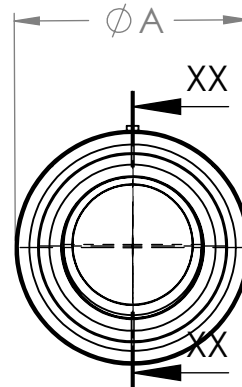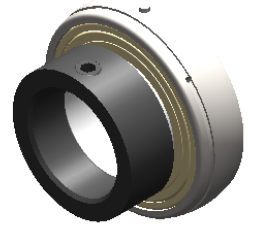

SECTION XX-XX

Adapter Bearings Collar

PART NUMBER	F	G	H	J
PRA012RRB	32	13.5	26.75	19.2
PRA014RRB	38.05	13.5	31.9	22.3
PRA100RR	38.05	13.5	31.9	25.5
PRA100RRB	38.05	13.5	31.9	25.5
PRA102RRB	44.3	15.9	38.1	28.75
PRA103RR2	44.3	15.9	38.15	31.9
PRA103RRB	44.3	15.9	38.05	30.3
PRA103RRB2	44.3	15.9	38.2	31.9
PRA104RRB	55.7	17.6	44.9	31.9
PRA106RRB	55.55	17.25	41.85	35.1
PRA108RRB	60.3	18.45	49.85	38.3
PGRA100RRB	37.9	13.5	31.9	25.5
PGRA103RRB2	44.5	15.9	38.2	32
PGRA104RRB	55.4	17.4	44.9	32

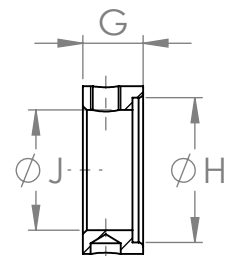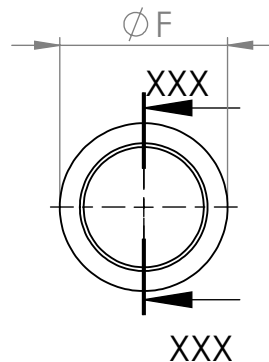

SECTION XXX-XXX



ADAPTER BEARINGS

SIZE DWG. NO.

A

1

SCALE:1:2

WEIGHT:

SHEET 1 OF 1