

Extend2Fit® CONVERTIBLE CAR SEAT

Read This Instruction Manual



PD348857D



Do not install or use this child restraint until you read and understand the instructions in this manual.

FAILURE TO PROPERLY USE THIS CHILD RESTRAINT INCREASES THE RISK OF SERIOUS INJURY OR DEATH IN A SUDDEN STOP OR CRASH.

1 Important

Pages 6-23

- 1-A A Quick Guide to Your Manual
- 1-B Welcome to the Graco Family
- 1-C Right Mode of Use
- 1-D Before You Begin

Register This Car Seat If You Need Help Certification Car Seat's Useful Life Vehicle Seat Protection Warm Weather Use

1-E Safety Warnings

2 Features

Pages 24-29

2-A Car Seat Features

3 Rear-Facing Use

Pages 30-47

- 3-A Rear-Facing
- 3-B Installing Rear-Facing With Lower Anchors
- 3-C Install Rear-Facing With Vehicle Seat Belt

4 Forward-Facing Use

Pages 48-61

- 4-A Forward-Facing
- 4-B Installing Forward-Facing With LATCH
- 4-C Install Forward-Facing With Vehicle Seat Belt

5 Securing Child

Pages 62-69

5-A Securing Child 5-Point Harness

6 Accessories

Page 70

7 Moving the Lower Anchors

Pages 71-73

8 Additional Information

Pages 74-84

- 8-A How to Unistall Lower Anchors and Tether
- 8-B Choosing Vehicle Seat Location
- 8-C Unsafe Vehicle Seat Locations
- 8-D Vehicle Seat Belts

9 Cleaning Seat Pad

Pages 85-95

- 9-A Cleaning Seat Pad
- 9-B Cleaning Crotch Buckle
- 9-C Cleaning Harness, Lower Anchor and Tether Straps



1-A A Quick Guide to Your Manual

This car seat is for children: Rear-Facing: 4-50 lb (1.8-22.5 kg)
Forward Facing: 22-65 lb (10-30 kg)

 Children less than 22 lb (10 kg) MUST use this car seat rear-facing. Review section 1-C for more information.

Car Seat Assembly (On Select Models)

Adult Assembly Required 1. Attach Cup Holders

You MUST attach cup holders. Remove seat cover. Line up tab on bottom of cupholder with hole in shell. Press and snap into place. Replace cover.





Get to Know Your Car Seat

Review section 2-A to see all of the features of this car seat.

What Seating Location Should I Use?

The best seating location for this car seat is one that:

· Is recommended by your vehicle owner's manual, and

Results in a secure installation of this car seat.

Some vehicles have specific requirements for where the car seat can be installed, so be sure to check your vehicle owner's manual for available seating positions, if any. Review section 8-B, 8-C of this manual AND your vehicle owner's manual.

According to accident statistics, the safest place for your child in any vehicle is the back seat. The center of the back seat can be the safest during a possible side impact.



Which Installation Method Should I Use?

This car seat can be installed in your vehicle using either the vehicle seat belt **OR** Lower Anchor Attachment **OR** the LATCH system. All are equally safe to use. DO NOT USE BOTH AT THE SAME TIME. Graco allows the securing of the car seat with LATCH system in the booster mode, only if the vehicle manufacture allows it.

Vehicle Seat Belt: Review section 8 and your vehicle owner's manual to learn how to install your car seat with the vehicle seat belts.


LATCH or Lower Anchor Attachment: The LATCH system or lower anchor attachment allows you to securely attach your safety seat in your car without using the vehicle seat belt and possibly to get a better fit. All 2003 and newer model year vehicles are required to have a LATCH system, although some manufacturers began including LATCH earlier. Some vehicle owner manuals use the term ISOFIX to identify the LATCH system.



What is LATCH?

LATCH consists of lower anchors and tether anchors, which are built-in to your vehicle, and lower anchor attachment that are built-in to your car seat. Lower anchors are used INSTEAD of the vehicle's seat belt to secure the child seat to the vehicle. Tethers are used IN ADDITION to the lower anchors OR the vehicle's seat belt to secure a forward-facing car seat to the vehicle.

Review your vehicle's owner manual for exact location and use.

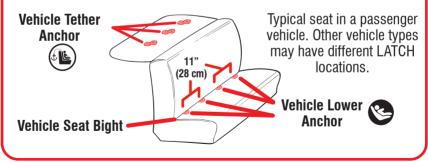


When Installing Rear-Facing & Forward-Facing

Lower Anchorage Attachment

The lower anchorage system consists of two lower anchors, which are built-in to your vehicle, and lower anchor attachment that are built-in your car seat. Review section 3-B & 4-B of this manual AND your vehicle owner's manual.


Lower anchor attachment can ONLY be used if the vehicle lower anchor spacing is 11 inches (28 cm) from the center of one lower anchor to the center of the other lower anchor.

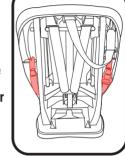

Vehicle Seat Belt

There are two types of vehicle seat belts that can be used. Lap/Shoulder Seat Belt or Lap Only Seat Belt.

Review section 3-C & 4-C of this manual AND your vehicle owner's manual.





Does Your Car Seat Fit Your Child Correctly?

To make sure your child is secured properly, review section 3 and 4 to understand all of the actions you need to take to properly adjust the car seat to fit your child.

For Rear-Facing, You Need to Adjust:

Harness Height, Rear-Facing (A)


Harness straps at or just below the child's shoulders and top of head **must** be at least 1" (2.5 cm) below the headrest adjustment lever **(B)**. Review section 5.

Buckle Position (C)

The correct slot is the one that is closest to your child without being underneath them. Review section 5.

Harness Tightness (D)

If your fingers slide off the harness straps without pinching the straps, it is tight enough. Review section 5.

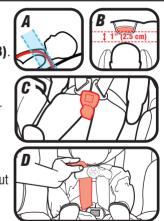

For Forward-Facing, You Need to Adjust:

Harness Height, Forward-Facing (A)

Harness straps at or just above the child's shoulders and top of child's ears below top of headrest **(B)**. Review section 5.



The crotch strap must be in the front-most slot when forward facing.

Harness Tightness (D)

If your fingers slide off the harness straps without pinching the straps, it is tight enough. Review section 5.





Rear-Facing Installation

Car Seat Does Not Move More than 1" (2.5 cm) at the Belt Path (A)

Review section 3

Check level indicator (B)

Review section 3

Harness Straps at or Just Below Child's Shoulders (C) Review section 5

Chest Clip Even With Armpits (D)

Review section 5 **Cannot Pinch Harness Straps**

at the Shoulder (E)

Review section 5











1 Important

Forward-Facing Installation

Use the top tether strap when using forward-facing (A)

When used properly, the top tether helps reduce injury in a sudden stop or crash.

Review section 4

Car Seat Does Not Move More than 1" (2.5 cm) at the Belt Path (B)

Review section 4


Harness Straps at or Just Above Child's Shoulders (C)

Review section 5

Chest Clip Even With Armpits (D)Review section 5

Cannot Pinch Harness Straps at the Shoulder (E)

Review section 5

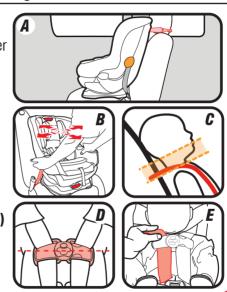



1-B Welcome to the Graco Family!

Your child's safety depends on you. No car seat can guarantee protection from injury in every situation, but proper use helps reduce the risk of serious injury or death.

Even if this car seat seems easy to figure out on your own, you must follow the detailed instructions in this instruction manual to ensure the steps below are performed correctly.

1-C Right Mode of Use

4 lb	22 lb	50 lb	65 lb
(1.8 kg)	(10 kg)	(22.5 kg)	(30 kg)

Rear-Facing with 5-Point Harness

4-22 lb (1.8-10 kg) less than 1 year old **MUST** be rearfacing.

22-50 lb (10-22.5 kg) **SHOULD** be rear-facing.

Forward-Facing with 5-Point Harness

22-50 lb (10-22.5 kg) can sit upright unassisted **CAN** be forward-facing.

50-65 lb (22.5-30 kg) **MUST** be forward-facing.

^{*}Check your state laws and the AAP/NHTSA recommendations. See page 21 for more information.



1-D Before You Begin

Register This Child Restraint

Please fill out the prepaid registration postcard attached to the harness and mail it in today or register online at www.gracobaby.com/carseatregistration.

Child restraints could be recalled for safety reasons. You must register this restraint to be reached in a recall. Send your name, address, and the restraint's model number and manufacturing date to:

Graco Children's Products, Inc.

Attn: Customer Service P.O. Box 169, Elverson, PA 19520-9901

or call 1-800-345-4109 or register online at

www.gracobaby.com/carseatregistration

For recall information, call the U.S. Government's Vehicle Safety Hotline at 1-888-327-4236 (TTY: 1–800–424–9153), or go to http://www.NHTSA.gov.

For future reference or if you change addresses, record the model name, model number, date of manufacture and purchase date of this car seat on the below. You can find this information either on the registration card if you still have it or on the date label located on the back of the car seat.

(j
	_
	=

Model Name	
Model Number	
Date of Manufacture	
Date of Purchase	

If You Need Help

In the U.S.A, please contact our Customer Service Department with any questions you may have concerning parts, use, or maintenance. When you contact us, please have your product's model number and date of manufacture ready so that we may help you efficiently. These numbers can be found on a sticker on the back side of your car seat.

For additional resources or to get your car seat checked by a child passenger safety technician, please visit the following web sites:

www.nhtsa.gov • www.seatcheck.org • www.safekids.org



Certification

This child restraint meets or exceeds all applicable requirements of Federal motor vehicle safety standard 213 for use in motor vehicles.



This child restraint is certified for use in aircraft. Use only on forward-facing aircraft seats. Follow the instructions for vehicle installation. For rear-facing installation, see section 3-C and 8-D Lap Belt Installation. For forward-facing installation, see section 4-C and 8-D Lap Belt Installation, but do not use tether. Contact the airline for their specific polices.

Car Seat's Useful Life

STOP using this car seat and throw it away 10 years after the date of manufacture. Look for this sticker on back of the car seat.

Graco Children's Products Inc. advises against loaning or passing along a car seat unless you know the complete history of the product. We also advise against purchasing a car seat second hand.

Vehicle Seat Protection

Protect vehicle seat. Use a car seat mat, towel, or thin blanket under and behind car seat.

Warm Weather Use

Car seat parts can get very hot in the sun or warm weather. To avoid burns, always check before putting child in car seat.

1-E Safety Warnings

No car seat can guarantee protection from injury in every situation, but proper use helps reduce the risk of serious injury or death. READ THIS MANUAL CAREFULLY.

AWARNING!

Failure to follow these instructions and child restraint's labels can result in child striking the vehicle's interior during a sudden stop or crash.






! NEVER PLACE THIS CHILD RESTRAINT REAR-FACING IN A VEHICLE SEATING LOCATION THAT HAS AN ACTIVE FRONT AIR BAG.

If an air bag inflates, it can hit the child and car seat with great force and cause serious injury or death to your child.

- ! Review your vehicle owner's manual for more information about air bags and car seat use.
- ! If your vehicle does not have a back seat, review your vehicle owner's manual.
- ! Choose the correct mode of use for the car seat depending on your child's size. Infants less than 22 lb. (10 kg) MUST use this car seat rear-facing.
- ! Select a suitable location for the car seat in your vehicle.
- ! Secure car seat with a vehicle seat belt or lower anchor attachment that is properly routed as shown in this manual.



- recommendations, for car seat usage.*

 Vehicle seat belt system MUST hold car seat securely. Not all vehicle seat belts can be used with a car seat.
- ! If vehicle seat belt does not hold car seat securely, read "Vehicle Seat Belts" section 8-D and vour vehicle owner's manual.
- ! Always secure car seat with lower anchor attachment or a vehicle seat belt, even when unoccupied. In a crash, an unsecured car seat can injure passengers.

^{*}Graco Supports the American Academy of Pediatrics and National Highway Traffic Safety Administration's Car Seat Guidelines. Visit www.gracobaby.com/en-US/safety for information on car seat usage recommendations.


- ! If car seat is in a crash, it must be replaced. DO NOT use it again! A crash can cause unseen damage and using it again could result in serious injury or death.
- ! DO NOT use car seat if it is damaged or missing parts.
- ! DO NOT use accessories or parts other than those provided by Graco except for a thin towel or mat to protect your vehicle seat or a rolled towels or pool noodles to help get your car seat level. Their use could alter the performance of the car seat.
- ! DO NOT remove LATCH system from car seat. If using vehicle seat belt to secure car seat, lower anchor connectors must be stored.
- ! Never leave child unattended, even when sleeping. Child may become tangled in harness straps and suffocate or strangle.
- ! Rear-facing car seat must be properly leveled:
 - Too reclined can result in injury or ejection.
 - Too upright can result in breathing difficulties.




- ! Never attach two lower anchor connectors to one vehicle lower anchor point unless specifically allowed by the vehicle manufacturer.
- ! Do not use both the vehicle belt and lower achorage attachment at the same time when using the car seat rear or forward facing.

Note: Preterm or low birth weight infants may be at special risk in a vehicle or aircraft. According to the AAP, these infants may suffer breathing issues if improperly reclined in a car seat. When rear-facing, use the corrected age for preemies. Graco advises that you have your physician or hospital staff evaluate your infant and recommend the proper car seat or car bed before you and your infant leave the hospital.


2-A Car Seat Features

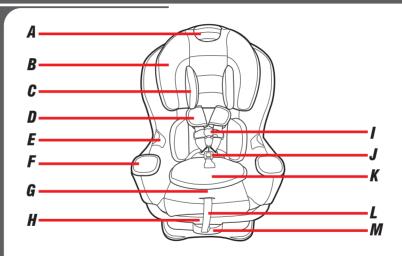


- A Height Adjust Lever
- **B** Headrest
- **C** Head Support
- **D** Harness Cover
- E Buckle Pockets
- F Cupholder
- **G Harness Release Lever** (under seat pad)
- H Extender Handle
- I Chest Clip
- J Harness Buckle
- K Body Support
- L Harness Adjustment Strap
- M Base Recline Handle

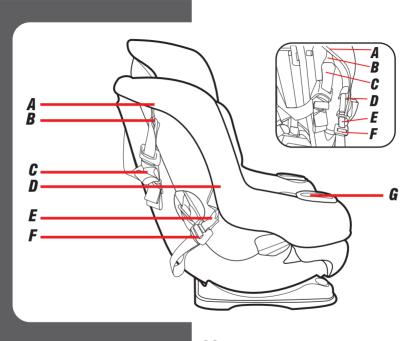

- A Tether Storage Ring
- **B** Tether Hook
- C Tether Strap
- **D** Lower Anchor Attachment Storage
- E Lower Anchor Strap
- F Lower Anchor Adjuster
- G Cup Holder
- **H** Level Indicator



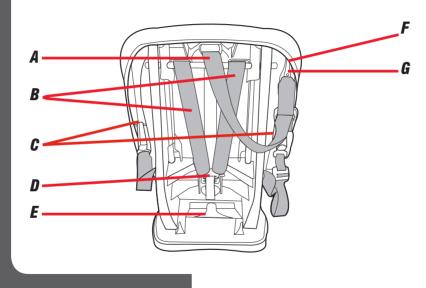

- A Tether Strap
- **B** Harness Straps
- C Lower Anchor Attachment Storage
- **D** Splitter Plate
- **E** Instruction Manual Storage
- F Tether Storage Bar
- **G** Tether Hook

3-A Rear-Facing



Lower Anchor Attachment Do not install by this method for a child weighing more than 45 lb (20 kg)

Rear-Facing: 4-50 lb (1.8-22.5 kg) and whose head is at least 1" (2.5 cm) below the headrest adjustment handle

- Infants who weigh less than 22 lb (10 kg)
 MUST be rear-facing.
- Place car seat rear-facing in the vehicle back seat.
- Make sure lower anchor attachment or vehicle seat belt is routed through the rearfacing belt path marked with a blue label.
- Install this car seat tightly in your vehicle. Car seat **should not move** at the rear-facing belt path more than 1" (2.5 cm) from side to side, front to back.
- Check recline level making sure the ball is within the blue area.





3 Real Facing

30

- Harness straps need to be even with or just below the top of child's shoulders and chest clip is at armpit level.
- Children are safer riding rear-facing and should ride rear-facing as long as possible, until they reach the maximum rear-facing height or weight rating for their car seat. Then children should ride forward-facing, using the built-in harness system for as long as possible until they reach the maximum forward-facing weight or height for their car seat. Be sure to check your local and state laws, as well as AAP and NHTSA recommendations, for car seat usage.

AWARNING!



NEVER place this child restraint rear-facing in a vehicle seating location that has an active front air bag.



Vehicle Seat Lap/Shoulder Belt




Vehicle Seat Lap Belt



3 Rear Facing

When reading the level indicator,

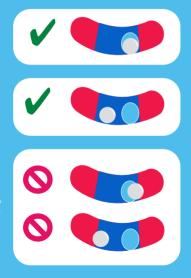

Vehicle MUST be on level ground.

Use corrected age for preemies.

- If the ball is entirely in light blue, the restraint is level for infants 0+ months in age.
- If the ball is in light blue and dark blue, the restraint is level for a child 3+ months in age.
- If the ball is in **RED**, child restraint is **NOT** level. You must adjust your recline position.

3-B Installing Rear-Facing With Lower Anchors


Review your vehicle's owner manual for lower anchor location and use.

1. Store Tether Strap

Attach tether hook to the plastic bar on right side of the car seat.


2. Remove Lower Anchor Connectors from Storage Location

Push in on the red buttons on the lower anchor connectors and remove from storage position.

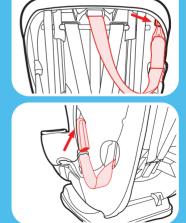



3 Rear Facing

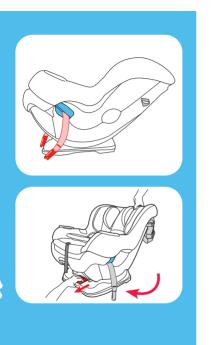


3. Make Sure Lower Anchor Strap is in the Rear-Facing Belt Path Marked With a Blue Label

If not, See section 7 to move lower anchor attachment.

4. Recline the Car Seat

Pull out on handle on front of child restraint and adjust to one of the four rear-facing positions.




5. Place Car Seat Rear-Facing in Back Seat of the Vehicle

Place rear-facing in vehicle seat and center the car seat between the lower anchors. The base should sit as flat as possible on the vehicle seat.


6. To Keep Your Child Rear-Facing Longer

For additional legroom, squeeze the adjustment handle and pull the extension panel out. The extension panel has 4 positions.

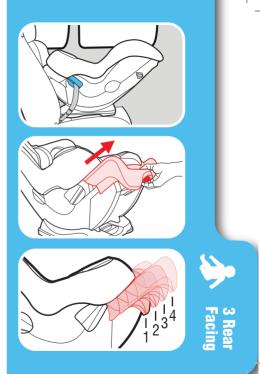









3 Rear Facing

7. Make Sure Base is a minimum of 80% on Vehicle Seat



8. Check the Level Indicator

Vehicle **MUST** be on level ground. **Ball must be completely in the blue zone**. Readjust the incline if needed. Or if needed, rolled towels may be placed under the car seat at the vehicle seat crease, until the ball is completely in the blue zone.


For infants 3 months and under, the **ball must completely cover** the light blue circle.

9. Extend the Lower Anchor Strap

For easier installation, extend the lower anchor strap to its maximum length by pressing the grey button and pulling on the strap.

10. Attach Lower Anchor Connectors to Vehicle's Lower Anchors

Lower anchor strap should lie flat and not be twisted.















3 Rear Facing

11. Tighten the Lower Anchor Strap

Press down firmly in the center of the car seat while tightening the lower anchor strap. You may need to tighten through the rear-facing belt path as shown.



12. Test For Tightness

Grab the sides of the seat where the lower anchor strap is and slide the car seat side-to-side and front-to-back.

If the seat moves less than 1" (2.5 cm), it is tight enough.

13. Check the Level Indicator

Vehicle **MUST** be on level ground. **Ball must be completely in the blue zone**. Readjust if needed.

For infants 3 months and under, the **ball must completely cover** the light blue circle.

If needed, rolled towels may be placed under the car seat at the vehicle seat crease, until the ball is completely in the blue zone.

See section 5 to secure your child. Recheck level indicator with child in seat.





Is Everything Correct?













3 Rear Facing

Car Seat Does Not Move More than 1" (2.5 cm) at the Belt Path

Level Indicator's Ball in the Blue Zone and Vehicle on Level Ground



Harness Straps at or Just Below the Child's Shoulders.

Review section 5

Chest Clip Even With Armpits

Review section 5

Cannot Pinch Harness Straps at the Shoulder

Review section 5

40

3-C Install Rear-Facing with Vehicle Seat Belt


1. Store Tether and Lower Anchor Strap


Attach tether hook and lower anchor connectors to the plastic bars as shown.



2. Recline the Car Seat

Pull out on handle on front of child restraint and adjust to one of the 4 rear-facing positions.

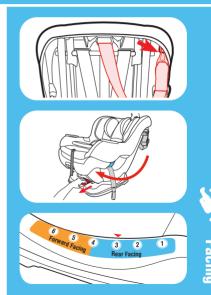

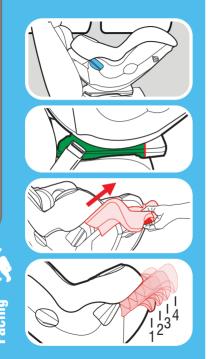

3. Place Car Seat Rear-Facing in Back Seat of the Vehicle

Place rear-facing in vehicle seat. The base should sit as flat as possible on the vehicle seat.

4. Make Sure Base is a minimum of 80% on Vehicle Seat.



5. To Keep Your Child Rear-Facing Longer


For additional legroom, squeeze the adjustment handle and pull the extension panel out. The extension panel has 4 positions.

6. Check the Level Indicator

Vehicle **MUST** be on level ground. **Ball must be completely in the blue zone**. Readjust if needed.

For infants 3 months and under, the **ball must completely cover** the light blue circle.

If needed, rolled towels may be placed under the car seat at the vehicle seat crease, until the ball is completely in the blue zone.

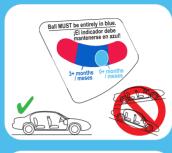





Review your vehicle's owner manual for vehicle seat belt use





7. Route the Vehicle Seat Belt

Thread vehicle seat belt through the rear-facing belt path (marked with a blue label) and out the other side. Buckle it. The seat belt should lie as flat as possible and not be twisted.

Note: It may be easier to route the vehicle seat belt by lifting seat pad up to expose the belt path.

Make sure the vehicle seat belt is in front of the buckle strap when the buckle is in the inner-most position, and in behind when in the outer-most position.





8. Lock Vehicle Seat Belt

In most vehicles today, slowly pull the shoulder belt all the way out and then let it go back in. You will hear a clicking sound. Slowly pull out on the belt and it should be locked. If not, review your car's owner manual and section 8-D.

9. Tighten the Vehicle Seat Belt

Press down firmly in the center of the car seat. Pull on the shoulder belt to tighten while feeding the slack back in the retractor.

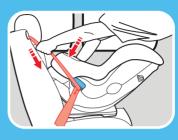











3 Rear Facing

10. Test For Tightness

Grab the sides of the seat where the vehicle seat belt is and slide the car seat side-to-side and front-to-back.

If the seat moves less than 1" (2.5 cm), it is tight enough.

11. Check the Level Indicator

Vehicle **MUST** be on level ground. **Ball must be completely in the blue zone**. Readjust if needed.

For infants 3 months and under, the **ball must completely cover** the light blue circle.

If needed, rolled towels may be placed under the car seat at the vehicle seat crease, until the ball is completely in the blue zone.

See section 5 to secure your child.Recheck level indicator with child in seat.

Is Everything Correct?

Car Seat Does Not Move More than 1" (2.5 cm) at the Belt Path

Level Indicator's Ball in the Blue Zone and Vehicle on Level Ground



Harness Straps at or Just Below the Child's Shoulders.

Review section 5

Chest Clip Even With ArmpitsReview section 5

Cannot Pinch Harness Straps at the Shoulder

Review section 5







4-A Forward-Facing

4 Forward Facing



LATCH

Do not install by this method for a child weighing more than 45 lb (20 kg)

Forward-Facing: 22-65 lb (10-30 kg) and 49 inches (125 cm) or less and at least one year old

- For children 22-40 lb (10-18 kg) you
 MUST use recline position 4.
- For children over 40 lb (18.1 kg) you MUST use recline position 5 or 6.
- The crotch strap must be in the front most slot when forward facing.
- Place car seat forward-facing in the vehicle back seat.
- Make sure lower anchor strap or vehicle seat belt is routed through the forwardfacing belt path marked with a orange label.

- Install this car seat tightly in your vehicle.
 Car seat **should not move** at the forward-facing belt path more than 1" (2.5 cm) from side to side, front to back.
- Harness straps need to be even with or just above the top of child's shoulders and chest clip is at armpit level.
- **DO NOT USE** the extension panel forward-facing.
- Children are safer riding rear-facing and should ride rear-facing as long as possible, until they reach the maximum rear-facing height or weight rating for their car seat. Then children should ride forward-facing, using the built-in harness system for as long as possible until they reach the maximum forwardfacing weight or height for their car seat. Be sure to check your local and state laws, as well as AAP and NHTSA recommendations, for car seat usage.



Vehicle Lap/Shoulder Seat Belt with Tether




Vehicle Seat Lap Belt with Tether



4 Forward Facing

4-B Install Forward-Facing with LATCH


Review your vehicle's owner manual for LATCH location and use.

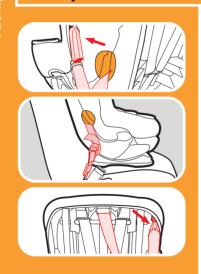

- 1. Remove Lower Anchor Strap from Storage Location
- 2. Make Sure Lower Anchor Strap is in the Forward-Facing Belt Path Marked with Orange Label

If not, See section 7 to move lower anchor strap.

3. Unhook Tether Strap From Storage Unhook tether and lay it in the seat.




4. Adjust the Car Seat


For Children 22-40 lb (10-18 kg) MUST use recline position 4.

For Children Over 40 lb (18.1 kg) MUST use recline position 5 or 6.

5. Place Car Seat Forward Facing in Back Seat of the Vehicle

Place forward-facing in vehicle seat and center the car seat between the lower anchors. The base should sit as flat as possible on the vehicle seat.

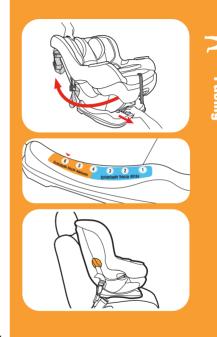

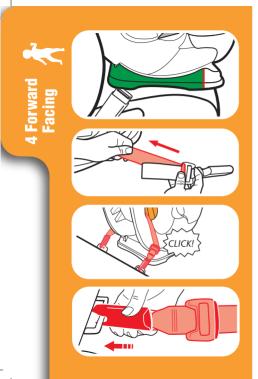

6. Make Sure Base is a minimum 80% on Vehicle Seat



7. Extend the Lower Anchor Strap

For easier installation, extend the lower anchor strap to its maximum length by pressing the grey button and pulling on the strap.

8. Attach Lower Anchor Connectors to Vehicle's Lower Anchors

Lower anchor strap should not be twisted.

9. Tighten the Lower Anchor Strap

Press down firmly in the center of the car seat while tightening the lower anchor strap.


10. Attach The Tether

Extend the tether by pressing the grey button and pulling out on the strap and attach.

Consult vehicle's owner manual for specific location.
















11. Tighten Tether Strap

Push the car seat back while tightening the tether strap to remove all the slack.

12. Test For Tightness

Grab the sides of the seat where the lower anchor strap is and slide the car seat side-to-side and front-to-back. If the seat moves less than 1" (2.5 cm), it is tight enough.

See section 5-A to secure your child.

Is Everything Correct?

Car Seat Does Not Move More than 1" (2.5 cm) at the Belt Path

Harness Straps at or Just Above the Child's Shoulders.

Review section 5

Chest Clip Even With Armpits

Review section 5

Cannot Pinch Harness Straps at the Shoulder

Review section 5












4 Forward Facing



l Forward Facing

4-C Install Forward-Facing with Vehicle Seat Belt

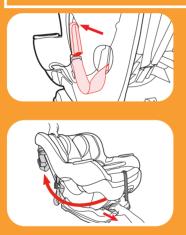


1. Store Lower Anchor Strap

Attach lower anchor connectors to the plastic bars as shown.

2. Adjust the Car Seat

For Children 22-40 lb (10-18 kg) MUST use recline position 4. For Children Over 40 lb (18.1 kg) MUST use recline position 5 or 6.



3. Unhook Tether Strap From Storage


Unhook tether and lay it in the seat.



Place forward-facing in vehicle seat. The base should sit as flat as possible on the vehicle seat.


5. Make Sure Base is a minimum of 80% on Vehicle Seat.




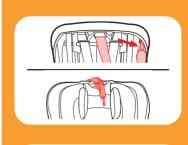







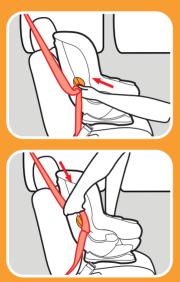

6. Route the Vehicle Seat Belt

Thread vehicle seat belt through the forward-facing belt path (marked with a orange label) and out the other side. Buckle it. The seat belt should lie as flat as possible and not be twisted.

7. Lock the Vehicle Seat Belt

In most vehicles today, slowly pull the shoulder belt all the way out and then let it go back in. You will hear a clicking sound. Slowly pull out on the belt and it should be locked. If not, review your car's owner manual and section 8-D.

8. Tighten the Vehicle Seat Belt


Press down firmly in the center of the car seat. Pull on the shoulder belt to tighten while feeding the slack back in the retractor.


9. Attach The Tether

Extend the tether by pressing the grey button and pulling out on the strap and attach. Consult vehicle's owner manual for specific location.

10. Tighten the Tether Strap

Push the car seat back while tightening the tether strap to remove all the slack.

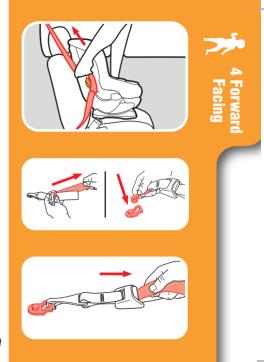

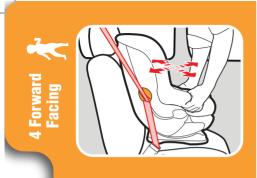

11. Test For Tightness

Grab the sides of the seat where the vehicle seat belt is and slide the car seat side-to-side and front-to-back. If the seat moves less than 1" (2.5 cm), it is tight enough.

See section 5-A to secure your child.

Is Everything Correct?

Car Seat Does Not Move More than 1" (2.5 cm) at the Belt Path

Harness Straps at or Just Above the Child's Shoulders.

Review section 5

Chest Clip Even With Armpits

Review section 5

Cannot Pinch Harness Straps at the Shoulder

Review section 5





4 Forward Facing

WARNING! In cold weather, do not put snowsuits or bulky garments on your child when placing them in the car seat. Bulky clothing can prevent the harness straps from being tightened properly. To keep child warm, buckle your child in the car seat and place a blanket around the child or place the child's coat on backwards after buckling in.





5-A Securing Child 5-point Harness





1. Loosen Harness Straps

Push down on the harness release lever while pulling out on the harness straps at the chest clip.

Unbuckle the chest clip and the crotch buckle. Place harness straps off to the sides.

On select models, place harness straps in buckle storage pockets.

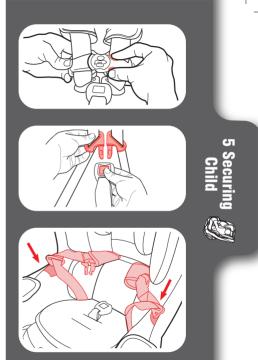

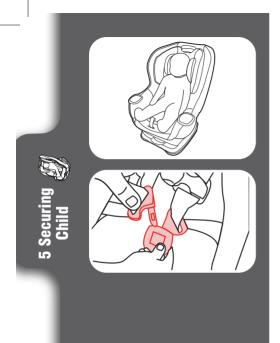

2. Place Your Child in the Seat

Make sure their back is flat against the car seat back.

Avoid bulky or heavy clothing. Doing so will prevent the harness straps from being tightened properly. Place a blanket over the child after you have secured the child.

3. Place Harness Straps OverChild's Shoulders and Buckle

You will hear a "click" when buckle tongues are securely attached. Pull up on each buckle tongue to make sure it is securely attached.

4. Be Sure the Harness Straps Are at the Proper Height

Rear-Facing: Harness straps should be **at or just below** the child's shoulders. Top of head **must** be 1" (2.5 cm) below the headrest adjustment lever.

Forward-Facing: Harness straps should be **at or just above** the child's shoulders. Top of child's ears **below** top of headrest.





Rear-Facing






Forward-Facing











5. To Raise or Lower Headrest/ Harness Height

Squeeze the adjustment handle and move headrest for the proper harness height.



6. Check the Buckle Position

The correct slot is the one that is closest to your child without being underneath them.

The crotch strap must be in the front most slot when forward facing.

7. To Adjust Crotch Strap

Recline the car seat and locate the metal retainer under the car seat shell.


8. Rotate Metal Retainer and Insert It Up Through the Shell and Pad

From the top of the car seat, pull the crotch buckle out.

9. Insert Metal Retainer in the New Crotch Buckle Slot

Reach underneath the car seat and pull the metal retainer through. The crotch strap must be in the frontmost slot when forward facing.



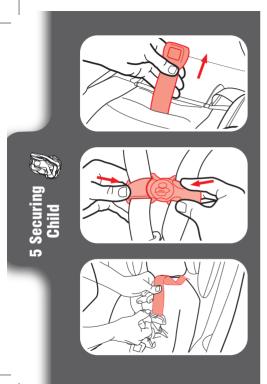

10. Pull Up on Crotch Strap to Make Sure it is Secured

11. Buckle the Chest Clip

You will hear a "click" when the chest clip is securely buckled.

12. Pull All the Slack Out From Around the Waist


Pull up on the harness strap while pushing the chest clip down. Do this to both sides.

13. Tighten the Harness by Pulling the Harness Adjustment Strap


When you are not able to pinch any of the harness webbing at your child's shoulder, the harness is tight enough.

A snug harness should not allow any slack. It lies in a relatively straight line without sagging. It does not press on the child's flesh or push the child's body into an unnatural position.

14. Raise the Chest Clip to Child's Armpit Level

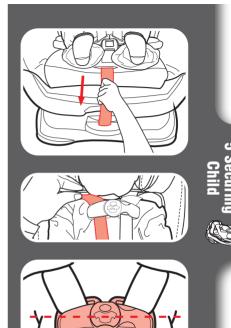

6-A Accessories (on select models)

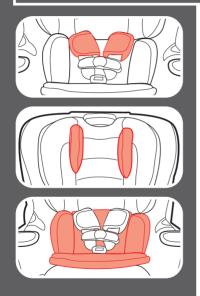

Harness Covers

Make sure that harness covers do not interfere with placement of the chest clip at armpit level. To remove, undo the fastening strips and remove.

Head Support

Slide head support into opening in headrest as shown. Curved bottom of head support allows for head support to be pulled down to fit smaller infants.

Body Support

Use only in the rear-facing mode.

Body support must be used if shoulders are below the lowest harness setting.


Never allow body support to bunch or fold behind child.


70


7-A Moving the Lower Anchor Strap

1. For Ease of Moving the Lower Anchor Strap

- **A.** Undo Snaps and fastening strips in front of child restraint.
- **B.** Pull the lower anchor straps out of the belt path opening, so that the lower anchor connectors end up on the same side of the child restraint.

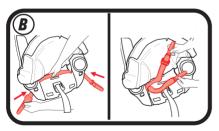

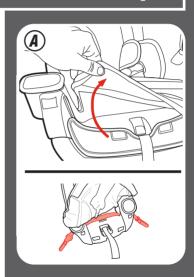

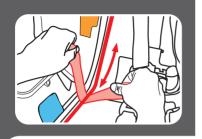

2. Slide Entire Lower Anchor Strap Along Bar to Correct Belt Path Opening

Rear-Facing: Slide lower anchor strap down to the blue label.

Forward-Facing: slide the lower anchor strap up to the orange label.

3. Feed the Lower Anchor Connector with the Adjuster Closest to it Through the Chosen Belt Path










Rear-Facing: Make sure the lower anchor strap is in front of the buckle strap when the buckle is in the inner-most position (A), and in behind when in the outter-most position (B) and that it is flat and is not twisted.

Forward-Facing: Make sure the strap is flat and not twisted.

4. Replace the Seat Pad Fabric on the Front of the Child Restraint.

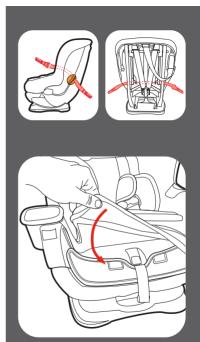

7 Moving Lower Anchors

8-A How to Unistall Lower Anchor Connector and Tether



Lower Anchor Connector

To remove the lower anchor connectors from the lower anchors, push in on the red buttons and pull them off.

Tether

To remove, press the grey button and pull out on the strap to release the tension.

Press in on the hook's spring. Push tether hook in, then lift up and pull away from tether anchor.

8 Additional Information

8-B Choosing Vehicle Seat Location

Review your vehicle owner's manual for seating locations.

The best seating location for this car seat is one that:

- · Is recommended by your vehicle owner's manual, and
- · Results in a secure installation of this car seat

In the event there is no available back seat and / or you have no other option than to place a child in a front passenger seating position (other than rear-facing), the National Highway Traffic Safety Administration (NHTSA) recommends that you take the following steps:

- Ensure the child is properly restrained according to their age and size
- · Move the seat as far back as possible
- Make sure the child is not leaning out of position, such as leaning forward into the deployment path of the air bag
- Set the air bag ON-OFF switch, if available, to the OFF position

8-C Unsafe Vehicle Seat Locations

Never install this car seat in any of the following vehicle seating locations:





rear-facing or side-facing vehicle seats



rear-facing with an active front air bag

8-D Vehicle Seat Belts

Review your vehicle owner's manual for vehicle seat belt use

This car seat can be installed using a vehicle seat belt. To do this, you will need to change the seat belt to a locked mode for use with car seats. With some vehicle seat belts, this is done with the latchplate; with other vehicle seat belts, this is done with the retractor.

Vehicle Seat Belt Terms



Retractor

A device that winds up the unused vehicle seat belt. It is often hidden inside the panels on the walls of the vehicle or in the vehicle seatback.

Latch Plate

The male end of the seat belt with the silver tongue.

Seat Bight

The crease where the vehicle seat back and seat bottom meet.



Identify Your Seat Belt Type

There are two different types of vehicle seat belts that can be used with this car seat:



Lap/Shoulder Belt

3 connections points. Can be used in all car seats modes of use.



Lap Belt Only 2 connection points.

The following types of vehicle seat belts **CANNOT** be used safely with this car seat:



Lap Belt with Motorized Shoulder Belt



Lap Belt or Shoulder Belt Mounted on Door

Belts Forward of the Seat Bight



Some vehicles you may not get a secure fit. Read both your vehicle and car seat manuals.


Lap/Shoulder Belt Installation - Rear-Facing/Forward Facing Modes

Always review your vehicle owner's manual for specific information about your vehicle seat belts.


There are three types of retractors: **ELR (Emergency Locking Retractor), ALR (Automatic Locking Retractor),** and **Switchable (ELR switch to ALR).** To determine your type of retractor, follow these steps:

- **1. Slowly** pull the belt out about halfway and stop.
- 2. Let the belt retract back several inches.
- Try to slowly pull the belt out more. If the belt cannot be pulled any further, it is ALR. If it can be pulled further, go to the next step.
- Slowly pull the belt all the way out, and then allow it to retract several inches.
- Try to pull the belt all the way out again. If it cannot be pulled out, it is Switchable. If it can still be pulled out freely, it is ELR.

Note: Most vehicles manufactured after 1996 will have Switchable retractors in the back seat. If you have any questions about your retractor type, consult your vehicle owner's manual or call Graco for assistance.



How to Lock Your Lap and Shoulder Vehicle Seat Belt

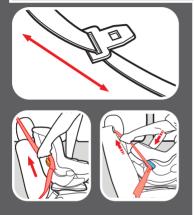

Sliding Latch Plate and Switchable Retractor

A latchplate that slides freely on the belt webbing and cannot, by itself, hold the belt snug around a car seat.

When installing the car seat, route the vehicle seat belt through the proper belt path and buckle it in. **Slowly pull the shoulder belt all the way out to switch it to locking mode.** Then, as you pull the vehicle seat belt tight, feed all the slack back into the retractor.

Grab the sides of the seat at the belt path and slide the seat side-to-side and front-to-back. The seat should not move more than 1" (2.5 cm).

Note: With the vehicle seat belt in this locking mode, all the tension is upwards in the shoulder belt. This may start to tilt your car seat sideways. If this happens, use a locking clip instead of this switching the retractor. See Sliding Latch Plate and ELR Retractor.

Locking Latchplate and ELR Retractor


A latchplate that holds the lap belt snug after it has been adjusted; contains a metal bar on the underside of the hardware that "locks" the belt in position.

When installing the car seat, route the vehicle seat belt through the proper belt path and buckle it in. Then, pull upwards on the shoulder belt so that the lap belt gets tight around the car seat.

Grab the sides of the seat at the belt path and slide the seat side-to-side and front-to-back. The seat should not move more than 1" (2.5 cm).





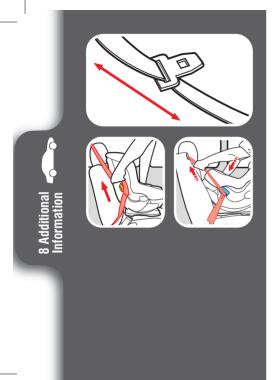

Sliding Latch Plate and ALR Retractor

A latchplate that slides freely on the belt webbing and cannot, by itself, hold the belt snug around a car seat.

Slowly pull the shoulder belt all the way out. Route the vehicle seat belt through the proper belt path and buckle it in. Then, as you pull the vehicle seat belt tight, feed all the slack back into the retractor.

Grab the sides of the seat at the belt path and slide the seat side-to-side and front-to-back. The seat should not move more than 1 inch (2.5 cm).

Sliding Latch Plate and ELR Retractor

A latchplate that slides freely on the belt webbing and cannot, by itself, hold the belt snug around a car seat.


With this retractor, you will need to use the locking clip to lock the vehicle seat belt.

To get a locking clip, call 1-800 345-4109.

Route the vehicle seat belt through the proper belt path and buckle it in. Pull the vehicle seat belt tight. While pushing down on seat, pinch the two straps together behind the buckle tongue. Unbuckle the belt without allowing it to slip.

Attach locking clip to lap and shoulder belts as shown

Rebuckle belt. Check that lap belt does not move by pulling hard. If belt loosens or lengthens, repeat procedure.

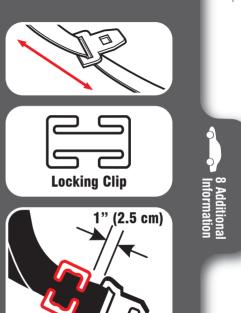


Lap Belt Installation

Always review your vehicle owner's manual for specific information about your vehicle seat belts.



Grab the sides of the seat at the belt path and slide the seat side-to-side and front-to-back. The seat should not move more than 1 inch (2.5 cm).



Locking Latch Plate and No Retractor

When installing the car seat, route the lap seat belt through the proper path and buckle it in. Then, pull upwards on the tail of the belt so that the lap belt gets tight around the car seat.

Sewn On Latch Plate and ALR Slowly pull the lap belt all the way out. Route the vehicle seat lap belt through the proper belt path and buckle it in. Then, pull the lap belt tight while feeding all the slack back into the retractor.



9-A Cleaning Seat Pad

Clean with a damp sponge using mild soap and cool water. Refer to seat pad care tag for washing instructions.

Your model determines how to remove the seat pad. Follow the instructions that match your seat.

Seat Pad (on most models)

Raise the headrest all the way up.


Push down on the harness release lever while pulling out on the harness straps at the chest clip.







9 Care 8 Cleaning

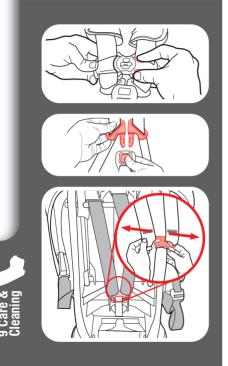


Unbuckle the chest clip and the buckle strap.


Face the rear of the seat and remove the belt straps from splitter plate as shown.

Grab hold of the shoulder straps and pull them out of their slots on the seat pad.

From the back of the seat, undo the elastic straps.

Undo both elastic straps from the sides of the seat.

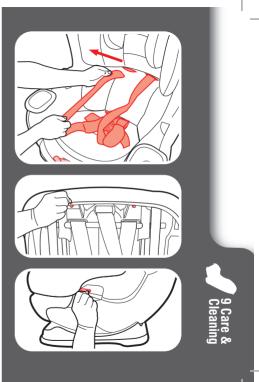

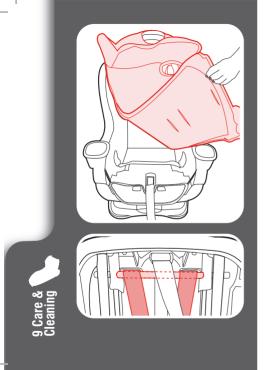

Remove pad from shell.

Machine wash pad in cold water on delicate cycle and drip-dry. DO NOT USE BLEACH.

To put the seat pad back on, reverse preceding steps. Make sure that you rethread the harness straps **OVER THE METAL BAR.** The harness straps **MUST** not be twisted.


Seat Pad (on Rapid Remove[™] models)


With the Rapid Remove™ seat pad, you do not need to uninstall the car seat to clean the seat pad.

Raise headrest all the way up.

From behind the seat undo the fastening strips.

From the front, undo the two seat snaps.

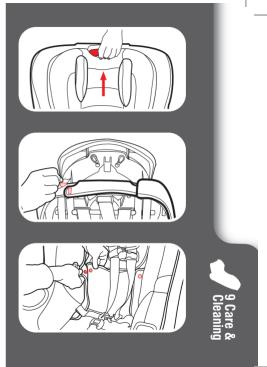

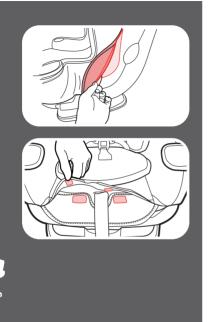

Pull side panel pocket off of side panel.

Undo fastening strips on the front of the seat

Remove pad from shell.

Machine wash pad in cold water on delicate cycle and drip-dry. DO NOT USE BLEACH.

To put the seat pad back on, reverse preceding steps.


Rear Pad

You may need to uninstall the car seat to remove the pad.


Undo elastic loops and remove.

To reattach rear pad:

1. Lower the headrest.

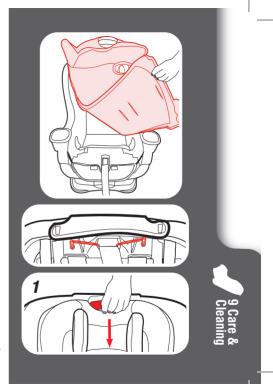

- 2. Attach the shorter loop first.
- **3.** Pull the longer loop behind the shorter loop.
- **4.** Wrap the Longer loop around the shorter loop one time and attach to the hook.



Front Pad

You may need to uninstall the car seat to remove the pad.

Undo the elastic loops on top of the front pad, then undo the pins by pulling the pad away from the seat.

To put the front pad back on, reverse preceding steps.

Head Support Cover


Undo elastic loop underneath head support cover. Pull tab out from behind head support.

Undo the elastic loops on the sides of the headrest.

Peel cover off head support.

Machine wash pad in cold water on delicate cycle and drip-dry. DO NOT USE BLEACH.

To put the head support cover back on, reverse preceding steps.

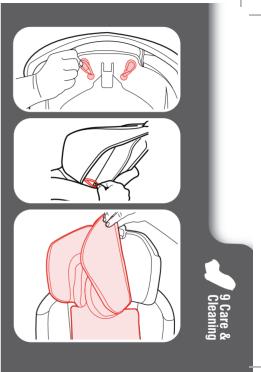

9-B Cleaning Crotch Buckle





WARNING! Inspect and clean buckle from time to time to remove any objects or debris that could prevent latching.

Recline the car seat and locate the metal retainer. Rotate the metal retainer up through the shell and pad. From the front, pull the crotch buckle out.

To clean buckle, place in a cup of warm water and gently agitate the buckle. Press the red button several times while in the water.

DO NOT SUBMERGE THE BUCKLE STRAP. DO NOT USE SOAPS, HOUSEHOLD DETERGENTS or LUBRICANTS.

Shake out excess water and allow to air dry. Repeat steps as needed until it fastens with a click. Re-insert the buckle into the same slot it was removed. Pull up on crotch buckle to make sure it is secured.

9 Care & Cleaning

9-C Cleaning Harness, Lower Anchor and Tether


Surface wash only with mild soap and damp cloth. **DO NOT IMMERSE THE HARNESS STRAPS or LOWER ANCHOR STRAP IN WATER** Doing so may weaken the straps. If harness straps or lower anchor belt are frayed or heavily soiled, contact Customer Service at www.gracobaby.com or 1-800-345-4109.



Replacement Parts

To purchase parts or accessories in the United States, please contact us at the following:

www.gracobaby.com or 1-800-345-4109

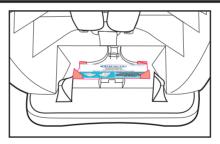

Store instruction manual behind the tab with the instruction book icon as shown.