NBF

Wardrobe Cabinet
Assembly Instructions

## NBF
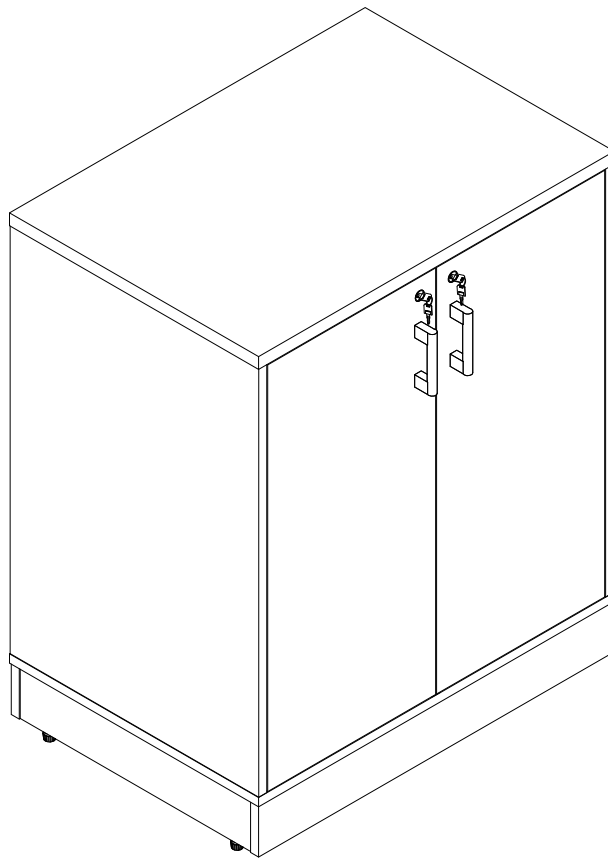
Assembly HARDWARE

S/N	PICTURE	NAME	TOTAL QTY	REMARK
A		CAM SCREW	21+2(SPARE)	
B		KLIX CAM	21+2(SPARE)	
C		CAM COVER STICKER	21+2(SPARE)	use cam covers to cover any klix cam screws
D		WOOD DOWEL	18+2(SPARE)	
E		LEVELER	4+1(SPARE)	
F		SHELF PEG	8+1(SPARE)	
G		HINGE	4PCS	
H		LOCK	2PCS	
I		Connector for rail	2PCS	
J		HANGING RAIL	1PCS	
K		Handle With Screws	2PCS	
L		Ø4*35Screw	4PCS	

PARTS LIST

① TOP PANEL
② LEFT SIDE PANEL
③ RIGHT SIDE PANEL
④ BOTTOM PANEL
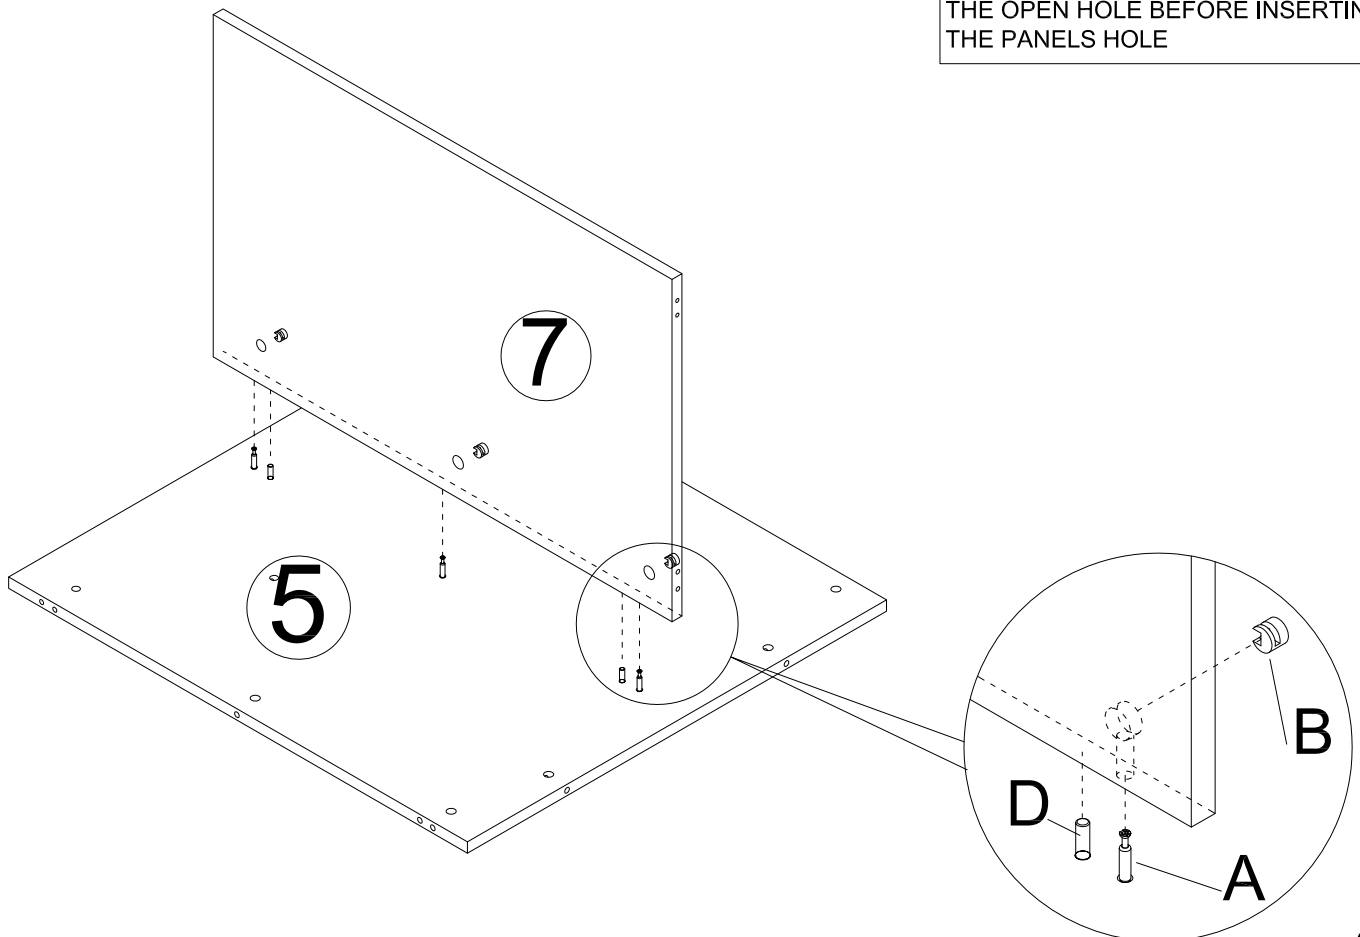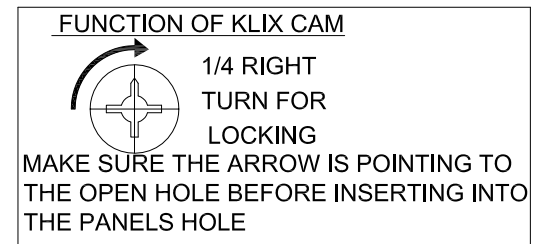⑤ BACK PANEL
⑥ BASE SUPPORT
⑦ CENTER PANEL
⑧ DOOR (2)
⑨ SHELF(2)

2.
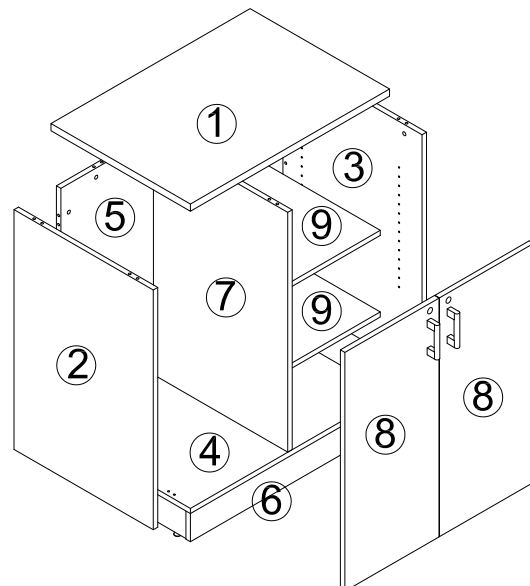
1. INSTALL THE "E" LEVELERS ON THE BOTTOM OF BASE SUPPORT ⑥.
E(4x)

E — Tighten

E

6
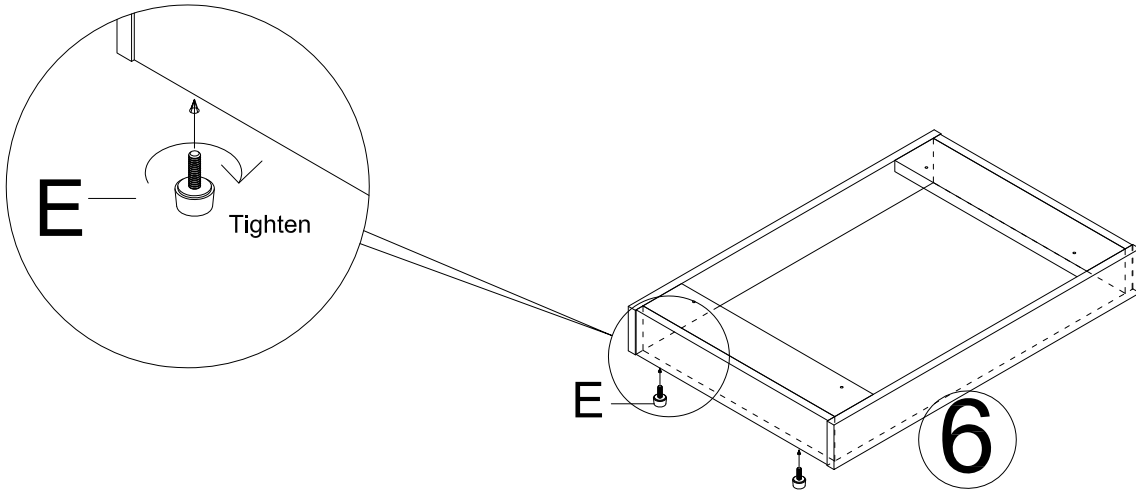
2. INSTALL "A" CAM SCREWS AND "D" DOWELS INTO BACK PANEL ⑤. INSERT "B" KLIX CAMS INTO CENTER PANEL ⑦. CONNECT PANEL ⑤ TO ⑦.
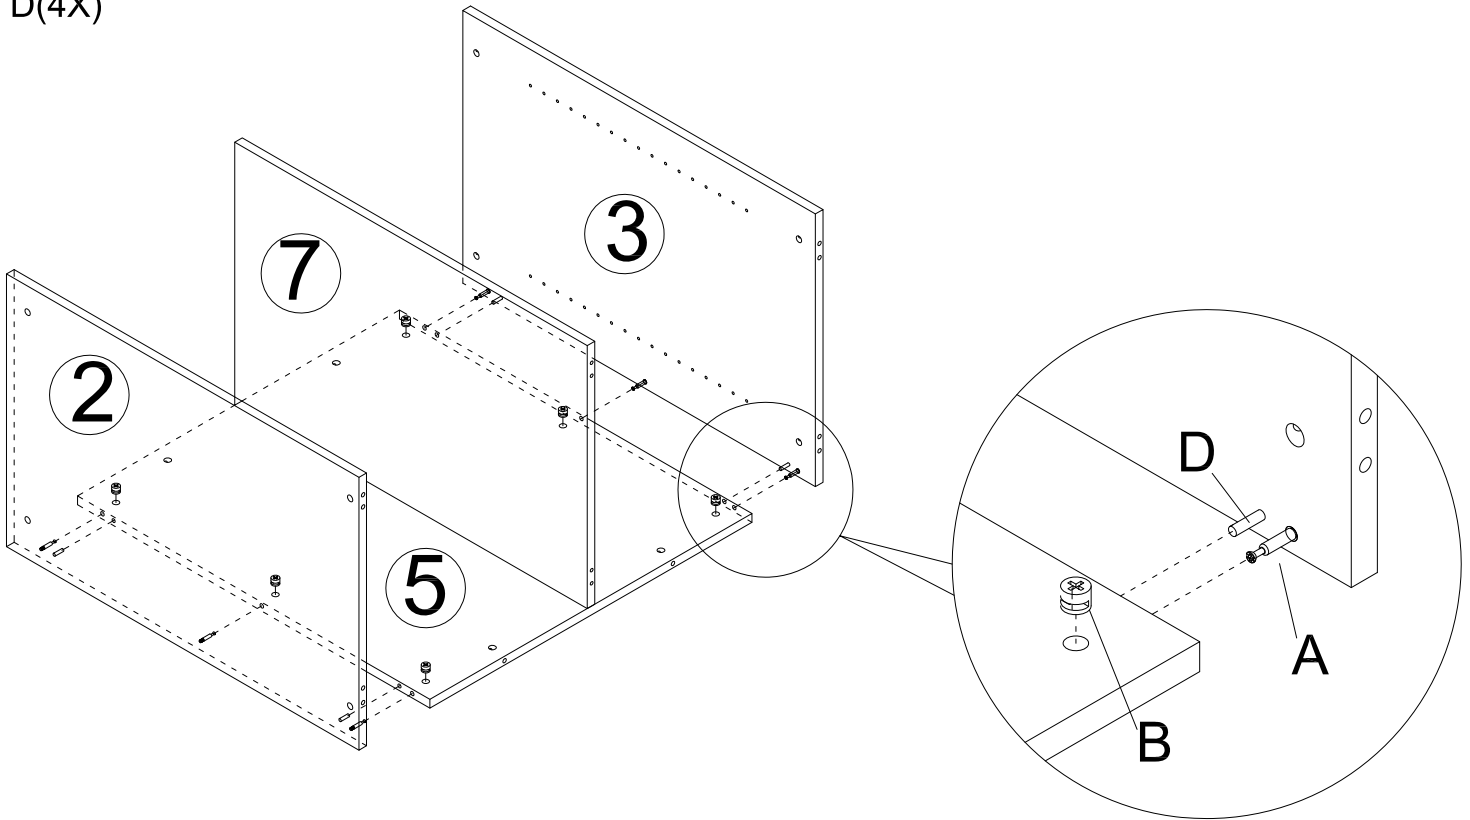TIGHTEN.
A (3x)
B (3X)
D(2X)

IMPORTANT:

FUNCTION OF KLIX CAM
1/4 RIGHT
TURN FOR
LOCKING
MAKE SURE THE ARROW IS POINTING TO
THE OPEN HOLE BEFORE INSERTING INTO
THE PANELS HOLE

7

5

D

B

A

3.

3. INSTALL "A" CAM SCREWS AND "D" DOWELS ON SIDE PANELS ② . INSTALL "B" KLIX CAMS INTO BACK PANEL ⑤. THEN CONNECT② TO ⑤ ,TIGHTEN. DO THE SAME STEP TO CONNECT ③ TO ⑤.
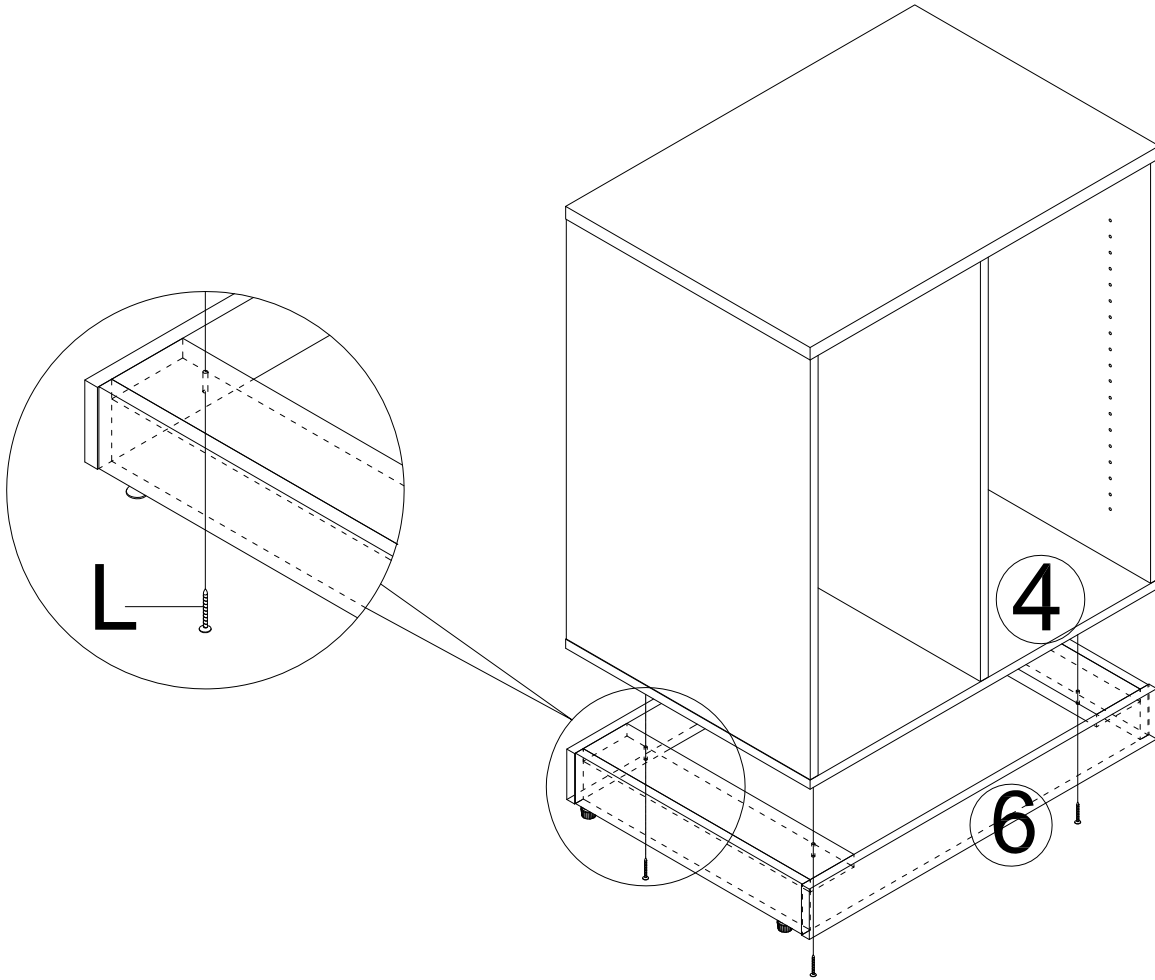
A(6X)
B(6X)
D(4X)

4. INSTALL "A" CAM SCREWS AND "D" DOWELS ON ON BOTTOM PANEL④. INSTALL "B" KLIX CAMS ON PANEL ② ③ ⑤ ⑦ . THEN CONNECT ④TO ② ③ ⑤ ⑦, TIGHTEN. REPEAT STEP TO CONNECT ① TO ② ③ ⑤ ⑦.
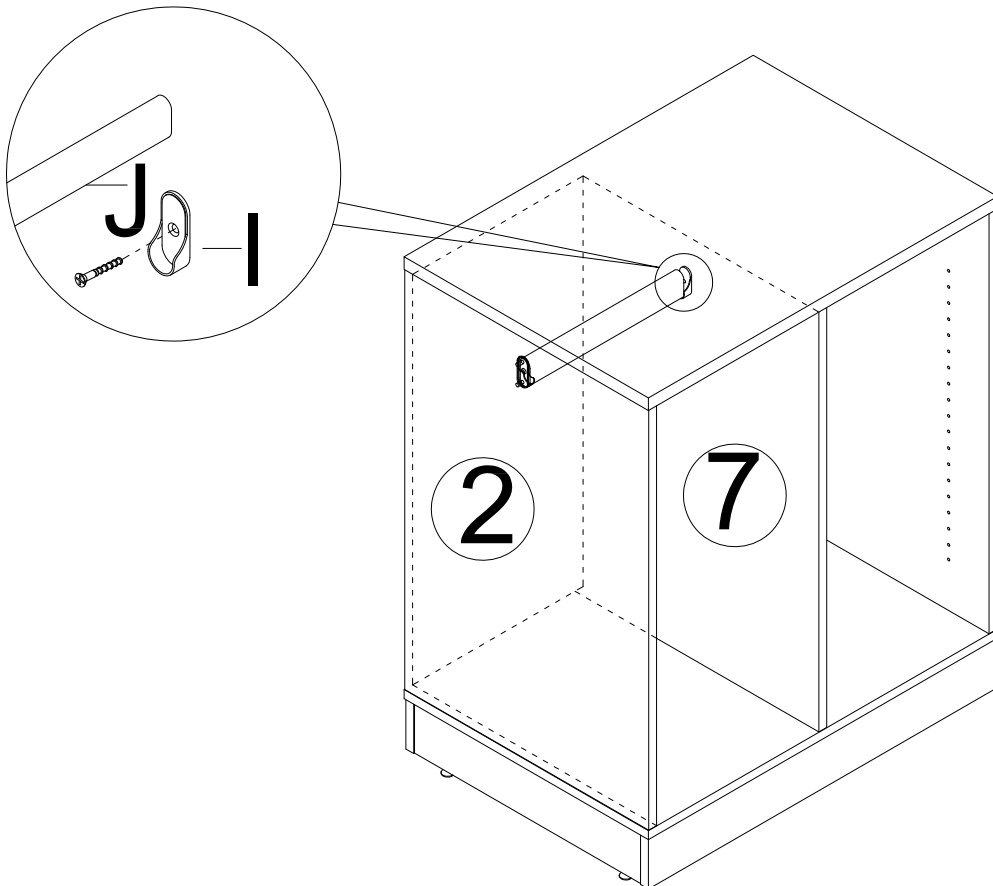
A(12X)
B(12X)
D(12X)
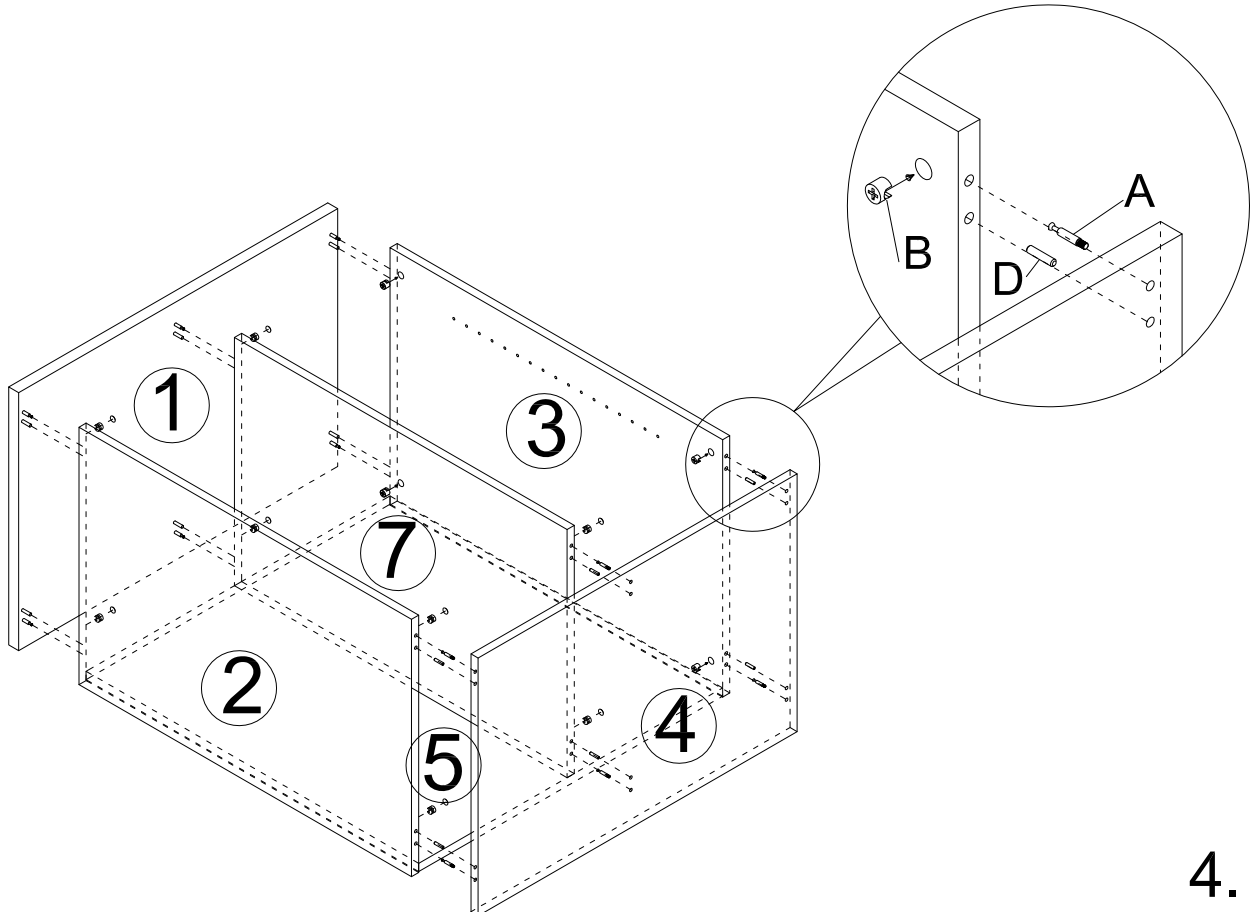
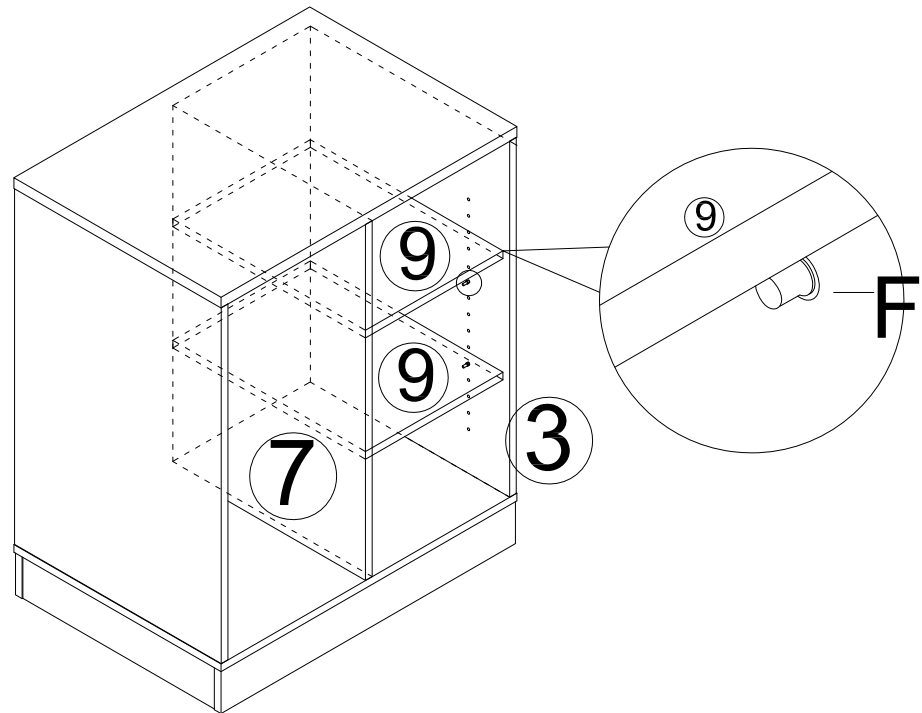**5.** CONNECT BASE SUPPORT ⑥ TO BOTTOM PANEL ④ USING "L" SCREWS.
L(4X)

6. INSTALL "J" HANGING RAIL TO PANEL ② & ⑦ USING "I" CONNECTORS.
J(1x)
I(2x)

7. INSTALL "F" SHELF PEGS ON PANELS ③ & ⑦ . THEN PLACE SHELVES ⑨INSIDE ON "F" SHELF PEGS.
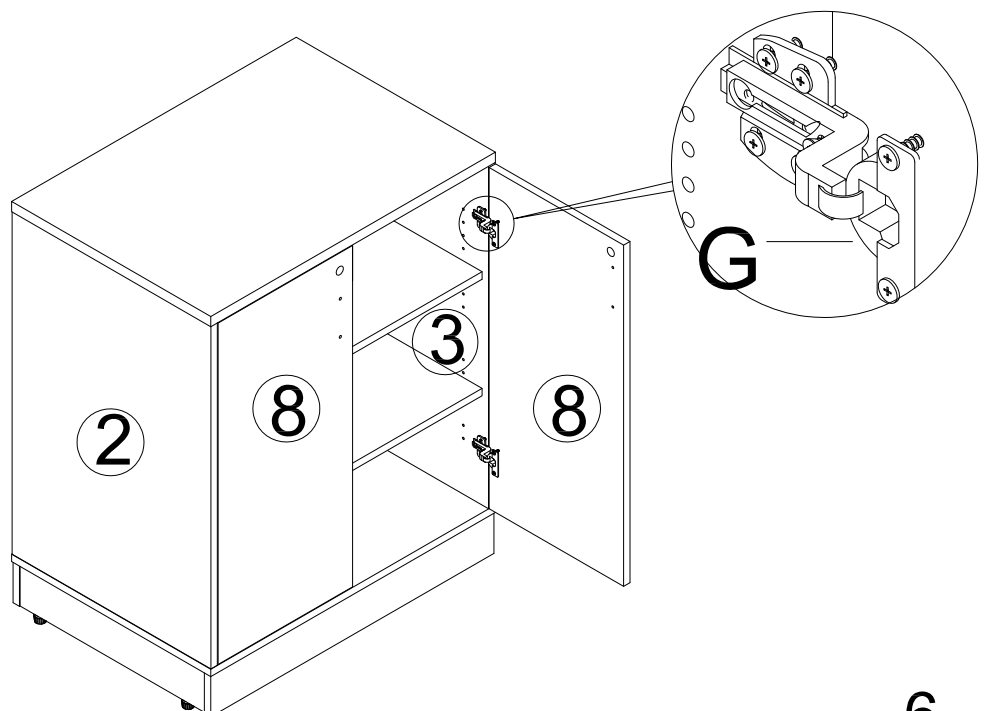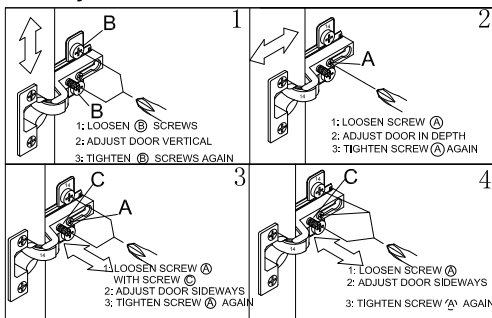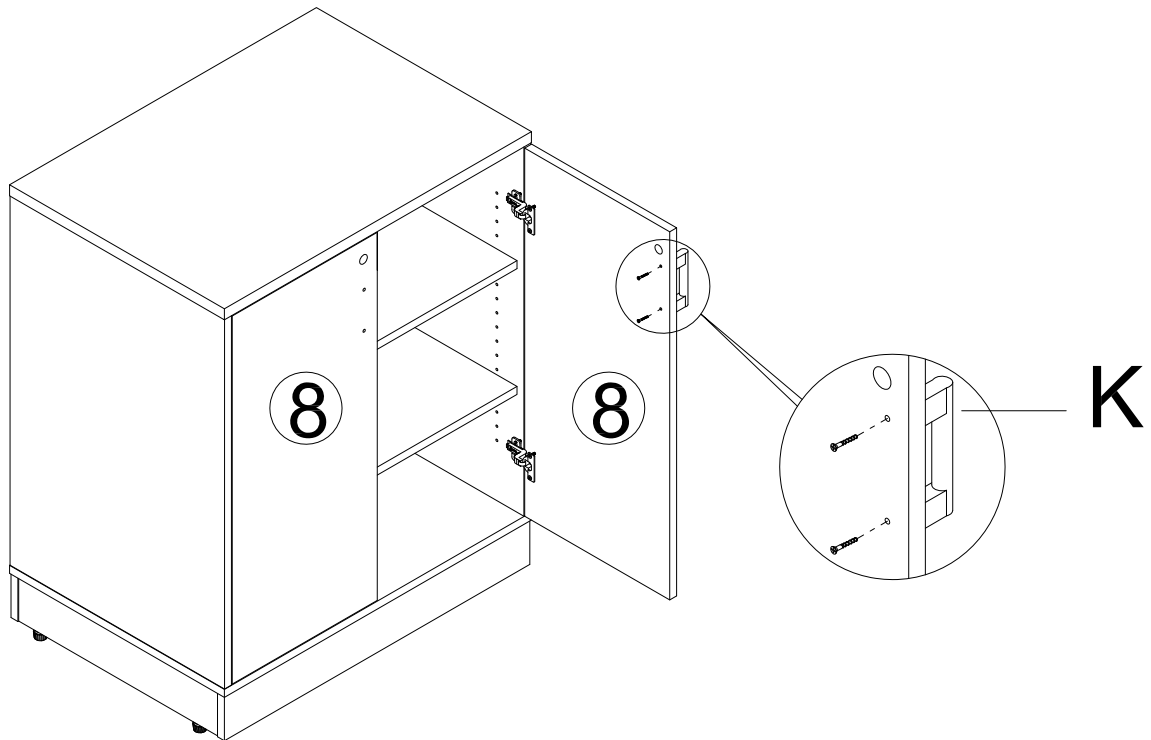F(8X)

⑨

F

⑨

⑨

⑦

③

8. INSTALL "G" HINGES ON THE INSIDE OF DOORS ⑧ , 2 PER DOOR, ATTACH DOOR ⑧ TO PANELS ②AND ③, ADJUST AS NEEDED SEE BOX.
G (4x)

To adjust doors

1
B
B
1: LOOSEN Ⓑ SCREWS
2: ADJUST DOOR VERTICAL
3: TIGHTEN Ⓑ SCREWS AGAIN

2
A
1: LOOSEN SCREW Ⓐ
2: ADJUST DOOR IN DEPTH
3: TIGHTEN SCREW Ⓐ AGAIN

3
C
A
1:LOOSEN SCREW Ⓐ
WITH SCREW Ⓒ
2: ADJUST DOOR SIDEWAYS
3: TIGHTEN SCREW Ⓐ AGAIN

4
C
1: LOOSEN SCREW Ⓐ
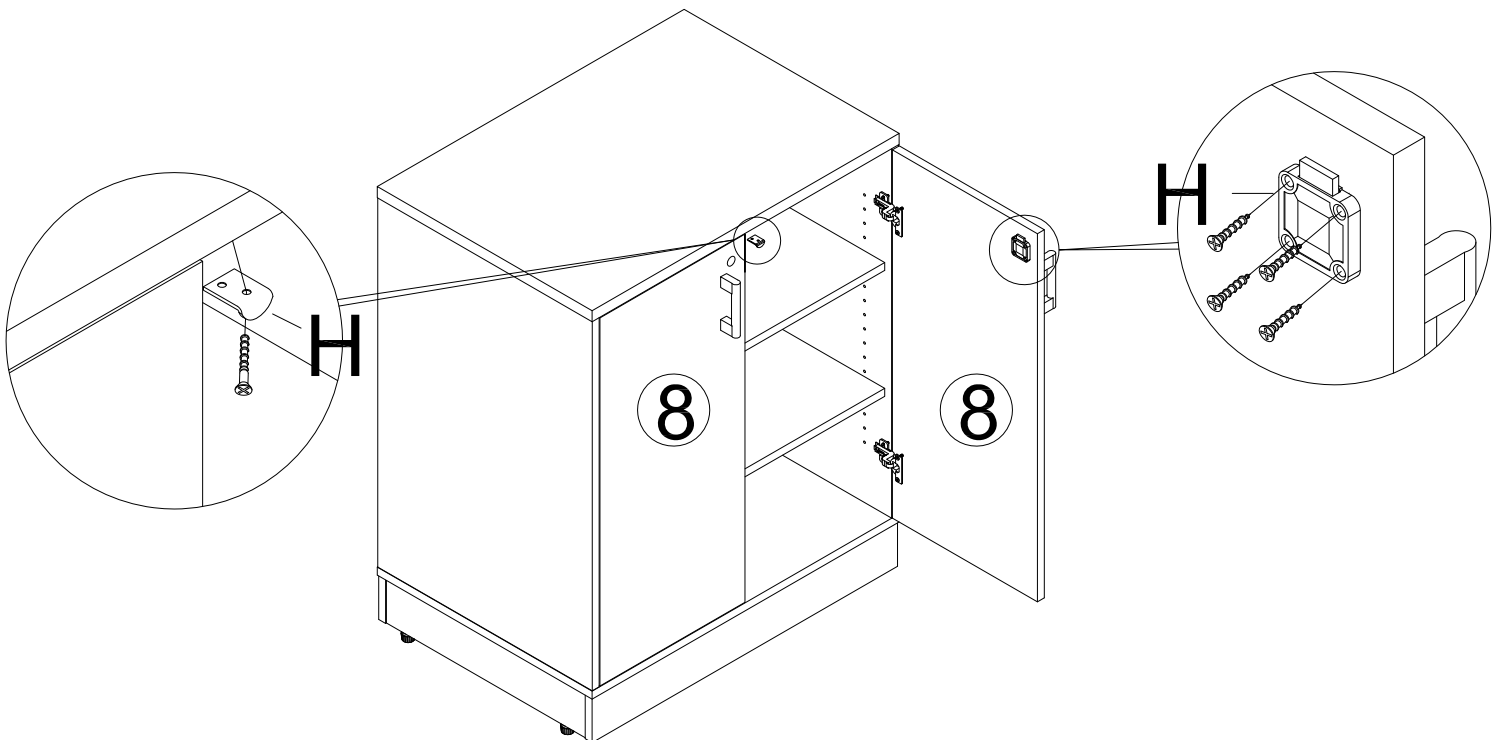2: ADJUST DOOR SIDEWAYS
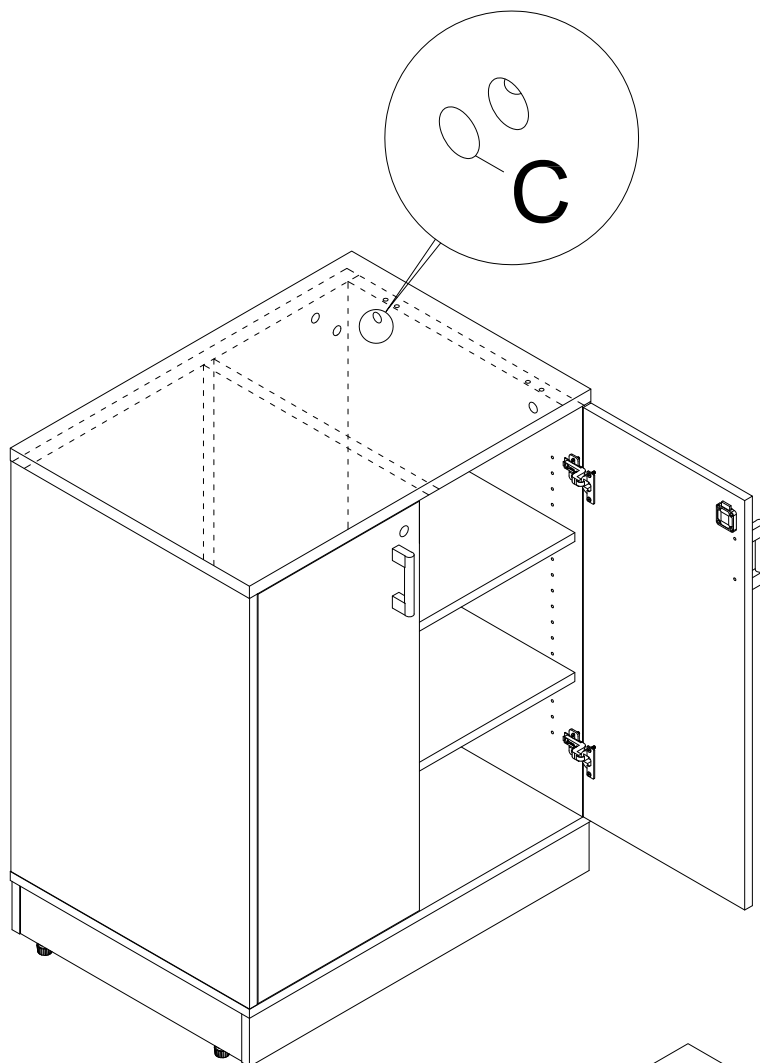3: TIGHTEN SCREW Ⓐ AGAIN

G

③

②

⑧

⑧

9. INSTALL "K" HANDLES ON OUTSIDE OF DOORS ⑧. ONE PER DOOR.
K (2x)

K

10. INSTALL LOCKS ON DOOR ⑧ AND UNDERSIDE OF TOP ①. ONE PER DOOR.
H(2x)

H

H

11. USE "C" CAM COVERS STICKERS TO COVER ALL EXPOSED KLIX CAMS.
C (21x)

12. COMPLETED