


# MSA G1 Facepiece Cleaning Procedure



After each use

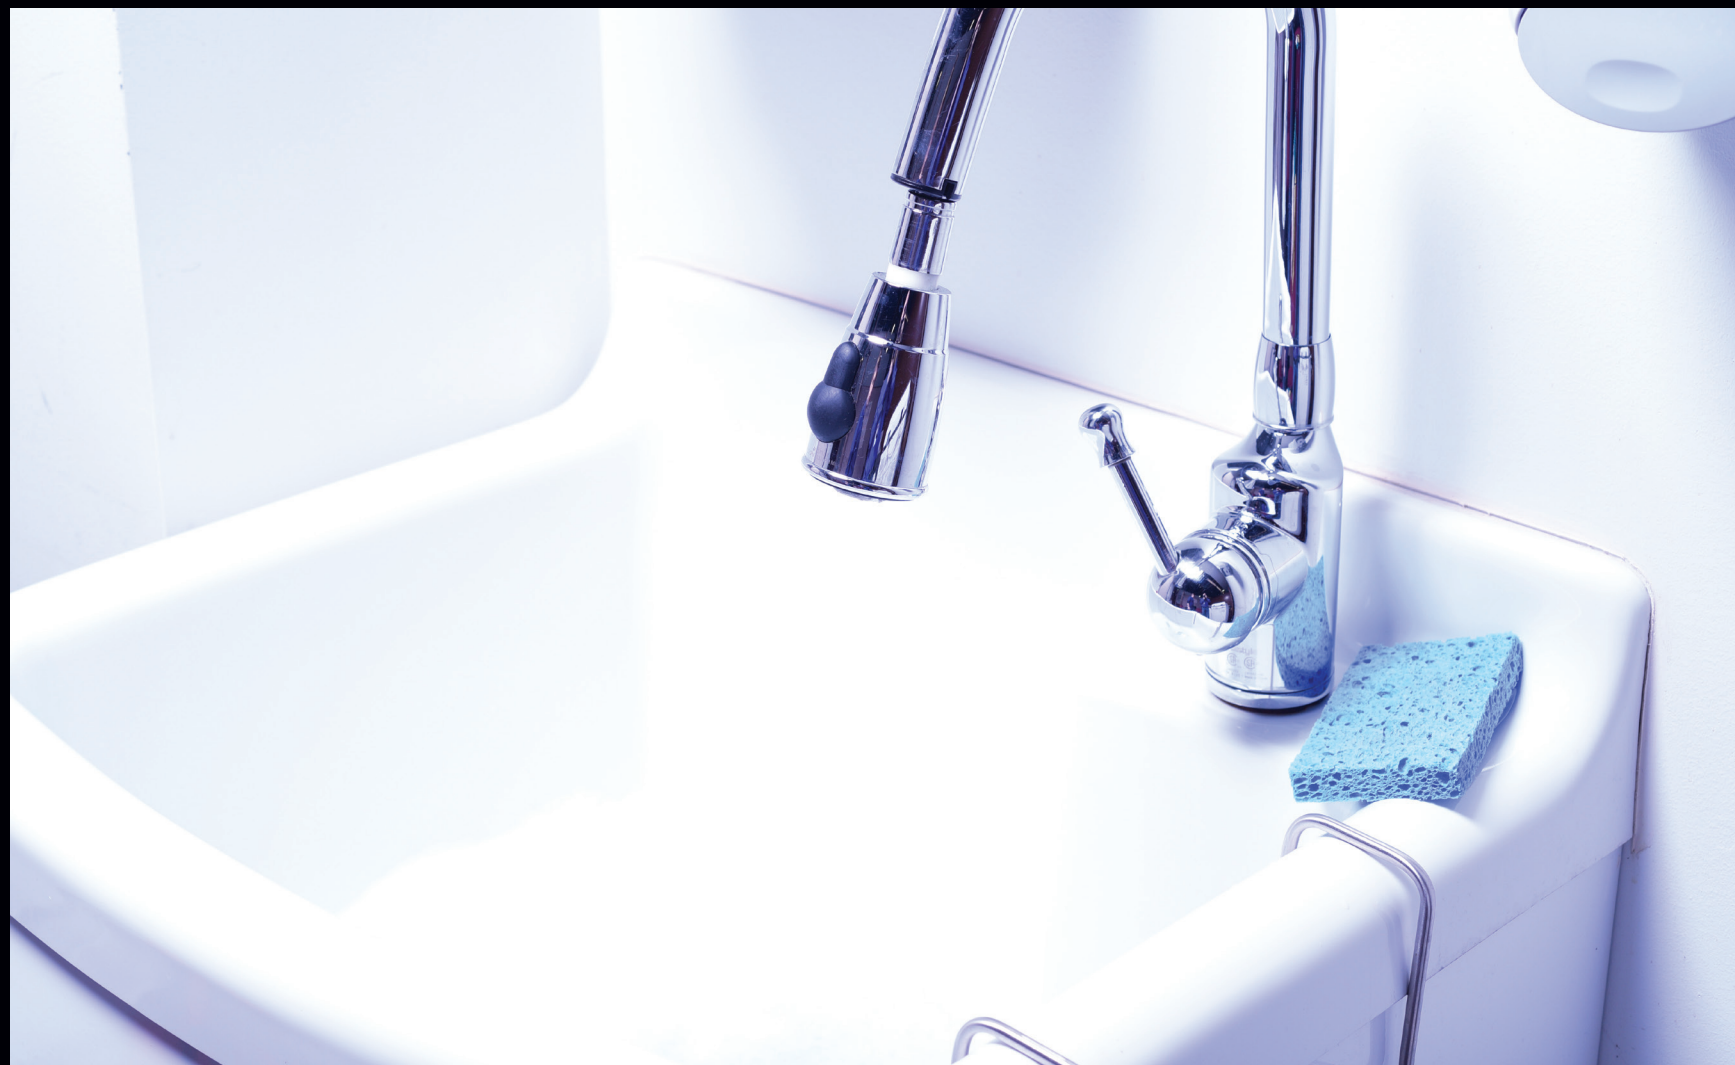

1. Fill sink with water and MSA Confidence® Plus 2 Germicidal Cleaner. Do NOT use cleaning products containing hydrocarbons or solvents.



2. Submerge the facepiece for a minimum of 30 seconds and make sure the cleaning solution enters all areas of the mask.



3. Scrub the facepiece inside and out with a soft, non-abrasive sponge or soft brush to make sure all contamination has been removed.



4. Rinse the facepiece inside and out with clean, warm 110° F water preferably running and draining.



5. Flush and manually operate the exhalation valve assembly by depressing the stem with a blunt, dull object. Be careful not to damage any rubber components on the facepiece.



6. Shake the facepiece to remove all residual water.



7. Wipe and dry the facepiece inside and out using a soft, lint-free cloth.



8. Allow the facepiece to completely air dry by resting it on the facepiece seal before putting it back into service.

**WHEN YOU GO IN, WE GO IN WITH YOU.**