



Safety Notice MSA V-EDGE® Mini PFL User Instructions

July 14, 2020

MSA Corporate Center
1000 Cranberry Woods Drive
Cranberry Township, PA 16066
800.MSA.2222
www.MSAafety.com

Dear MSA Fall Protection Customer,

MSA is issuing this Safety Notice to inform you of a correction to information in MSA V-EDGE Mini Personal Fall Limiter (PFL) User Instructions. In previous revisions of the User Instructions, the minimum fall clearance for Mobile Elevating Working Platforms (MEWP) is shown as 2500mm. In the current revision of the User Instructions, this minimum fall clearance is updated to 5m, which is necessary to meet the requirements of DIN 19427:2017.

MSA has not received any reports of injuries associated with this information in the User Instructions. However, we are requesting that you dispose of User Instructions that contain the 2500mm fall clearance and replace them with updated User Instructions.

Inadequate fall clearance can result in the inability of the PFL to arrest a fall before the user makes contact with the ground.

MSA V-Edge Mini PFLs shipped from MSA prior to June 22, 2020 were shipped with the User Instructions showing the incorrect fall clearance.

A list of part numbers with affected User Instructions is included in Table 1.

MSA is advising all customers to dispose of MSA V-Edge Mini PFL User Instructions that show MEWP fall clearance of 2500mm (see Figure 1).

Replace them with the current revision of the User Instructions, which can be found on the product page at MSAafety.com or downloaded at the links in Table 2.

Single Leg	Twin Leg
63061-00AEU	63161-00AEU
63061-00BEU	63161-00BEU
63061-00CEU	63161-00CEU
63061-00DEU	63161-00DEU

Table 1 – Part Numbers with Affected User Instructions

Figure 2 - Securing on a MEWP/ Figura 2 - Fijación en una MEWP/ Figure 2 - Fixation sur un PEMP

Figure 2 - Securing on a MEWP/ Figura 2 - Fijación en una MEWP/ Figure 2 - Fixation sur un PEMP

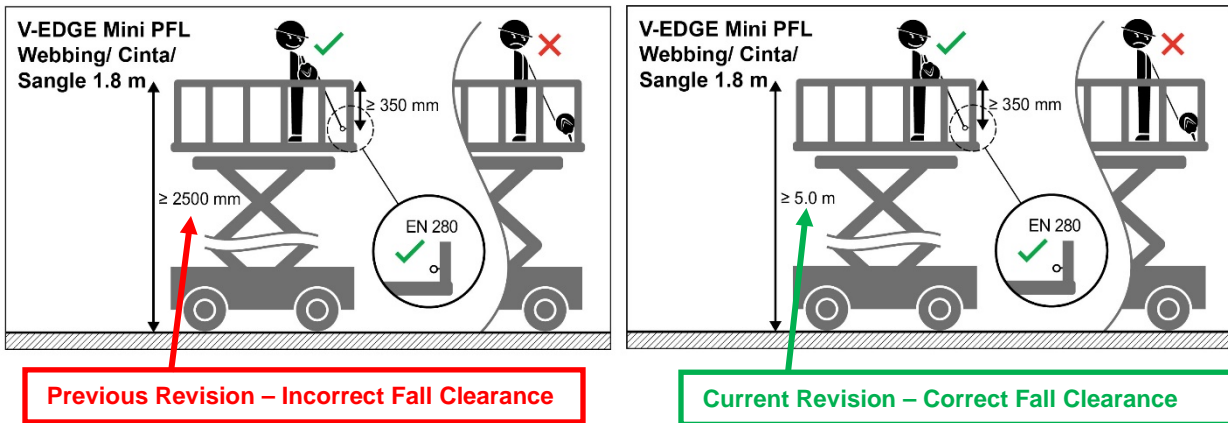


Figure 1 – MEWP Fall Clearance Illustration

Languages	Link
Finnish, Swedish, Norwegian	https://msa.webdamdb.com/bp/#/folder/1841230/86249617
German, Dutch, Danish	https://msa.webdamdb.com/bp/#/folder/1841230/86249613
Romanian, Polish, Czech	https://msa.webdamdb.com/bp/#/folder/1841230/86249614
Bulgarian, Slovak, Serbian	https://msa.webdamdb.com/bp/#/folder/1841230/86249610
Italian, Portuguese, Hungarian	https://msa.webdamdb.com/bp/#/folder/1841230/86249611
English, Spanish, French)	https://msa.webdamdb.com/bp/#/folder/1841230/86249609
Greek, Croatian, Slovenian	https://msa.webdamdb.com/bp/#/folder/1841230/107864372

Table 2 – Links to Current Revision of User Instructions

MSA Customer Service Contact Information:

If you have any questions regarding this Safety Notice, please contact MSA Customer Service as follows:

Austria:	info.at@msasafety.com	+43 1 796 04 960	+43 1 7960496-20
Belgium:	info.be@msasafety.com	+32 3 491 9 150	
France:	adv@msasafety.com	+33 474 550155	
Germany:	we.care@msasafety.com	+49 800 7236217	
Italy:	info.it@msasafety.com	+39 2 89217-1	
Netherlands:	info.nl@msasafety.com	+31 229 250 303	



MSA Corporate Center
1000 Cranberry Woods Drive
Cranberry Township, PA 16066
800.MSA.2222
www.MSAafety.com

Poland / Bulgaria / Czech Republic /
Hungary / Romania / Slovakia: biuro.pl@MSAafety.com +48 22 71150-00
Spain / Portugal info.es@MSAafety.com +34 93 3725162
Sweden / Denmark / Norway info.se@MSAafety.com +46 (0) 370 780409
Switzerland: info.ch@MSAafety.com +41 (0) 43 255 89 00
United Kingdom / Israel: info.gb@MSAafety.com +44 (0)800 066 2222
Australia/New Zealand: aus.customerservice@msafety.com
+61 (02) 9688 0333 / 1300 728 672
Asia: msa.malaysia@msafety.com
+603-9767 8800
Middle East: cs.mideast@msafety.com +971 4 2710260

We apologize for any inconveniences that this may cause; however, your safety and continued satisfaction with our products is important to us.

Best regards,

Nathan Andrulonis
Director, Global Risk and Product Safety

PS20015-01