

Product Information

News

January 12, 2012


POSICHEK 3 USB FIRST BREATH ACTIVATION TEST

The MSA version of the PosiChek 3 USB flow test software includes a First Breath Activation Test of the second stage regulator.

In order to pass this test, the regulator must activate between -12 and -3 inches of water pressure.

This flowchart indicates steps to follow based on the value that is reported by the PosiChek 3 USB during the First Breath Activation Test.

NOTE: Extreme negative values for this test may trigger a warning message (eg The lung has stopped moving because the pressure is lower than -20 in H2O).

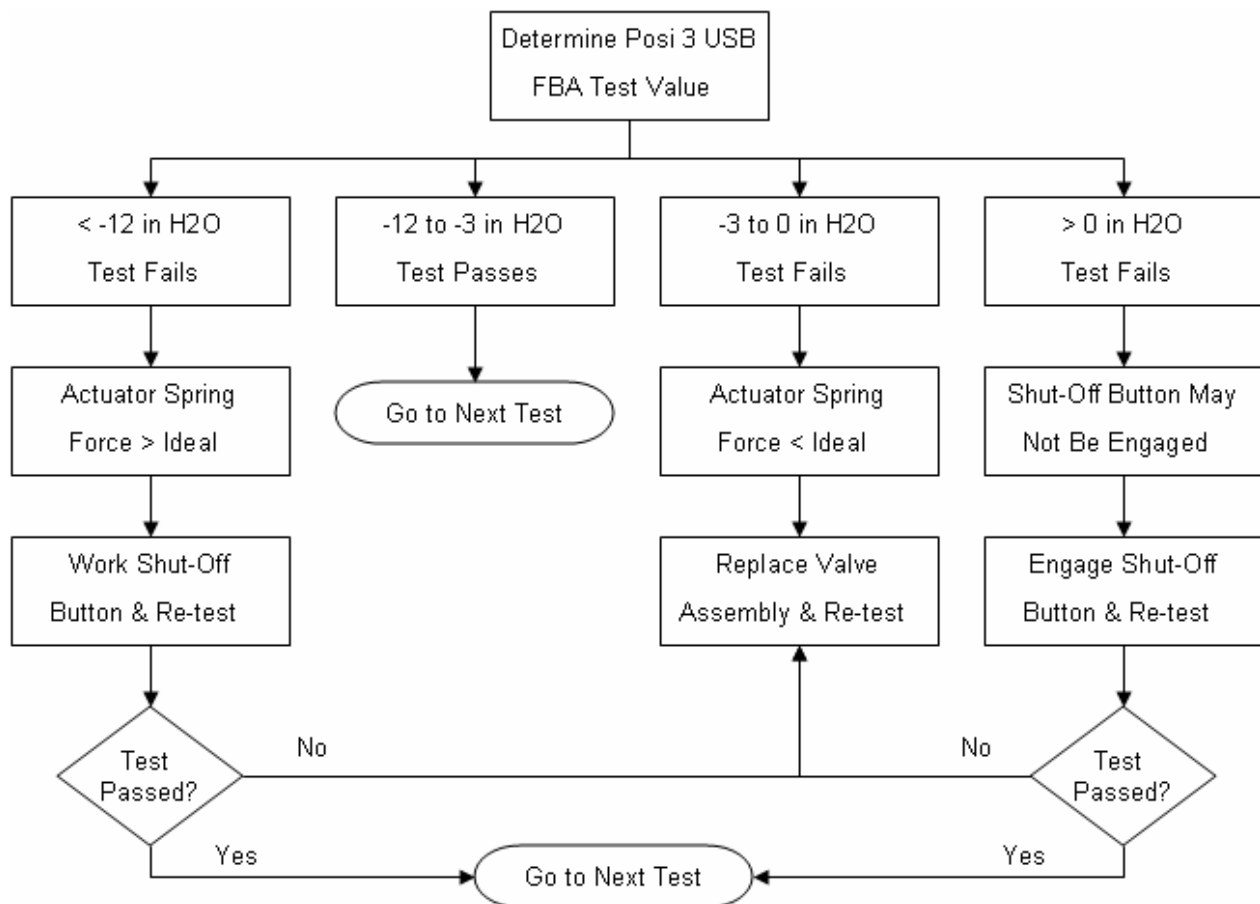

For More Information, call 1-800-MSA-2222 or Visit Our Website at www.MSAnet.com