

Hextreme™ Case-Carrying Harness for Safe Escape™ Respirator

Note: A gray colored Hextreme case was used for the photos in these instructions for better clarity. The Hextreme case is normally black in color.

The Hextreme Case-Carrying Harness for Safe Escape Respirator was designed to allow the Safe Escape Respirator to be easily transported or worn in several different configurations.

The Carrying Harness consists of three pieces: A carrying handle base, a thigh strap attachment, and a shoulder strap attachment.



The carrying handle base can be used alone to carry the Safe Escape Respirator like a thermos. It can also be combined with the other attachments to transport or wear the Safe Escape Respirator in several different ways.

CARRYING HANDLE

Note: The carrying handle base is the platform of the carrying harness.

Attaching the Carrying Handle to the Hextreme Case

1. Align the carrying handle straps with the strap channels on the Hextreme case. Ensure the three snaps on the back of the carrying harness are facing toward the lid end of the Hextreme case.



Shown with Carrying Handle Base

2. Snap the buckles shut on one of the sides of the Hextreme case with the molded MSA logo.
3. Place the elastic strap over the lid of the Hextreme case.

SHOULDER STRAP

Using the Carrying Harness with the Shoulder Strap

1. Attach the shoulder strip to the two triangular loops on the carrying handle.

Note: The shoulder strap may be attached while the carrying handle base is attached to the Hextreme case.



THIGH STRAP

⚠ CAUTION

DO NOT attach the thigh strap while the carrying handle base is attached to the hextreme case. Extreme pressure on the side of the case when applying the snaps may damage the case structure.


Attaching the Carrying Harness Base to the Thigh Strap

1. Remove the carrying handle base from the Hextreme case.
2. Lay the carrying harness base on a flat surface with the snaps up.
3. Align the snaps on the thigh strap with the straps on the carrying handle.
4. Snap the thigh strap and the carrying handle together. Ensure the thigh strap is securely snapped to the carry handle.



5. Attach the carrying handle base to the Hextreme case (see the Carrying Handle Base section).

Note: To wear the Safe Escape Respirator in this configuration, attach the hip strap to the waist belt (not supplied) and attach the thigh strap securely around the leg. Adjust as necessary to achieve a secure fit.

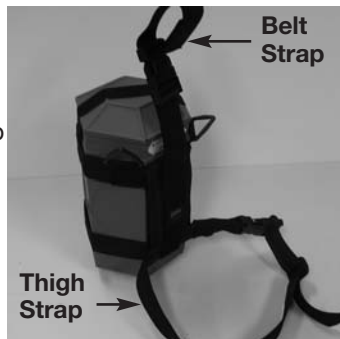

CARE

If necessary, the Hextreme Case-Carrying Harness should be wiped down with a damp rag to remove any dirt.

Allow the carrying harness to air dry.

⚠ CAUTION

DO NOT place the carrying harness in a dryer.



Be Sure.
Choose MSA.

MINE SAFETY APPLIANCES COMPANY
PITTSBURGH, PENNSYLVANIA, U.S.A. 15230