



INSTALLATION INSTRUCTIONS

DYNA-LOCK® MOUNTING BRACKET FOR ROSE MODEL 506615

Model
416003



WARNING

National standards and state, provincial and federal laws require the user to be trained before using this product. Use this manual as part of a user safety training program that is appropriate for the user's occupation. These instructions must be provided to users before use of the product and retained for ready reference by the user. The user must read, understand (or have explained), and heed all instructions, labels, markings and warnings supplied with this product and with those products intended for use in association with it. FAILURE TO DO SO MAY RESULT IN SERIOUS INJURY OR DEATH.




CAUTION

- *Web must not come in contact with sharp edges.*
- *Minimize the potential for swing fall hazards.*
- *Avoid twisting web lifeline as this may prevent line from retracting into housing. This presents a potential free-fall hazard.*
- *Use with Yale Narrow Isle Order Selectors or equivalent lifts.*

ASSEMBLY DIAGRAM

STEP 1


Place Rose Model 506615 Web Type SRL on mounting bracket, as shown in accompanying diagram.

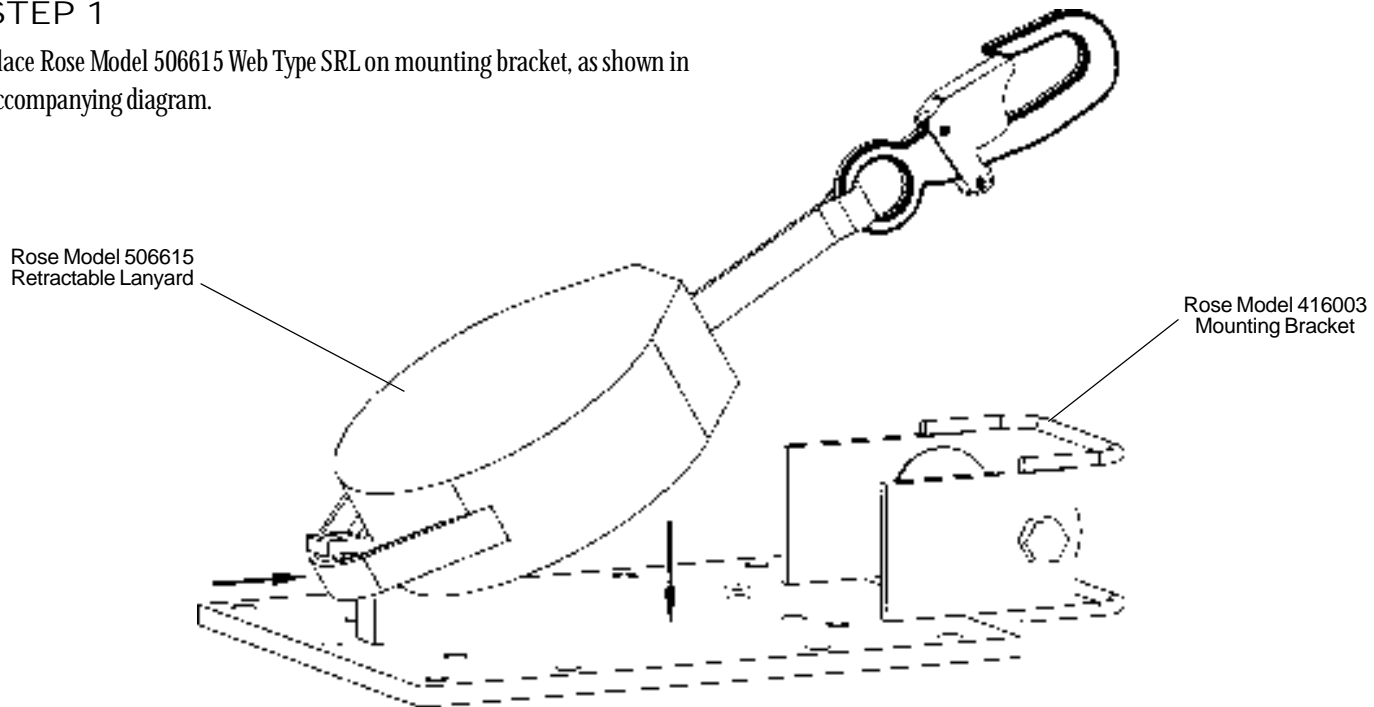

ASSEMBLY DIAGRAM

STEP 2


Assemble and tighten U-bolt and handle bolt with nuts and washers provided. Rose SRL must be secured to bracket at handle and nozzle ends, as shown in accompanying diagram.

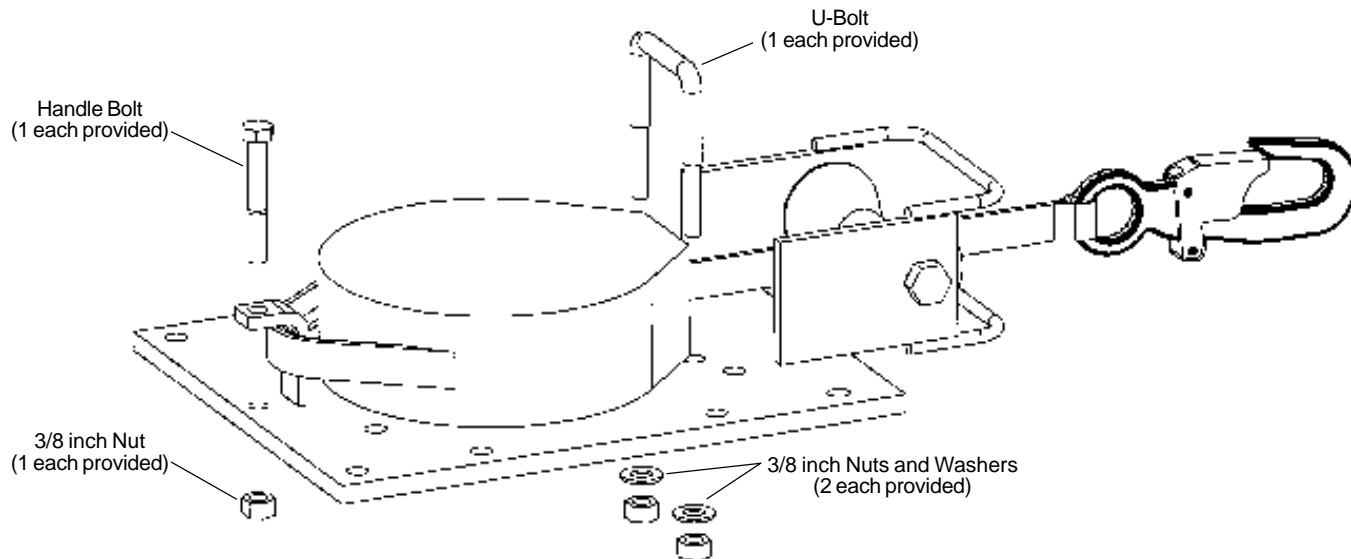

ASSEMBLY DIAGRAM

STEP 3

Weave web lifeline between the bracket and roller as shown in the diagram below.

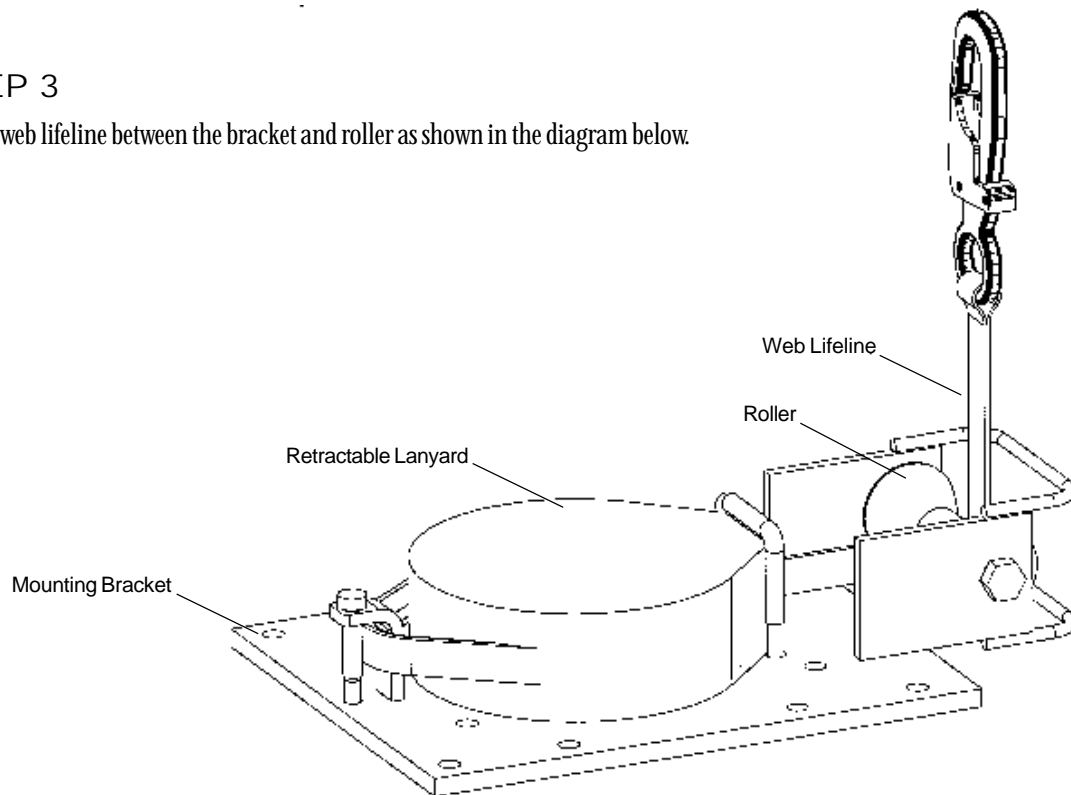


ASSEMBLY DIAGRAM

STEP 4

Attach bracket with SRL to underside of cab guard rails using 4 U-bolts, nuts and washers provided, as shown in accompanying diagram.

STEP 5

Check installation to verify all bolts and nuts are present and tightly secured. Check function of Rose Web SRL. Lifeline must extract and retract into housing smoothly. Mechanism must lock when lifeline is pulled suddenly, as in a fall.

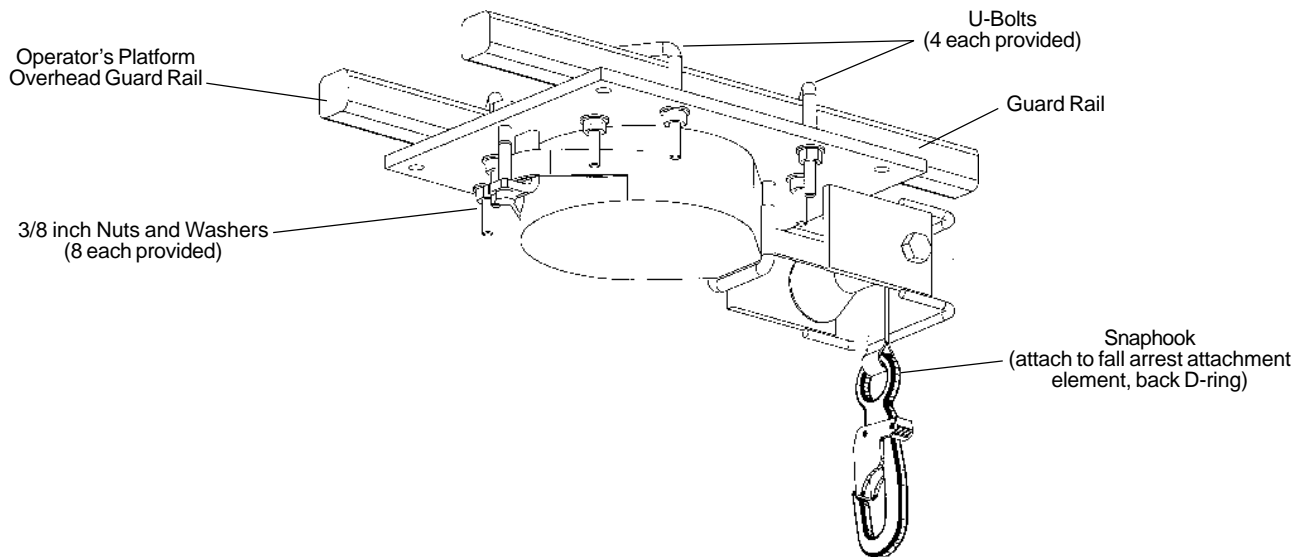

PRODUCT LABELS

Mounting Bracket for Rose Web Dyna-Lock® Model 508815

Model Number: 416803

Date of Manufacture

1996	1999	2000	2001	2002	2003
JAN	FEB	MAR	APR	MAY	JUN
JUL	AUG	SEP	OCT	NOV	DEC

Capacity: one person weighing 310 pounds, including clothing + tools + user-borne objects.

Material: Steel, zinc-plated with Polyethylene roller.

P/N 623267

CAUTION

The user must read, understand (or have explained), and heed all instructions, labels, markings and warnings supplied with this product and with those products intended for use in association with it. **FAILURE TO DO SO MAY RESULT IN SERIOUS INJURY OR DEATH.**

ROSE MANUFACTURING COMPANY
2250 South Tejon Street
Englewood, CO 80110
800-722-1231

P/N 623268

WARRANTY

Express Warranty – Rose/MSA warrants that the product furnished is free from mechanical defects or faulty workmanship for a period of one (1) year from first use or eighteen (18) months from date of shipment, whichever occurs first, provided it is maintained and used in accordance with Rose/MSA's instructions and/or recommendations. Replacement parts and repairs are warranted for ninety (90) days from the date of repair of the product or sale of the replacement part, whichever occurs first. Rose/MSA shall be released from all obligations under this warranty in the event repairs or modifications are made by persons other than its own authorized service personnel or if the warranty claim results from misuse of the product. No agent, employee or representative of Rose/MSA may bind Rose/MSA to any affirmation, representation or modification of the warranty concerning the goods sold under this contract. Rose/MSA makes no warranty concerning components or accessories not manufactured by Rose/MSA, but will pass on to the Purchaser all warranties of manufacturers of such components. THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS, IMPLIED OR STATUTORY, AND IS STRICTLY LIMITED TO THE TERMS HEREOF. ROSE/MSA SPECIFICALLY DISCLAIMS ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. For additional information please contact the Customer Service Department at 1-800-MSA-2222 (1-800-672-2222).

**ROSE MANUFACTURING COMPANY ■ 2250 SOUTH TEJON STREET
ENGLEWOOD ■ COLORADO ■ 80110-1000 ■ USA
TEL. (303) 922-6246 ■ TOLL FREE (800) 722-1231 ■ FAX (303) 934-9960**

Dyna-Lock® is a registered trademark, rights to which are held by Rose Manufacturing Company, U.S.A.