

# PremAire® Escape


Donning with PremAire Mask-Hood



1 Place neck strap over head so that the filling connector points away from the body.



2 In case of emergency, pull up the lid to open the bag (starter key attached to the bag opening flap will automatically activate the pressure reducer).

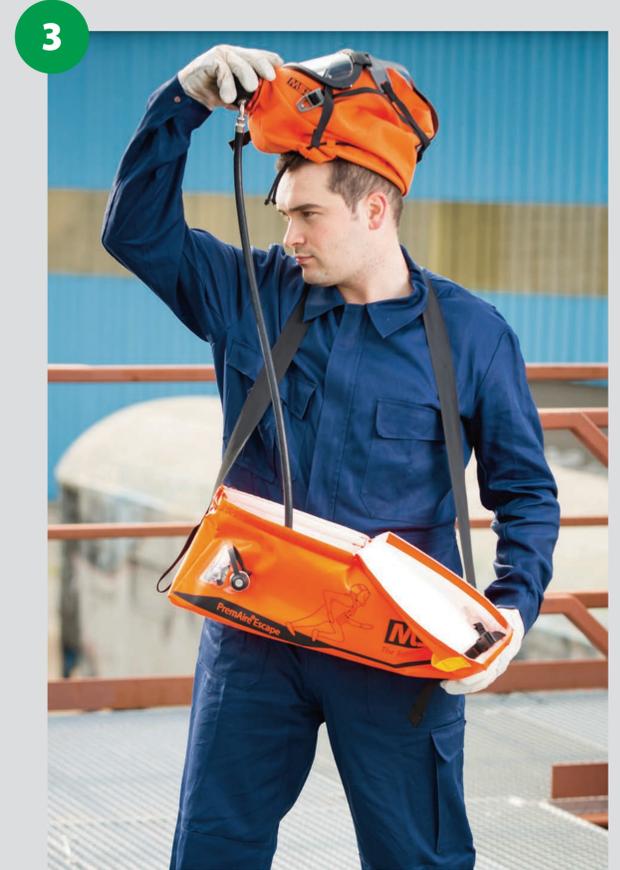

3 Slip mask-hood over face starting from the back of the head (make sure chin and nose are properly covered by the inner mask).



4 Start breathing (lung governed demand valve is activated on first breath) or push AutoMaXX flush button.



5 Pull firmly on head straps to tighten mask-hood.



6 Pull neck string until a tight fit at the neck is achieved. Secure neck string with stopper. Escape immediately to non-hazardous area.