

# Filter Press Replacement with Zeta Plus™ Depth Filter Cartridges for Wine Clarification

## Introduction

Filter presses have long been used by wineries in cellar operations to clarify wine prior to final membrane filtering and bottling. The filter press format has been popular for many years since it is generally reliable, and the filter sheets contained in them are relatively low cost, commodity items. A filter press is typically composed of a series of stainless steel frames that hold depth filter sheets or pads. Turbid wine is pumped through the filter sheets, which retain undissolved solids, yeast, most bacteria, hazes, and other turbidity causing components.

However, as wineries modernize and review their operations, with focus on improvements in efficiency and methods of sanitation when preparing wine for bottling, many upgrade the clarification process to include more cost effective, environmentally sealed cartridge filters in place of the filter press. Deficiencies in the filter press design are well known and include: leakage of wine, exposure of the filter media and product to contaminants in the environment, high labour and maintenance costs, and high capital costs.

This Customer Application Brief describes the benefits of an alternative method of wine clarification that employs totally enclosed Zeta Plus™ depth filter cartridges. Those benefits include:

- Zero leakage of wine
- Low maintenance
- Reduced labour
- Reduced disposal
- Fewer change-outs
- Minimal floor space
- Decreased capital costs
- Reduced energy needs

## The Process

While wine processes vary according to wine style and preferences of the winemaker, the schematic shown in Figure 1 is meant to serve as a generic process. Primary separation of yeast and undissolved solids is usually achieved by a diatomaceous earth filter. Aging, racking, and the use of fining agents assist in this operation. Continued clarification by removal of remaining yeast, most bacteria, and haze colloids is then achieved by a filter press or by the Zeta Plus cartridge val of remaining yeast, most bacteria, and haze colloids is then achieved by a filter press or by the Zeta Plus cartridge system.




Zeta Plus™ depth filters are available in 8", 12", and 16" diameter cartridges.

While these operations typically take place in the cellar, final membrane filtration is usually performed in the bottling room.

## Difficulties Associated with Filter Press Operation

The following difficulties have been expressed by many wineries regarding the operation and maintenance of this style of equipment.

Figure 1 – Generic Wine Process

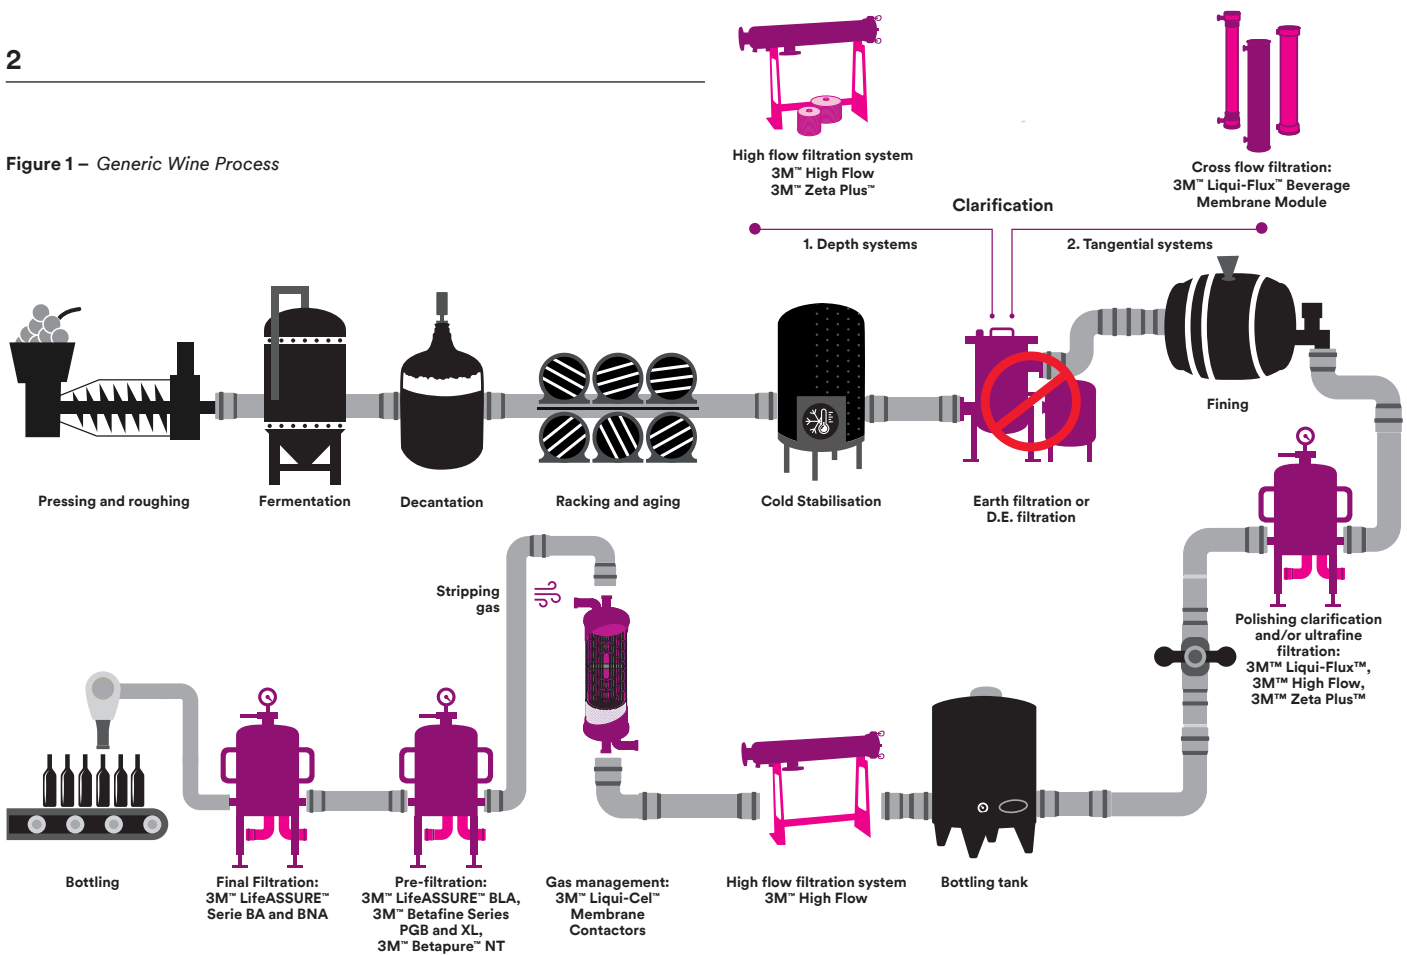

## Labour

As anyone who has changed a filter press can attest, the labour required to properly unload, clean, repack, and ready a filter press for the next filter run is substantial. Estimates range from 3 man-hours for smaller presses to up to 8 man-hours (2 operators - 4 hours) or more for larger presses. Additionally, the awkward nature of the press arrangement and the weight of the individual plates can lead to worker injury during maintenance activities.

The yearly cost of labour can be calculated as: operators required x labour rate/hr x hours required to clean/repack press x number of changes/month x 12.

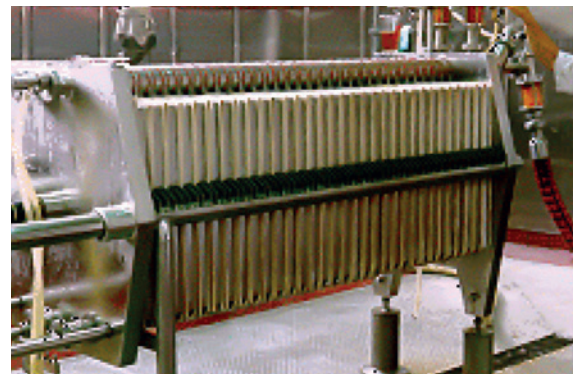


Photo used with permission of Red Hook Company

## Leakage and Wine Loss

Even new, well maintained filter presses leak some wine along the exposed periphery of the filter sheets. This wine is usually collected in a tray beneath the equipment and discarded, since oxidation and contamination occurs. The leakage is accelerated in older or poorly maintained presses where seals are worn or plates are slightly warped, compromising the seals. Wineries have noted wine loss of up to 1% – 2% of a given batch – a substantial cost that can be overlooked.

The yearly cost of leakage can be calculated as: liters leaked/hr x hours of operation/week x weeks of operation/yr x cost of wine/ liter. The cost of the wine can be the "in process" cost associated with production, or the opportunity cost (retail price) of losing wine prior to sale in the market.

## Filter Change-out

Because they are open to the atmosphere, filter sheets installed in a press are typically changed-out based on a fixed-schedule, regardless of the differential pressure across the filter. Filter sheet change-out is typically conducted after a week of filtration service, although sometimes less. At that time, many wineries begin to notice mold growth along the exposed edge of the filter sheets and find it prudent to replace them. However, filtration capacity, as measured by the differential pressure across the filter press, is rarely maximized in this practice. Filter sheets are essentially removed from service and discarded without using their entire capacity to filter.

## Capital Costs

A modern, all stainless steel filter press comes with a significant capital cost. Additional hardware for automation and hydraulics can add further to this cost. The used filter press market can offer a reduction in this capital cost, but usually at the expense of increased maintenance, and replacement parts costs down the line.

## Maintenance

With a number of moving parts, o-rings, and gaskets, filter presses require considerable attention to routine maintenance for proper operation. For instance, each plate in the press typically includes 4 o-rings that need to be checked at each change-out and replaced when signs of wear are evident. Additionally, to ensure proper sealing of the filter sheets and to reduce biofilm build-up, each plate surface should be cleaned thoroughly.

The yearly cost of maintenance can be calculated as 5% – 10% of the cost of the press, but can be much higher if the press is older and if other considerations are included such as the labour required and down time of the operation while maintenance takes place.

## Disposal

Since filter sheets are changed-out on a periodic basis without regard to the filtration capacity still remaining in the sheet (as measured by differential pressure across the filter press), partially unused filter sheets are sent to disposal. This increases the disposal cost.

The yearly cost of disposal can be calculated as: change-outs per month x disposal cost of a change-out x 12.

## Floor Space

Even smaller filter presses require a relatively large area for safe operation, including access from all sides and space enough to open the press entirely during maintenance operations. A 60 cm<sup>2</sup> x 60 cm<sup>2</sup> press will typically require up to 9.3 m<sup>2</sup> of cellar space.

## Energy

Sanitation of the filter press is usually accomplished by hot (80° C) water flushing before and after filtration. This process reduces contaminating microorganisms. Effective sanitation requires that the equipment reach the desired temperature for a minimum of 30 minutes. To be effective, timing should begin not when the water reaches the press, but when the entire system is up to the desired temperature, including all valves, drains, gauge ports and fittings.

To neglect this aspect leads to incomplete sanitation, with microorganisms remaining in hard to reach areas of the filter press (behind gaskets, in bleed valves, in dead-legs). In practice, although the filter press may only be sanitized for 30 minutes at 80° C, an extended period (30 - 60 minutes) is required to get the entire filter press up to the desired temperature before sanitation can actually begin.

A cost is associated with this practice as energy is required to heat the hot water. Downtime during the sanitation cycle is also a factor in determining the cost of this procedure.

## The 3M Filtration Solution

3M developed the Zeta Plus™ depth filter cartridge system to address the undesirable aspects that most wineries experienced with filter press operation. Zeta Plus depth filter cartridges are made with the same high efficiency, high tensile strength filter media as our standard filter sheets for a filter press. However, the filter sheet media is contained in an easy-to-use cartridge form that is installed in a fully enclosed, sanitary design, filter housing.

The Zeta Plus cartridge system provides the following benefits to wineries:

## Greatly Reduced Labour

Zeta Plus filter cartridges can be installed and ready for use in as little as 15 minutes, usually requiring the efforts of only a single operator. This greatly reduces the manpower and downtime associated with the filter press – usually by a factor of 10 or more.

## Zero Leakage

Zeta Plus cartridges are installed in a totally enclosed, sanitary design filter housing, eliminating wine leakage. Furthermore, the enclosed housing prohibits oxidation or microbial contamination of the wine from external sources.



Zeta Plus™ depth filters are available in 8", 12", and 16" diameter cartridges.

## Fewer Change-outs

Since Zeta Plus cartridges are installed in a totally enclosed filter housing and not exposed to the atmosphere, the cartridges can continue to be used until they reach a maximum differential pressure (2.4 Bar), indicating that their useful life has been achieved. Depending on the nature of the wine and how well it has been prepared prior to filtration (racking, fining, D.E. filtration), a single set of cartridges can be used for weeks prior to plugging, unlike the filter press, which requires frequent change-outs.

3M has also developed a warm water regeneration flushing procedure that can further extend filter service life.

This easy-to-use procedure reduces warm water soluble plugging materials from the filter, reducing differential pressure build up and extending filter life.

As an example, a California winery has reported average throughputs of up to 227 m<sup>3</sup> per single 12" diameter Zeta Plus™ cartridge. This decreased filter change-outs from once a week for the previous filter press to once a month for the Zeta Plus™ cartridge system.

## Decreased Capital Costs


For equal flow rates, Zeta Plus filter housings typically require from one half to a quarter of the capital cost required for an all stainless-steel filter press.

## Low Maintenance

Zeta Plus™ cartridge housings have only three o-rings to maintain, compared to the dozens of o-rings on a filter press. Unlike a filter press, a 3M™ series filter housing is easy to maintain, clean, and operate. All housings surfaces are easily accessible for cleaning. 3M series filter housings can also be fitted for optional CIP spray-balls, unlike the filter press.

## Reduced Disposal

Unlike filter sheets that are changed-out on a periodic basis without regard to the filtration capacity still remaining in the sheet, Zeta Plus cartridges are only changed-out when their capacity is achieved, whether it be two weeks or a month of service. This decreases the costs incurred for disposal, sometimes by a factor of 4 or more.

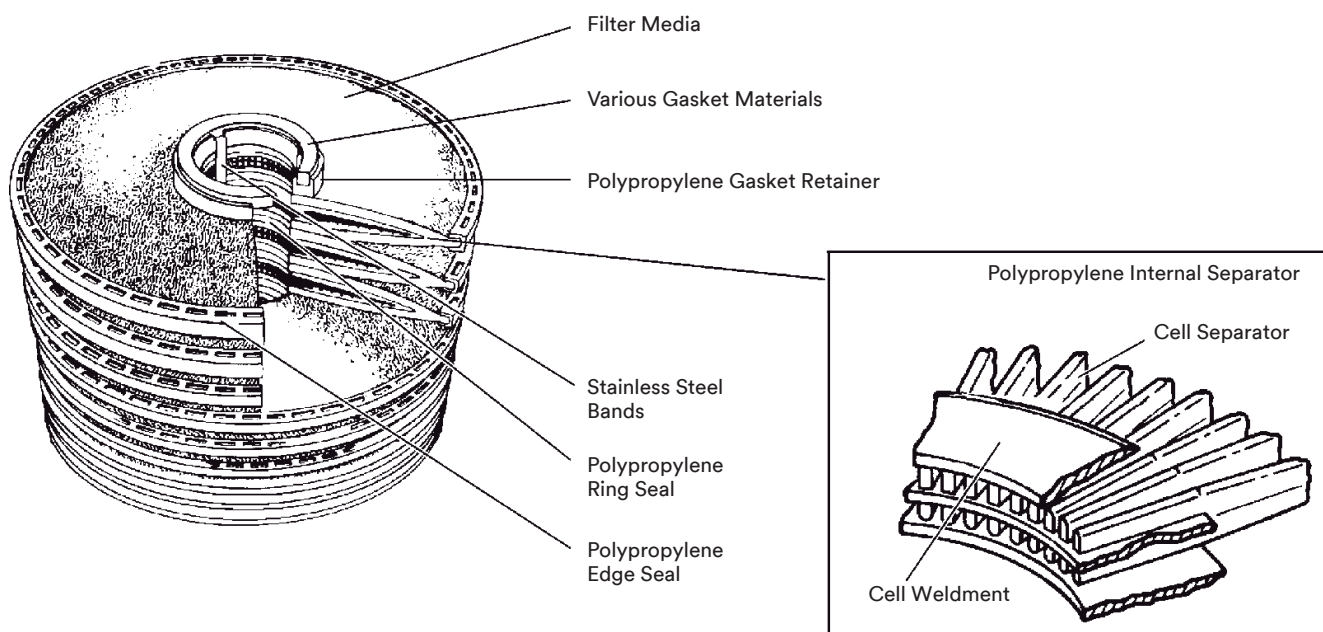

## Minimal Floor Space

Zeta Plus filter housings are very compact, typically requiring only a tenth of the floor space of a comparable filter press. Since the filter media in a Zeta Plus cartridge is stacked horizontally, the design makes much more effective use of floor space. This eases operator access and frees up winery space for other operations.

## Reduced Energy

The compact nature of the Zeta Plus cartridge and 3M series filter housing design results in much faster sanitation cycles, greatly reducing energy costs. Because the 3M series filter housing design has less stainless steel than a filter press, it can be brought up to temperature much more quickly and reliably. Additionally, the sanitary design of the 3M series filter housing eliminates dead-legs and other hard to clean areas common in a filter press that are difficult to sanitize correctly.

## Conclusion and Summary

Although filter presses have been used by wineries for many years, cellar crews have noted significant deficiencies in their design and operation. The table below summarizes the benefits of the Zeta Plus™ cartridge system versus the use of a filter press for wine clarification.

	Filter Press	Zeta Plus™ Cartridge System	Comments
<b>Wine leakage</b>	Moderate to High	No leakage	Some filter presses can leak 1 – 2% of volume filtered
<b>Labour needs</b>	High	Low	Zeta Plus Cartridge: 15 min.
			Filter Press: 2 – 4 hrs
<b>Change-outs</b>	Weekly or more often	2-4 weeks	Dependent on wine preparation
<b>Capital costs</b>	High	Low	A Zeta Plus cartridge housing is typically 50% – 25% the cost of a filter press
<b>Maintenance</b>	High	Low	Cartridges: 3 o-rings, Easy to clean
			Filter Press: Dozens of o-rings, difficult to clean
<b>Disposal</b>	Moderate	Low	Unlike filter sheets, Zeta Plus cartridges are disposed of only when filtration capacity is exhausted
<b>Floor space</b>	High	Low	A Zeta Plus cartridge housing typically requires 1/10th the floor space of a filter press
<b>Energy</b>	Moderate	Low	A Zeta Plus cartridge system typically consumes ½ the hot water and energy compared to a filter press

Additional factors, such as the sanitary design of the 3M series filter housing concept, the elimination of wine exposure to external contaminants/oxidation, and the durability of the filter, also favor the use of an enclosed Zeta Plus cartridge system.

## Application Engineering Support Services

The corner stone of our philosophy is service to customers, not only in product quality and prompt service, but also in problem solving, application support and in the sharing of scientific information. Our Application Engineering (AE) Team is a market-oriented group of scientists and engineers who work closely with customers to solve difficult separation problems and aid in the selection of the most effective and economical filtration systems.

The AE Team routinely provides end-users with:

- Validation and Regulatory Support
- Extractable and Compatibility Analysis
- Filter System Optimization Studies
- 3M™ Series 200 Automated Integrity Testing Device

For more information regarding Application Engineering Support Services, please contact your local 3M representative.

#### Technical Information

The technical information, guidance, and other statements contained in this document or otherwise provided by 3M are based upon records, tests, or experience that 3M believes to be reliable, but the accuracy, completeness, and representative nature of such information is not guaranteed. Such information is intended for people with knowledge and technical skills sufficient to assess and apply their own informed judgment to the information. No license under any 3M or third party intellectual property rights is granted or implied with this information.

#### Product Selection and Use

Many factors beyond 3M's control and uniquely within user's knowledge and control can affect the use and performance of a 3M product in a particular application. As a result, customer is solely responsible for evaluating the product and determining whether it is appropriate and suitable for customer's application, including conducting a workplace hazard assessment and reviewing all applicable regulations and standards (e.g., OSHA, ANSI, etc.). Failure to properly evaluate, select, and use a 3M product and appropriate safety products, or to meet all applicable safety regulations, may result in injury, sickness, death, and/or harm to property.

#### Warranty, Limited Remedy, and Disclaimer

Many factors beyond 3M's control and uniquely within user's knowledge and control can affect the use and performance of a 3M product in a particular application. User is solely responsible for evaluating the 3M product and determining whether it is fit for a particular purpose and suitable for user's method of application. Unless an additional warranty is specifically stated on the applicable 3M product packaging or product literature, 3M warrants that each 3M product meets the applicable 3M product specification at the time 3M ships the product. 3M MAKES NO OTHER WARRANTIES OR CONDITIONS, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTY OR CONDITION OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR ANY IMPLIED WARRANTY OR CONDITION ARISING OUT OF A COURSE OF DEALING, CUSTOM OR USAGE OF TRADE. If the 3M product does not conform to this warranty, then the sole and exclusive remedy is, at 3M's option, replacement of the 3M product or refund of the purchase price.

#### Limitation of Liability

Except where prohibited by law, 3M will not be liable for any loss or damage arising from the 3M product, whether direct, indirect, special, incidental or consequential, regardless of the legal theory asserted, including warranty, contract, negligence or strict liability.



#### 3M Separation and Purification Sciences Division

3M United Kingdom PLC  
3M Centre, Cain Road  
Bracknell RG12 8HT  
Berkshire  
+44(0) 845 6025 237

3M Ireland Ltd  
The Iveagh Building  
The Park, Carrickmines  
Dublin 18  
+353 (01) 280 3555

Please recycle.

Zeta Plus and LifeASSURE are trademarks of 3M Company.

3M is a trademark of 3M Company.

© 2021 3M Company. All rights reserved.

70-0201-8668-3