


Addendum for Ultra Elite full face masks

Addendum to operating manual for all Ultra Elite full face masks

MSA recommends to include the following procedure into the routine of regular visual inspection after each use.

1. **Disassemble the cover of the component housing by loosening the two screws.**
2. **Check the visible surface of the connector for cracks.**
Make sure you have appropriate light conditions. In case of doubt, use magnifying glasses.
3. **The connector must be replaced if there are any visible cracks.**

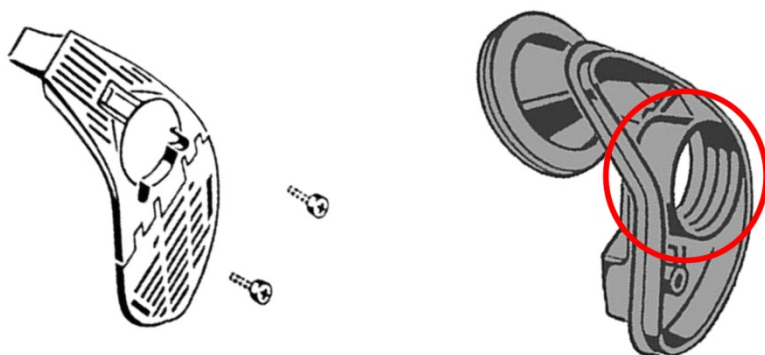

For more information about the maintenance of the Ultra Elite full face masks visit → www.MSAafety.com → Ultra Elite Masks.

Order No. D2056255/00