
# ASSEMBLY INSTRUCTIONS THESIS SERIES STATIC BACK



### IMPORTANT!

Review ALL instructions before beginning assembly. These instructions are provided to avoid problems that may occur from improper assembly or installation. Mayline and/or its distributor are not responsible for failure resulting from improper assembly or installation of this product. Moreover, all warranties are void for failure to follow these assembly instructions.

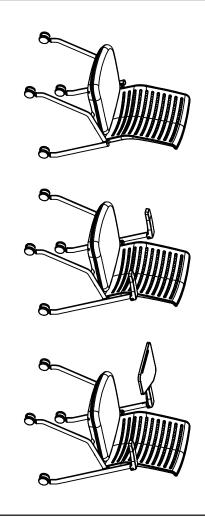


Part No. 1906, Revision 01 06/02/2015

#### PARTS LIST

When ordering components, specific color and/or size information may be required. Contact a Mayline Customer Service Representative. 1-800-822-8037

\* Individual Items, Order by part number.
\*\* Denotes Color Code

Views for reference only. Actual product may vary.

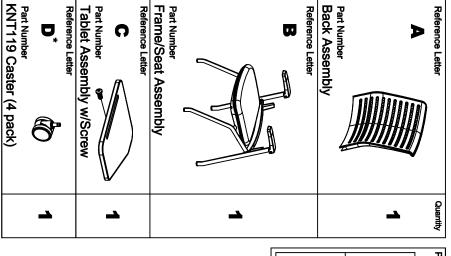


Part Number
KNT130\* Hardware Pack (Static Back)
Reference Letter

Cuantity
2
Screw M8 x 35MM
Reference Letter

Allen Wrench

- Attach Back Assembly (A) to Frame/Seat Assembly (B) using Screw (E)
   Places.
- 2. Insert Casters (D) firmly into the Frame/Seat Assembly (B). 4 Places.

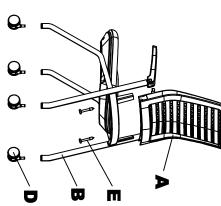

## **Chairs with Tablet Assembly**

 Attach Tablet Assembly (C) to Frame/Seat Assembly (B) using Screw included with Tablet Assembly.




#### NOTE:

Periodically (Every 90 days) make sure screws are fully tightened.

## FEATURE INSTRUCTIONS

- Seat Adjustment.
   Lifts upward 92° to allow nesting & stacking.
- Arm Adjustment Lifts upward 70° to allow nesting & stacking.
- Tablet Adjustment
   Automatically rotates to side position when tablet rotates 60° forward or 90°

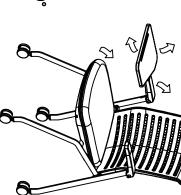

Note: Tablet maximum weight capacity 100lbs.