


Models 55141 / 55142 Modular Training/Utility Table

Parts Listing



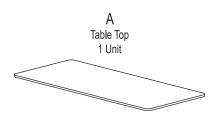

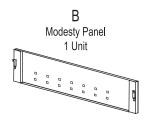








Safety Knobs 2 Units







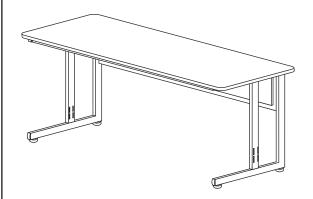


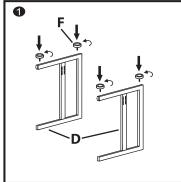

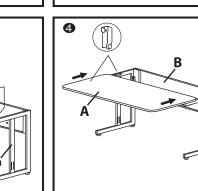

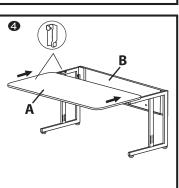

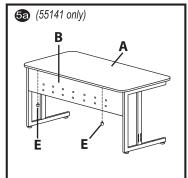

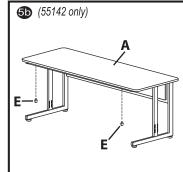

Assembly Instructions

No Tools Required

For easy assembly, match same color stickers

- Step 1: Insert Leveling Glides (F) into base of both Legs (D).
- Step 2: Attach Modesty Panel (B) to Legs (D) using metal interlocking system to secure. Match same color stickers on interior of Legs (D) with stickers on inside of Modesty Panel (B). You will notice the Legs (D) starting to dip in a little bit which is forced by the interlocking mechanisms.
- **Step 3:** Attach Support Beam (C) to Legs (D) using interlocking system. This will straighten legs.
 - Step 4: Place Table Top (A) on top of built base. Slide Table Top (A) toward Modesty Panel (B) so interlocking mechanism locks in on one side. Repeat on other side making sure it locks itself securely.
 - Step 5a: (Model 55141 only) Screw Safety Knobs (E) into Table Top (A) behind Modesty Panel (B).
 - Step 5b: (Model 55142 only) Screw Safety Knobs (E) into underside of Table Top (A) behind Support Beam (C).



CAUTION:

3

- 1. Do not use this desk as a step ladder.
- 2. Check for loose knobs and tighten them every 6 months.



161 Tradition Trail, Holly Springs, NC, 27540 800-520-7471 (voice) 919-362-4765 (fax) 919-303-6389 (voice) www.ofminc.com support@ofminc.com