

TROUBLESHOOTING/HEATER STORAGE

overheat temperature is reached within the heater.

WARNING: the shut-off system does not provide overheat protection for, or prevent a fire resulting from, combustibles placed in close proximity to the heater. Combustibles placed within 3 feet (0.9m) of the heater will ignite and cause a fire, and may cause death.

If the heater shuts off, the user will need to reset the heater by:

- 1) Stand the heater upright and turn the heat control to the OFF position.
- 2) Unplug the unit and allow 30 minutes for the heater to cool down.
- 3) Plug in and operate normally.
- 4) If heater does not work normally, repeat steps 1-3 to allow sufficient time for the thermostat to cool down.

Tip Over Protection (if equipped)

When the unit is accidentally knocked over, it will instantly shut off. The unit may also shut off if it is moved or bumped. To reset, simply place the heater in an upright position and it will operate normally.

NOTE: If unit does not turn on when placed in the upright position, turn the heat control to OFF and then back to ON and heater will resume operation.

HEATER STORAGE

1. Store heater unit with cord in a cool, dry location.
2. We recommend storing the unit and cord in the original package.

Troubleshooting for your Heater		
Trouble	Probable Cause	Solution
• Heater Does Not Turn On.	<ul style="list-style-type: none"> Manual user reset is activated. Not plugged in properly. Electrical outlet does not hold plug in securely. Thermostat set too low. Obstruction causing the heater not to operate. Circuit breaker trips. 	<ul style="list-style-type: none"> Follow reset instructions listed in this manual. Ensure plug is properly inserted. Make sure electrical outlet and circuit breaker are working. Have outlet replaced by a licensed electrician. Press the Up Button to select the highest temperature setting. Unplug the heater and remove all obstructions. Position your heater 36 inches (91cm) away from all objects. Make sure no other high wattage appliances are operating on the same circuit and reset breaker if needed.
• Not Enough Heat.	<ul style="list-style-type: none"> Thermostat set too low. 	<ul style="list-style-type: none"> Press the Up Button to the highest temperature setting.
• Heater Cycles ON and OFF Frequently.	<ul style="list-style-type: none"> The thermostat automatically turns the heater on and off to maintain selected comfort level. 	<ul style="list-style-type: none"> To make this occur less frequently press the Up Button to the highest setting.
• Remote Does not work.	<ul style="list-style-type: none"> Battery low. Distance too far. Control Panel Display dirty. 	<ul style="list-style-type: none"> Change battery (2 AAA batteries). Remote works up to 20 feet (6m). Be sure to point remote at control panel on heater and there are no obstructions. Make sure display panel is clean.

TROUBLESHOOTING

Troubleshooting for your Heater		
Trouble	Probable Cause	Solution
• Heater is Blowing Cold Air.	<ul style="list-style-type: none"> When the heater is in Thermostat Mode and reaches the set temperature it will automatically perform a 60 second cool down (blowing cold air) to ensure thermostat accuracy. The Power Light will flash during the cool down period. Power Button may have been pressed to turn off the heater. 	<ul style="list-style-type: none"> Raise the temperature higher. Press the Power Button to turn on the heater.
• Fan Speed Doesn't Change.	<ul style="list-style-type: none"> Eco-Smart™ controls the heat output of the heater and not the fan speed. Fan runs at the same speed on all settings. 	<ul style="list-style-type: none"> Press the Up Button to the highest temperature setting for maximum heat output.
• Unexpected Noise.	<ul style="list-style-type: none"> You may hear a popping or crackling sound as the heater heats up. This is normal and safe operation. Once the heater heats up, the crackling sound will go away. 	<ul style="list-style-type: none"> If the noise persists, visit our website at www.holmesproducts.com.
• Unexpected Smell.	<ul style="list-style-type: none"> There may be an odor or vapor coming from the heater the first time you use it or after prolonged or seasonal storage. 	<ul style="list-style-type: none"> This is normal and is the result of dust or other debris accumulating on the heating element. Make sure the heater is in a well ventilated area and continue running until the odor or vapor goes away.

If you have any questions regarding your product or would like to learn more about other Holmes® products, please visit our website at www.holmesproducts.com. For inquiries regarding recycling and proper disposal of this product, please contact your local waste management facility.

© 2016 Sunbeam Products, Inc. doing business as Jarden Consumer Solutions. All Rights Reserved.
Distributed by Sunbeam Products, Inc. doing business as Jarden Consumer Solutions, Boca Raton, Florida 33431.

181411 Rev. A
GCDS-HOL45903-JC

HRH8005_16EM1

Printed In China

WARRANTY INFORMATION

3 YEAR LIMITED WARRANTY

Sunbeam Products, Inc. doing business as Jarden Consumer Solutions or if in Canada, Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions (collectively "JCS") warrants that for a period of three years from the date of purchase, this product will be free from defects in material and workmanship. JCS, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty. Do NOT attempt to repair or adjust any electrical or mechanical functions on this product. Doing so will void this warranty. This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. JCS dealers, service centers, or retail stores selling JCS products do not have the right to alter, modify or any way change the terms and conditions of this warranty.

This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than JCS or an authorized JCS service center. Further, the warranty does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes.

What are the limits on JCS's Liability?

JCS shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory warranty or condition.

Except to the extent prohibited by applicable law, any implied warranty or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty.

JCS disclaims all other warranties, conditions or representations, express, implied, statutory or otherwise.

JCS shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential or similar damages or loss of profits, or for any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party.

Some provinces, states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights that vary from province to province, state to state or jurisdiction to jurisdiction.

How to Obtain Warranty Service

In the U.S.A.

If you have any question regarding this warranty or would like to obtain warranty service, please visit our website at www.holmesproducts.com or direct your correspondences to ATTN: Holmes, Jarden Consumer Solutions, PO Box 3900, Peoria IL 61614. Please do not return product to this address. The PO Box listed can only receive letters or envelopes.

In Canada

If you have any question regarding this warranty or would like to obtain warranty service, please visit our website at www.holmesproducts.com or direct your correspondences to ATTN: Holmes, Jarden Consumer Solutions, PO Box 3900, Peoria IL 61614. Please do not return product to this address. The PO Box listed can only receive letters or envelopes.

In the U.S.A., this warranty is offered by Sunbeam Products, Inc. doing business as Jarden Consumer Solutions located in Jarden Consumer Solutions, PO Box 3900, Peoria IL 61614. In Canada, this warranty is offered by Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions, located at 20 B Hereford Street, Brampton, Ontario L6Y 0M1. If you have any other problem or claim in connection with this product, please write our Consumer Service Department. **PLEASE DO NOT RETURN THIS PRODUCT TO ANY OF THESE ADDRESSES OR TO THE PLACE OF PURCHASE.**

Holmes®

Owner's Guide
HRH8005A



Holmes® Console Heater

PLEASE READ AND SAVE THESE IMPORTANT INSTRUCTIONS

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons. Failure to follow these warnings will cause death, personal injury and/or property damage:

1. Read all instructions before using this heater.
2. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. If provided, use handles when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9m) from the front of the heater and keep them away from the sides and rear. Failure to keep combustibles at least 3 feet away from the heater will cause a fire. Never place any object such that it can fall within 3 feet of heater.
3. This appliance is not to be used by children or by persons with reduced physical, sensory or mental capabilities.
4. Extreme caution is necessary when any heater is used near children. Children should not play with the appliance.
5. Always unplug heater when not in use.
6. Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Discard heater, or return to authorized service facility for examination and/or repair. Do not attempt to replace or splice a damaged cord.
7. Do not use outdoors.
8. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
9. To disconnect heater, turn controls to off, then remove plug from outlet, pulling by the plug, not the cord.
10. If your heater comes with a grounded plug, connect to properly grounded outlets only.
11. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an


- electric shock, fire, and/or damage to the heater.
12. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
 13. Stop use of the heater if it has arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.
 14. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
 15. Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip)..
 16. Models without thermostat control: This heater is not equipped with a device to control the room temperature. Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
 17. Never use while sleeping.
 18. Do not use with a programmer, timer, wireless plug adapter or outlet that allows control remotely, or connect to a circuit that is regularly switched on and off by the utility.
 19. This appliance has no user serviceable parts. Do not attempt to repair or adjust any electrical or mechanical functions. Doing so may cause an electric shock, fire and/or cause injuries, and void your warranty. All servicing should be performed by qualified personnel only.
 20. Discontinue use if plug or outlet is hot. Contact a qualified electrician to inspect and replace the outlet if plug or outlet is hot to touch.
 21. Do not place the heater near a bed because objects such as pillows, blankets and the like can fall off the bed and be ignited by the heater.
 22. Do not plug in more than one heater per outlet. Never plug heater into an outlet that also contains a light socket. Never exceed more than one heater per panel circuit breaker / fuse. Never allow the heat from the heater to point towards an outlet.

IMPORTANT SAFEGUARDS

23. This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate heater where it may fall into a bathtub or other water container.
24. Do not use this heater in the immediate surroundings of a bath, a shower, a swimming pool, or any other wet location.


SAVE THESE INSTRUCTIONS HOUSEHOLD USE ONLY

North American models with polarized plugs:



This appliance has a polarized plug, (one blade is wider than the other). As a safety feature to reduce the risk of electrical shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature or modify the plug in any way. If the plug fits loosely into the AC outlet or if the AC outlet feels warm do not use that outlet.

North American models with grounded plugs:

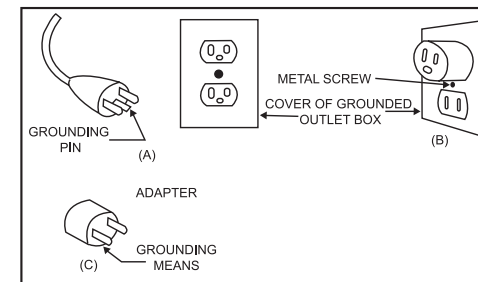

This heater is for use on 120 volts. The cord has a plug as shown in the figure below. An adapter as shown at C is available for connecting three-blade grounding-type plugs to two-slot receptacles. The green grounding lug extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box. The adapter should not be used if a three-slot grounded receptacle is available.

FEATURES - OPERATIONS

TECHNICAL SPECIFICATIONS

- Amps: 12.5
- Wattage: 1500W (+5% -10%)
- Working Voltage: 120V AC/60 Hz

REMOTE CONTROL

Your heater comes with a remote control, unpack the remote control from box. This unit requires 2 AAA batteries, 1.5V (not included). Please note this remote control will not work through walls. Remove battery before discarding the remote.

Battery Replacement

- a) Remove battery cover from remote control.
- b) Remove old batteries from the remote control.
- c) Insert two new batteries, pressing them firmly into their slot.
- d) Replace the battery cover.

NOTES:

- Replace all batteries of a set at the same time.
- Being careful not to bend or damage the contact spring, clean the battery contacts and devices' contacts prior to installing the batteries.
- Remove the batteries from the equipment when it is not being used for an extended period of time.
- Remove the used batteries promptly.
- Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Do not discard used batteries into household trash containers. Contact your local government for disposal or recycling practices in your area.

FCC STATEMENT

Potential for Radio/Television interference

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This product has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. The product generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that the interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the product on or off, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the product and the receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

OPERATING INSTRUCTIONS

NOTE: This unit is for FLOOR USE ONLY.

1. Carefully remove your heater from the box. Please save the carton for off-season storage.
2. Make sure the unit is OFF before plugging the heater into the outlet.
3. Avoid overloading your circuit by not using other high wattage appliances in the same outlet. At 1500 Watts, this unit draws 12.5 Amps.
4. Plug the heater into a 120V AC electrical outlet. Once plugged in, the Power Light will illuminate.
5. Press the Power Button (⏻) on the control panel or remote control to start operation. The heater will run at default setting with 5 temperature indicator lights and the Power Light illuminated.

FEATURES - OPERATIONS CLEANING / MAINTENANCE

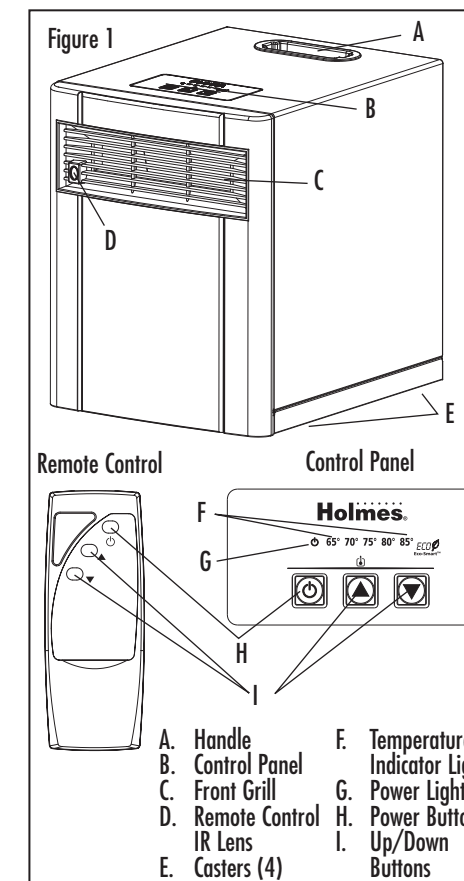

Thermostat Control

Your heater is equipped with a digital thermostat that allows you to set your heater to a precise comfort level (65°F-85°F) by pressing either Up (▲) or Down (▼) button to activate the digital thermostat mode. Press the Up/Down buttons on the control panel or remote control to select your desired temperature level. The higher temperature is selected, the more temperature indicator lights will illuminate. When you continuously press the Up button, all temperature lights will illuminate to indicate the maximum temperature (85°F) is selected. When the preset temperature is reached, the heater will cool down by blowing cool air for 60 seconds, the power light will flash during the cool down period, and then the heater will shut off. When the room temperature drops below the preset temperature, the heater will automatically turn on again to maintain the preset temperature level. **NOTE:** It is normal for the heater to cycle ON and OFF as it maintains the preset temperature. To prevent the unit from cycling, you need to change the thermostat setting. The digital thermostat has memory; it will remember the last temperature setting before the heater is turned off. However, if the heater is unplugged, the digital thermostat will no longer remember the previous temperature setting. You will need to reset the digital thermostat if the heater is unplugged.

CLEANING/MAINTENANCE

Always unplug the heater before cleaning and allow the heater to cool down.

1. Clean the unit with a soft cloth moistened with a mild soap solution.
2. NEVER use abrasive or flammable solvents to clean the unit.
3. After cleaning, be sure to completely dry the unit with a cloth or towel. **TIP:** Over time, dust may accumulate on the front grills. This can be removed by wiping the unit with a damp cloth.

Eco-Smart™ setting

Press the Power Button (⏻) to activate the Eco-Smart™ setting, the green light will be illuminated. The heater will now cycle between high and low temperatures to provide heat.

To shut off the heater, press the Power Button (⏻) again until all temperature lights are off.

NOTE: The Power Light will remain illuminated while unit is plugged in.

SHUT-OFF AND TIP OVER PROTECTION

This heater is equipped with a shut-off system that may require the user to reset the heater if a potential internal